

DT-3300 Diagnostic Tester

Software for Passenger Cars

1st Edition March 2016



Japan Venture Incorporated

TABLE OF CONTENTS

Table of Diagnostic Software for Passenger Cars

1. Toyota Diagnostic Software (Ver7.8*)	
1) List of Specific Vehicle Systems -----	1
2) List of Active Test Functions -----	2 5
3) List of Work Support Functions -----	2 9
2. Nissan Diagnostic Software (Ver5.2*)	
1) List of Specific Vehicle Systems -----	3 1
2) List of Active Test Functions -----	4 8
3) List of Work Support Functions -----	4 9
3. Honda Diagnostic Software (Ver6.1*)	
1) List of Specific Vehicle Systems -----	5 2
2) List of Active Test Functions -----	5 9
3) List of Work Support Functions -----	6 0
4. Mazda Diagnostic Software (Ver4.0*)	
1) List of Specific Vehicle Systems -----	6 1
5. Subaru Diagnostic Software (Ver5.0*)	
1) List of Specific Vehicle Systems -----	7 0
2) List of Active Test Functions -----	7 2
3) List of Work Support Functions -----	7 3
6. Mitsubishi Diagnostic Software (Ver5.0*)	
1) List of Specific Vehicle Systems -----	7 4
2) List of Active Test Functions -----	7 9
3) List of Work Support Functions -----	8 1
7. Suzuki Diagnostic Software (Ver5.7*)	
1) List of Specific Vehicle Systems -----	8 5
2) List of Active Test Functions -----	8 9
3) List of Work Support Functions -----	9 0
8. Daihatsu Diagnostic Software (Ver7.2*)	
1) List of Specific Vehicle Systems -----	9 2
2) List of Active Test Functions -----	9 6
3) List of Work Support Functions -----	9 8

9. BENZ Diagnostic Software (Ver1.0*)	
1) List of Specific Vehicle Systems -----	1 0 0
2) List of Work Support Functions -----	1 0 2
10. BMW Diagnostic Software (Ver1.0*)	
1) List of Specific Vehicle Systems -----	1 0 3
2) List of Work Support Functions -----	1 0 5
11. AUDI Diagnostic Software (Ver1.0*)	
1) List of Specific Vehicle Systems -----	1 0 6
2) List of Work Support Functions -----	1 1 2
12. VW Diagnostic Software (Ver1.0*)	
1) List of Specific Vehicle Systems -----	1 1 3
2) List of Work Support Functions -----	1 2 0
13. MINI Diagnostic Software (Ver1.0*)	
1) List of Specific Vehicle Systems -----	1 2 1
2) List of Work Support Functions -----	1 2 2
14. VOLVO Diagnostic Software (Ver1.0*)	
1) List of Specific Vehicle Systems -----	1 2 3
2) List of Work Support Functions -----	1 2 6

ATTENTION

1. All of the vehicle that has been described has not been checked with actual vehicles. Please fill-in the system name in the diagnostics inspection certificate for those vehicles that do not communicate, and send the certificate by fax to the company.
2. Active test in the list of vehicle type/model, work support number is in accordance with the item number of each of the function table.

1. Toyota Diagnostic Software (Ver7.8*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPOR	COUPLER								
			JP CALENDAR	WESTRN CAL							COM	EXCL							
bB (Daihatsu Coo OEM)	NCP3# TYPE	2NZ-FE 1NZ-FE	H12.02	00.02	TCCS	●	●	●			●								
			~	~	ECT	●		●											
			H17.11	05.11	ABS	●		●											
					SRS	●		●											
iQ	KGI1# TYPE NGJ1# TYPE	1KR-FE 1NR-FE	H20.11	08.11	TCCS	●	●	●	19,39,43,55,63, 70,71,72,102, 103,119		●								
			~	~	Stop&Start ABS/VSC	●	●	●	2,3,6,9,10,11 1,2,3,39,57,60,66, 74	1,2,3 1									
					EPS	●		●											
					MAIN BODY	●		●	11,12,13,21										
ist	NCP6# TYPE	2NZ-FE 1NZ-FE	H14.05	02.05	TCCS	●	●	●			●								
			~	~	ABS/VSC	●		●											
			H19.06	07.06	SRS	●		●											
					MAIN BODY	●		●											
	ZSP11 TYPE NCP11 TYPE	2ZR-FE 1NZ-FE	H19.07 ~	07.07 ~	TCCS	●	●	●	3,19,39,43,45,55, 56,63,70,71,72, 102,103,107,127		●								
					ECT	●		●		2									
					ABS/VSC	●	●	●	1,2,3,66,74	4									
					EPS	●		●											
					SRS	●		●											
					MAIN BODY	●		●											
					COLLATION	●		●	1,2,4,5,8,11,12,16	-									
					METER	●		●	1,2,4,5,6										
AIRCON	●		●	15,18,20,21,22, 23,27															
MR-S	ZZW30	1ZZ-FE	H11.10	99.12	TCCS	●		●			●								
			~	~	ABS	●		●											
			H19.04	07.04	SRS	●		●											
					MAIN BODY	●		●											
RAV4	ZCA2# TYPE	1ZZ-FE	H12.05	00.05	TCCS	●		●			●								
			~	~	ABS	●		●											
			H17.10	05.10	SRS	●		●											
					MAIN BODY	●		●											
	ACA20W ACA21W	1AZ-FSE	H12.05 ~	00.05 ~	TCCS	●		●			●								
					ABS	●		●											
					SRS	●		●											
					MAIN BODY	●		●											
	ACA3#W TYPE	2AZ-FE	H17.11 ~	05.11 ~	TCCS	●	●	●	3,39,43,45,55,56, 70,71,72,102, 103,107,119,127		●								
					ABS/VSC	●	●	●	1,2,3,39,57,60,64, 66,74	4									
					EPS	●		●		-									
					SRS	●		●											
SAI	AZK10 (HV)	2AZ-FXE	H21.12 ~	09.12 ~	TCCS	●	●	●	39,43,45,55,63, 69,72,102,103, 119		●								
					HV	●	●	●	4,6,7,8,9										
					ABS/VSC	●	●	●	1,7,10,11,34,39, 40,52~54,57,61 65,70,71,75,80	4									
					EPS	●		●		2									
					MAIN BODY	●		●		-									
					SRS	●		●		-									
					AIRCON	●		●	15~23										
					SEAT MOTOR	●		●	1										
					METER	●		●	1~8										
					COLLATION	●		●	1,2,12										
					WILL Vi VS CYPHA	NCP19 NZE12# TYPE	2NZ-FE 1NZ-FE 1ZZ-GE 2ZZ-GE	H12.01	00.01	TCCS			●		●			●	
								~	~	ABS			●		●				
H16.04	04.04	MAIN BODY	●					●											
		SRS	●					●											
NCP7# TYPE	2NZ-FE 1NZ-FE	H14.10 ~	02.10 ~	TCCS		●		●			●								
				ABS		●		●											
				EPS		●		●											
				MAIN BODY		●		●											

1. Toyota Diagnostic Software (Ver7.8*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSP	ACTIVE TEST	WORK SUPPOR	COUPLER						
			JP CALENDAR	WESTRN CAL							COM	EXCL					
					SRS	●		●									
					AIRCON	●		●									
ISIS	ZGM1# TYPE ZNM1# TYPE ANM1# TYPE	2ZR-FAE 3ZR-FAE 1ZZ-FE 1AZ-FSE	H16.09 ~	04.09 ~	TCCS	●	●	●	2,19,39,45,55,63, 72,119	-	●						
					ABS/VSC	●	●	●	1,2,3,66,74	10							
					EPS	●		●	-	1							
					MAIN BODY	●		●									
					AIRCON	●		●									
					METER	●		●	1~6								
					COLLATION	●		●	1,2,4,5,8,9,10,11, 12,16	-							
AQUA	NHP10	1NZ-FXE	H23.12 ~	11.12 ~	TCCS	●	●	●	19,39,43,45,63, 70,71,72,102,103, 106,107,119		●						
					HV	●	●	●	4,6,7,8,9								
					ABS/VSC	●	●	●	1,2,9,10,17,25,30, 31,36,53,56,60, 64,69,70,73,74, 77,79	1,2,3,4,7, 8							
					EPS	●		●	-	2							
					MAIN BODY	●		●	3,4,10,11,12,14, 15,16,18,21,22,								
					SRS	●		●	-	-							
					AIRCON	●		●	15~21,23	1							
					SEAT MOTOR	●		●	1	-							
					METER	●		●	1,2,4,5,6,8	-							
					COLLATION	●		●	2,17,20,21	-							
					PWR SUPPLY	●		●	1	1							
					AVALON	MCX10	1MZ-FE	H08.10 ~ H12.03	96.10 ~ 00.03	TCCS	●		●			●	
										ABS	●		●				
SRS	●		●														
AVENSIS	AZT25# TYPE	1AZ-FSE 2AZ-FSE	H15.10 ~ H22.02	03.10 ~ 10.02	TCCS	●	●	●	23,39,45,55,63, 72,119		●						
					ABS/VSC	●	●	●									
					SRS	●		●									
					MAIN BODY	●		●									
					COLLATION	●		●									
	ZRT27# TYPE	1ZR-FAE 2ZR-FAE 3ZR-FAE	H23.07 ~	11.07 ~	TCCS	●	●	●	39,43,45,70,71, 72,87,102,103, 107,119,121,		●						
					ABS/VSC	●	●	●	1,2,3,39,60,65,74	1							
					EPS	●		●	-	1							
					MAIN BODY	●		●									
					CHRG CNTRL	●		●	1								
ALLION	AZT24# TYPE NZT24# TYPE ZZT24# TYPE	1AZ-FSE 1NZ-FE 1ZZ-FE	H13.12 ~ H19.05	01.02 ~ 07.05	TCCS	●	●	●	23,39,45,55,63, 72,119	-	●						
					ABS/VSC	●	●	●									
					SRS	●		●									
					MAIN BODY	●		●									
					COLLATION	●		●	2,12	-							
	NZT26# TYPE ZRT26# TYPE	1NZ-FE 2ZR-FE 2ZR-FAE 3ZR-FAE	H19.06 ~	07.06 ~	TCCS	●	●	●	3,39,45,55,56,63, 70,71,72,74,102, 103,107,119,121	-	●						
					Stop&Start	●	●	●	2,3,6,9,10,11	1,2,3							
					ABS/VSC	●	●	●	1,2,3,39,60,65,74	1							
					EPS	●		●	-	1,2							
					MAIN BODY	●		●									
					SRS	●		●	-	-							
					AIRCON	●		●	15,20,21,22,27	-							
					METER	●		●	1~7	-							
					COLLATION	●		●	2,12	-							
					ARISTO	JZS16# TYPE	2JZ-GE 2JZ-GTE	H09.08 ~ H16.11	97.08 ~ 04.11	TCCS	●		●			●	
										ABS	●		●				
										SRS	●		●				
MAIN BODY	●		●														
ALTEZZA	GXE10 TYPE SXE10 TYPE JCE10 TYPE	1G-FE 3S-GE 2JZ-GE	H10.10 ~ H17.07	98.10 ~ 05.07						TCCS	●		●			●	
										ABS	●		●				
										SRS	●		●				
					MAIN BODY	●		●									
ALPHARD G V	ANH1# TYPE MNH1# TYPE	2AZ-FE 1MZ-FE	H14.05 ~ H20.04	02.05 ~ 08.04	TCCS	●	●	●	2,39,43,44,45,55, 63,87,88	-	●						
					ABS/VSC	●		●	-	-							
					SRS	●		●	-	-							
					MAIN BODY	●		●	-	-							
	ANH2# TYPE GGH2# TYPE	2AZ-FE 2GR-FE	H20.05 ~	08.05 ~	TCCS	●	●	●	2,39,43,45,55,56, 63,70,71,72,102,	-							

1. Toyota Diagnostic Software (Ver7.8*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSP	ACTIVE TEST	WORK SUPPOR	COUPLER					
			JP CALENDAR	WESTRN CAL							COM	EXCL				
									103,107,119,127	-						
					ECT	●		●	1,2,3,4	-						
					EPS	●		●	-	1,2						
					ABS/VSC	●		●	1,2,3,39,57,60,65,74	10						
					MAIN BODY	●		●	-	-						
					SRS	●		●	-	-						
					AIRCON	●		●	15,20,21,22,27	-						
					SEAT MOTOR	●		●	1	-						
					METER	●		●	1~7	-						
					COLLATION	●		●	1,2,4,5,8,9,10,11,12,16	-						
					AFS	●		●	1~6	-						
ALPHARD HYBRID	ATH10 TYPE (HV)	2AZ-FXE	H14.05 ~ H20.04	02.05 ~ 08.04	TCCS	●	●	●				●				
					HV	●		●								
					EPS	●		●								
					ABS/VSC	●		●								
					MAIN BODY	●		●								
					SRS	●		●								
	ATH20 TYPE (HV)	2AZ-FXE	H20.05 ~	08.05 ~	TCCS	●	●	●		39,55,63,70,71,72,102,103,107,119	-		●			
					HV	●	●	●		4,5,6,7,8,9						
					ABS/VSC	●	●	●		1,2,3,11,14,16,35-39,41,44,46,47,57,61,62,65,68,70,71,74,76,78-81	1,2,4					
					EPS	●		●		-	1,2					
					MAIN BODY	●		●		-	-					
					SRS	●		●		-	-					
					AIRCON	●		●		1,17,18,20~23	-					
					SEAT MOTOR	●		●		1	-					
					METER	●		●		1~8	-					
					COLLATION	●		●		1,2,4,5,8,9,10,11,12,16	-					
					AFS	●		●		1~6	-					
					AYH3# (HV)	2AZ-FXE	H27.01 ~	15.01 ~	TCCS	●	●	●		19,39,43,45,55,69,73,102,103,107,119	-	
HV	●	●	●						4,6,7,8,9	-						
ABS/VSC	●	●	●						1,5,6,10,11,14,16,20,35,36-39,41-44,46,47,55,57,59,61,62,65,68,70,71,74,75,76,80,81	1,2,4						
EPS	●		●						-	2						
MAIN BODY	●		●						-	-						
SRS	●		●						-	-						
AIRCON	●		●						1,17,18,20~23	-						
SEAT MOTOR	●		●						1	-						
METER	●		●						1~8	-						
COLLATION	●		●						2,5,6,7,15	-						
AFS	●		●						1~6	-						
ALLEX COROLLA RUNX	NZE12# TYPE ZZE12# TYPE	1NZ-FE 1ZZ-FE 2ZZ-GE	H13.01 ~ H18.10	01.01 ~ 06.10					TCCS	●	●	●				●
					ABS/VSC	●	●	●								
					EPS	●		●								
					MAIN BODY	●		●								
					SRS	●		●								
					AIRCON	●		●								
IPSUM	ACM2# TYPE	2AZ-FE	H13.05 ~ H21.12	01.05 ~ 09.12	TCCS	●		●				●				
					ABS/VSC	●		●								
					MAIN BODY	●		●								
					SRS	●		●								
VANGUARD	ACA33W	2AZ-FE	H19.08 ~	07.08 ~	TCCS	●	●	●	3,39,43,45,55,56,70,71,102,103,107,119,127			●				
					ABS/VSC	●	●	●	1,2,3,57,60,65,66,74	4,10						
					EPS	●		●	-	-						
					MAIN BODY	●		●		-	-					
					SRS	●		●		-	-					
					AIRCON	●		●		15,18,20-23	-					
					COLLATION	●		●		1,2,4,5,8,9,10,11,12,16	-					
					METER	●		●		1~7	-					
IPA	●		●		-	-										

1. Toyota Diagnostic Software (Ver7.8*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPOR	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
WISH	ANE1# TYPE ZNE1# TYPE	1AZ-FSE 1ZZ-FE	H15.04 ~ H21.03	03.04 ~ 09.03	AFS	●		●	1,2		●	
					TCCS	●	●	●	19,39,45,55,63, 119			
					ABS/VSC	●	●	●	-	-		
					EPS	●		●	-	-		
			MAIN BODY	●		●	-	-				
			SRS	●		●	-	-				
			AIRCON	●		●	-	-				
			TCCS	●	●	●	39,43,45,55,63, 69,72,102,103, 107,119,121					
	ZGE2# TYPE	2ZR-FAE 3ZR-FAE	H21.04 ~ ~	09.04 ~ ~	ABS/VSC	●	●	●	1,2,3,39,57,66,74	4,10		
					EPS	●		●	-	-		
					MAIN BODY	●		●	-	-		
					CHRG CNTRL	●		●	1	-		
					SRS	●		●	-	-		
					COLLATION	●		●	2,12	-		
					METER	●		●	1~7	-		
					AIRCON	●		●	15,20,21,22	-		
SEAT MOTOR	●		●	1	-							
VITZ	SCP1# TYPE NCP1# TYPE	1SZ-FE 2SZ-FE 1NZ-FE 2NZ-FE 1NR-FE	H11.01 ~ H17.01	99.01 ~ 05.01	TCCS						●	
					ABS/VSC							
					SRS							
			MAIN BODY									
			AIRCON									
			TCCS	●	●	●	3,10,19,36,37,39, 43,45,55,56,63, 70,71,72,77,81, 82,83,99,102, 103,107,119,128	1,2,3				
	SCP9# TYPE KSP9# TYPE NCP9# TYPE	2SZ-FE 1KR-FE 1NZ-FE 2NZ-FE	H17.02 ~ H22.11	05.02 ~ 10.11	ABS/VSC	●	●	●	1,2,3,21,22,23,24,25 28,29,30,31,66,74	4		
					EPS	●		●		2		
					SRS	●		●		-		
			MAIN BODY	●		●	3,4,11,12	-				
			COLLATION	●		●	2,17,20,21	-				
			AIRCON	●		●	19	1				
	KSP130 NSP13# TYPE NCP131	1NR-FE 1KR-FE	H22.12 ~ ~	10.12 ~ ~	TCCS	●	●	●	8,9,10,19,36,37, 39,43,45,55,63, 70,71,72,77,81, 82,83,99,102, 103,107,119,128	1,2,3		
					Stop&Start	●	●	●	1~11	1,2,3		
					ABS/VSC	●	●	●	1,2,3,21~25, 28~31,66,74	4		
					EPS	●		●		2		
					SRS	●		●		-		
					MAIN BODY	●		●	3,4,11,12	-		
			COLLATION	●		●	2,17,20,21	-				
			AIRCON	●		●	19	1				
			SEAT MOTOR	●		●	1	-				
			METER	●		●	1~6	-				
			CHRG CNTRL	●		●	1	-				
			START CNTRL	●		●	1,2	-				
WINDOM	MCV2# TYPE	1MZ-FE 2MZ-FE	H08.08 ~ H13.07	96.08 ~ 01.07	TCCS	●		●			●	
					ABS/VSC	●		●				
			SRS	●		●						
			MAIN BODY	●		●						
	MCV30 TYPE	1MZ-FE	H13.08 ~ H18.02	01.08 ~ 06.02	TCCS	●		●				
					ABS/VSC	●		●				
					EPS	●		●				
					SRS	●		●				
VELLFIRE	ANH2# TYPE GGH2# TYPE	2AZ-FE 2GR-FE	H20.05 ~ ~	08.05 ~ ~	TCCS	●	●	●	3,43,45,55,56,70, 71,72,102,103, 107,119,127		●	
					ABS/VSC	●	●	●	1,2,3,39,57,65,74	10		
					ECT	●		●	1,2,3,4	1,3		
					EPS	●		●	-	1,2		
					SRS	●		●	-	-		
					MAIN BODY	●		●				
					COLLATION	●		●	1~5,8~12	-		
					AIRCON	●		●	15,18,20~27	-		
					METER	●		●	1~6	-		
					TCCS	●	●	●	39,55,63,71,72, 102,103,107,119			
HV	●	●	●	4,6,7,8,9	-							

1. Toyota Diagnostic Software (Ver7.8*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPOR	COUPLER			
			JP CALENDAR	WESTRN CAL							COM	EXCL		
					ABS/VSC	●	●	●	1,2,3,39,57,65,74	10				
					ECT	●		●	1,2,3,4	1,3				
					EPS	●		●	-	1,2				
					MAIN BODY	●		●	-	-				
					SRS	●		●	-	-				
					AIRCON	●		●	15,18,20~27	-				
					SEAT MOTOR	●		●	1	-				
					METER	●		●	1~7	-				
					COLLATION	●		●	-	-				
					AFS	●		●	1~6	-				
					TCCS	●	●	●	19,39,43,45,55,69,73,102,103,107,119	-			●	
					HV	●	●	●	4,6,7,8,9	-				
					ABS/VSC	●	●	●	1,5,6,10,11,14,16,36~39,41~44,20,46,47,55,57,59,35,61,62,65,68,70,71,74~76,80,81	1,2,4				
					EPS	●		●	-	2				
					MAIN BODY	●		●	-	-				
SRS	●		●	-	-									
AIRCON	●		●	1,19~26	-									
SEAT MOTOR	●		●	1	-									
METER	●		●	1~7	-									
COLLATION	●		●	2,5,6,7,15	-									
AFS	●		●	1~6	-									
VEROSSA	JZX11# TYPE GX11# TYPE	1JZ-FSE 1JZ-GTE 1G-FE	H13.07 ~ H16.04	01.07 ~ 04.04	TCCS	●	●	●			●			
					ABS/VSC	●	●	●						
					EPS	●		●						
					MAIN BODY	●		●						
					SRS	●		●						
					AIRCON	●		●						
VOXY	AZR6# TYPE	1AZ-FSE	H13.11 ~ H19.05	01.11 ~ 07.05	TCCS	●	●	●	19,39,45,63,72,119		●			
					ABS/VSC	●	●	●	1,2,3,66,74	-				
					EPS	●		●	-	-				
					MAIN BODY	●		●	-	-				
					SRS	●		●	-	-				
					AIRCON	●		●	-	-				
	ZRR7# TYPE	3ZR-FAE 3ZR-FE	H22.04 ~ H25.12	07.06 ~ 13.12	TCCS	●	●	●	3,39,43,45,55,56,63,70,71,102,103,107,119,121,127		●			
					ABS/VSC	●	●	●	1,2,3,66,74	-				
					EPS	●		●	-	-				
					MAIN BODY	●		●	-	-				
					SRS	●		●	-	-				
					AIRCON	●		●	15,20~27	-				
	ZRR8# TYPE	3ZR-FAE	H26.01 ~	14.01 ~	TCCS	●	●	●	39,43,45,55,63,69,72,102,103,107,119,121		●			
					ABS/VSC	●	●	●	1,2,3,10,39,55,59,66,74	4,10				
					EPS	●		●	-	2				
MAIN BODY					●		●	-	-					
SRS					●		●	-	-					
AIRCON					●		●	15,20~27	-					
HYBRID	ZWR8# TYPE	2ZR-FXE	H26.01 ~	14.01 ~	TCCS	●	●	●	19,43,45,55,63,71,72,102,103,106,107,119		●			
					HV	●	●	●	4,6,7,8,9	-				
					ABS/VSC	●	●	●	1,2,3,10,39,55,59,66,74	4				
					EPS	●		●	-	2				
					MAIN BODY	●		●	-	-				
					SRS	●		●	-	-				
					AIRCON	●		●	1,15,19~27	-				
					METER	●		●	1~7	-				
					COLLATION	●		●	2,5,15	-				
VOLTZ	ZZE13# TYPE	1ZZ-FE 2ZZ-GE	H14.08 ~ H16.04	02.08 ~ 04.04	TCCS	●	●	●			●			
					ABS/VSC	●	●	●						
					EPS	●		●						
					MAIN BODY	●		●						
					SRS	●		●						
					AIRCON	●		●						
ESTIMA	ACR30W	2AZ-FE	H12.03	00.03	TCCS	●		●			●			

1. Toyota Diagnostic Software (Ver7.8*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSP	ACTIVE TEST	WORK SUPPOR	COUPLER						
			JP CALENDAR	WESTRN CAL							COM	EXCL					
	MCR30W ACR40W MCR40W	1MZ-FE	~ H17.12	~ 05.12	ABS/VSC	●											
					EPS	●		●									
					MAIN BODY	●											
					SRS	●											
	ACR50W GSR50W	2AZ-FE 2GR-FE	H12.03 ~ H17.12	00.03 ~ 05.12	TCCS	●	●	●	3,39,43,45,55, 56,72,102,103, 107,119,127,								
					ABS/VSC	●	●	●	1,2,39,55,57,59, 74	-							
					ECT	●		●	1~4	-							
					EPS	●		●	-	1,2							
					MAIN BODY	●		●		-							
					SRS	●		●		-							
					AIRCON	●		●	18,20-23,25-27	-							
					METER	●		●	1~6	-							
					SEAT MOTOR	●		●	1	-							
					COLLATION	●		●	1-5,8-12	-							
ESTIMA HYBRID	AHR10W	2AZ-FXE	H13.06 ~ H17.12	01.06 ~ 05.12	TCCS	●	●	●				●					
					HV	●	●	●									
					ABS/VSC	●	●	●									
					EPS	●		●									
					MAIN BODY	●		●									
					SRS	●		●									
					AIRCON	●		●									
	AHR20W	2AZ-FXE	H18.06 ~	06.06 ~	TCCS	●	●	●	3,39,43,45,55,56, 63,70,71,72,102, 103,107,119	-			●				
					HV	●	●	●	4,6,7,8,9	-							
					ABS/VSC	●	●	●	1,14,16,35~39 20,41~44,46,47, 57,60,61,62,68, 70,71,75,76,	4							
					ECT	●		●									
					EPS	●		●	-	1,2							
					MAIN BODY	●		●		-							
					SRS	●		●		-							
OPA	ACT10 ZCT1# TYPE	1AZ-FSE 1ZZ-FE	H12.05 ~ H17.08	00.05 ~ 05.08	TCCS	●	●	●				●					
					ABS/VSC	●	●	●									
					EPS	●		●									
					MAIN BODY	●		●									
					SRS	●		●									
					AURIS	NZE15# TYPE ZRE15# TYPE	1NZ-FE 2ZR-FE 2ZR-FAE	H18.10 ~ H24.07	06.10 ~ 12.07	TCCS	●	●	●	3,19,39,43,45,55, 56,70,71,72,102, 103,107,119			●
										ABS/VSC	●	●	●	1,2,3,66,74	1,4		
	EPS	●		●						-	2						
	MAIN BODY	●		●							-						
	SRS	●		●							-						
	AIRCON	●		●						1,2,3,66,74,	-						
	SEAT MOTOR	●		●						1	-						
	NZE181H ZRE186H	1NZ-FE 2ZR-FAE	H24.08 ~	12.08 ~	TCCS	●	●	●	19,39,43,45,55, 63,71,72,102, 103,107,119				●				
					ABS/VSC	●	●	●	1,2,3,55,57,59,65, 74	4							
EPS					●		●	-	1,2								
MAIN BODY					●		●		-								
SRS					●		●		-								
AIRCON					●		●	1,2,3,66,74,	-								
SEAT MOTOR					●		●	1	-								
ORIGIN LIMITED EDITION	JCG17	2JZ-GE	H12.11 ~ H12.11	00.11 ~ 00.11	TCCS	●	●	●				●					
					ABS/VSC	●	●	●									
					SRS	●		●									
					MAIN BODY	●		●									
					GAIA	SXM1# TYPE CXM1# TYPE ACM1# TYPE	3S-FE 3C-TE 1AZ-FSE	H10.05 ~ H16.08	98.05 ~ 04.08	TCCS	●	●	●				●
										ABS/VSC	●	●	●				
										SRS	●		●				

1. Toyota Diagnostic Software (Ver7.8*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPOR	COUPLER		
			JP CALENDAR	WESTRN CAL							COM	EXCL	
CAMRY	SXV2# TYPE MCV2# TYPE	5S-FE 2MZ-FE	H08.12	96.12	MAIN BODY	●		●			●		
			~	~	TCCS	●		●					
			H10.07	98.07	ABS	●							
	ACV30	2AZ-FE	H13.09 ~ H17.12	01.09 ~ 05.12	TCCS	●	●	●				●	
					ABS/VSC	●	●	●					
					EPS	●		●					
					MAIN BODY	●		●					
					SRS	●		●					
					AIRCON	●		●					
	ACV40	2AZ-FE	H18.01 ~ H23.09	06.01 ~ 11.09	TCCS	●	●	●	3,39,43,45,55,56, 70,71,72,102, 103,107,119,127			●	
					ABS/VSC	●	●	●	1,2,3,7,4	-			
					EPS	●		●					
					MAIN BODY	●		●					
					SRS	●		●					
					AIRCON	●		●	15,20~23				
					SEAT MOTOR	●		●	1				
					METER	●		●	1~6				
					COLLATION	●		●	1,2,4,5,8~12				
						●		●					
	AVV50 (HV)	2AR-FXE	H23.09 ~ 11.09	11.09 ~ ~	TCCS	●	●	●	19,39,43,45,55, 63,70,71,72,102, 103,106,107,119			●	
					HV	●	●	●	4,6,7,8,9				
					ABS/VSC	●	●	●	1,2,9,10,17,25,30, 31,36,43,52,53, 56,60,64,69,70 73,74,77,79	1,2,4,7,8			
					EPS	●		●		2			
					MAIN BODY	●		●	1~4,6,9,10~28				
SRS					●		●						
AIRCON					●		●	3,5,15~24	1				
SEAT MOTOR					●		●	1					
METER					●		●	1~8					
COLLATION					●		●	2,15,17,20,21					
PWR SUPPLY					●		●	1	1				
AFS					●		●	1~6					
CARINA					AT21# TYPE ST21# TYPE	5A-FE 7A-FE	H10.08	98.08	TCCS	●			
	~	~	ABS/VSC	●				●					
	H13.11	01.11	SRS	●				●					
	CT21# TYPE	3C-TE	H08.08 ~ H13.11	96.08 ~ 01.11	TCCS	●		●			●		
					ABS/VSC	●		●					
					SRS	●		●					
CALDINA	AT211G CT216G ST210G	7A-FE 3C-TE 3S-FE 3S-GTE	H09.08	97.02	TCCS	●		●			●		
			~	~	ABS/VSC	●		●					
			H14.08	02.08	SRS	●		●					
	ST246W AZT241W ZZT241W	3S-GTE 1AZ-FSE 1ZZ-FE	H14.09 ~ H19.05	02.09 ~ 07.05	TCCS	●	●	●	19,39,45,55,72, 119			●	
					ABS/VSC	●	●	●					
					EPS	●		●					
					MAIN BODY	●		●					
					SRS	●		●					
					AIRCON	●		●					
	バン	CT19# TYPE	5E-FE	H14.11	92.11	TCCS	●		●			●	
				~	~	ABS/VSC	●		●				
				H14.07	02.07	SRS	●		●				
					MAIN BODY	●		●					
COROLLA	CE11# TYPE	3C-E	H10.04	98.04	TCCS	●		●			●		
			~	~	ABS/VSC	●		●					
			H12.07	00.07	SRS	●		●					
					MAIN BODY	●		●					
					AIRCON	●		●					
	CE12# TYPE NZE12# TYPE ZZE12# TYPE	3C-E 2NZ-FE 1ZZ-FE	H12.08 ~ H18.10	00.08 ~ 06.10	TCCS	●		●			●		
					ABS/VSC	●		●					
					EPS	●		●					
					SRS	●		●					
					MAIN BODY	●		●					
COROLLA AXIO	NZE14# TYPE ZRE14# TYPE	1NZ-FE 2ZR-FE 2ZR-FAE	H18.10	06.10	TCCS	●	●	●	3,19,39,43,45,55, 56,63,70,71,72, 102,103,107,119, 127		●		
			~	~	ABS/VSC	●	●	●	1,2,3,5,7,60,66,74	1,10			
			H24.04	12.04	EPS	●		●		2			
					MAIN BODY	●		●					
					SRS	●		●					
					AIRCON	●		●	15,18,20~23				
					COLLATION	●		●	1,2,4,5,8~12,16				

1. Toyota Diagnostic Software (Ver7.8*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPOR	COUPLER					
			JP CALENDAR	WESTRN CAL							COM	EXCL				
COROLLA AXIO HYBRID	NZE16# TYPE NRE16# TYPE	1NZ-FE 2ZR-FAE 2NR-FKE	H24.05 ~	12.05 ~	METER	●		●	1~6							
					SEAT MOTOR	●		●	1							
					IPA	●		●								
					TCCS	●	●	●	3,19,39,43,45,55,56,63,70,71,72,102,103,107,119,127						●	
					ABS/VSC	●	●	●	1,2,3,57,60,66,74	1,10						
					EPS	●		●		2						
					MAIN BODY	●		●								
					SRS	●		●								
					AIRCON	●		●	1,15,18-23							
	COLLATION	●		●	1,2,4,5,8-12,16											
	METER	●		●	1~6											
	SEAT MOTOR	●		●	1											
	AFS	●		●	1,2											
	TCCS	●	●	●	19,39,43,45,55,63,71,72,102,103,106,107,119							●				
	HV	●	●	●	5~9											
	ABS/VSC	●	●	●	1,2,3,34,39,40,45,52~55,57,59	2,4										
	EPS	●		●		2										
	MAIN BODY	●		●												
	SRS	●		●												
AIRCON	●		●	1,15,18~23												
COLLATION	●		●	2,17												
METER	●		●	1~6												
SEAT MOTOR	●		●	1												
COROLLA SPACiO	NZE12# TYPE ZZE12# TYPE	1NZ-FE 1ZZ-FE	H13.05 ~ H19.06	01.05 ~ 07.06	TCCS	●		●					●			
					ABS/VSC	●		●								
					EPS	●		●								
					MAIN BODY	●		●								
SRS	●		●													
AIRCON	●		●													
COROLLA VAN	CE10# TYPE ED10# TYPE	3C-E 4E-FE 5E-FE	H10.04 ~ H14.06	98.04 ~ 02.06	TCCS	●		●						●		
					ABS/VSC	●		●								
					SRS	●		●								
COROLLA FIELDER	CE12# TYPE NZE12# TYPE ZZE12# TYPE	3C-E 1NZ-FE 1ZZ-FE 2ZZ-GE	H12.08 ~ H18.09	00.08 ~ 06.09	TCCS	●	●	●						●		
					ECD	●	●	●								
					ABS/VSC	●	●	●								
					EPS	●		●								
	MAIN BODY	●		●												
	SRS	●		●												
	NZE14# TYPE ZRE14# TYPE	1NZ-FE 2ZR-FAE 2ZR-FE	H18.10 ~ H24.04	06.10 ~ 12.04	TCCS	●	●	●	3,39,43,45,55,56,63,71,72,73,102,103,106,107,119,127						●	
ABS/VSC	●				●	●	1,2,3,57,59,60,66,74	1,4,10								
EPS	●					●		2								
MAIN BODY	●					●										
SRS	●					●										
COLLATION	●					●	1,2,4,5,8~12,16									
METER	●					●	1~6									
SEAT MOTOR	●		●	1												
AFS	●		●	1,2												
COROLLA FIELDER HYBRID	NZE16# TYPE ZRE16# TYPE	1NZ-FE 2ZR-FAE	H23.04 ~	11.04 ~	TCCS	●	●	●	8,9,10,19,36,37,39,43,45,55,57,63,70,71,72,77,81,82,83,99,102,103,107,119,127						●	
					ABS/VSC	●	●	●	1,2,3,21~25,28,29,30,31,34,39,55,59,66,74	4						
					EPS	●		●		1,2						
					MAIN BODY	●		●		3,4,11,12						
					SRS	●		●								
					AIRCON	●		●	1,15,18~23	19						
	SEAT MOTOR	●		●	1~6											
	METER	●		●	1											
	TCCS	●	●	●	19,39,43,45,55,63,71,72,102,103,107,119,							●				
	HV	●	●	●	4~9											
	ABS/VSC	●	●	●	1,2,3,34,40,45,52~55,57,59,65,70,71,74,	1,4										
	EPS	●		●		2										
	MAIN BODY	●		●												

1. Toyota Diagnostic Software (Ver7.8*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPOR	COUPLER							
			JP CALENDAR	WESTRN CAL							COM	EXCL						
					SRS	●		●										
					AIRCON	●		●	1,15,18-23									
					COLLATION	●		●	2,17									
					METER	●		●	1~6									
					SEAT MOTOR	●		●	1									
					AFS	●		●	1,2									
COROLLA RUNX	NZE12# TYPE ZZE12# TYPE	1NZ-FE 1ZZ-FE 2ZZ-GE	H13.01 ~ H18.09	01.01 ~ 06.09	TCCS	●		●				●						
					ABS/VSC	●		●										
					EPS	●		●										
					MAIN BODY	●		●										
					SRS	●		●										
COROLLA RUMION	NZE15# TYPE ZRE15# TYPE	1NZ-FE 2ZR-FAE 2ZR-FE	H19.10 ~	07.10 ~	TCCS	●		●	3,19,39,43,45,55, 56,63,70,71,72, 102,103,119,127			●						
					ABS/VSC	●		●	1,2,3,39,57,66,74	1,4,10								
					EPS	●		●										
					MAIN BODY	●		●										
					SRS	●		●										
					AIRCON	●		●	15,18,20~22,27									
					COLLATION	●		●	1~5,8~12									
					METER	●		●	1~6									
CAMI (Daihatsu Terios OEM)	J10# TYPE	HC-EJ K3-VE K3-VET	H11.05 ~ H18.01	99.05 ~ 06.01								●						
QUICK DELIVERY (Hino OEM)	BCG-XKU	N04C	H18.09 ~	06.09 ~								●						
CROWN ESTATE (Royal)	GS17# TYPE JZS17# TYPE	1JZ-FSE 1JZ-GE 1JZ-GTE 2JZ-FSE	H11.09 ~ H19.05	99.09 ~ 07.05	TCCS	●		●				●						
					ABS/VSC	●		●										
					MAIN BODY	●		●										
					SRS	●		●										
ATHLETE (Royal)	GRS18# TYPE	4GR-FSE 3GR-FSE 2GR-FSE	H15.12 ~ H20.01	03.12 ~ 08.01	TCCS	●	●	●	2,3,11,12,13,23, 39,43~46,55,56, 63,72,111~116, 107,119,121,122			●						
					ECT	●		●	1~4	1								
					EPS	●		●										
					ABS/VSC	●	●	●										
					MAIN BODY	●		●										
					AIRCON	●		●										
					COLLATION	●		●	1~14									
					METER	●		●	1~6									
					CROWN HYBRID	GRS20# TYPE	4GR-FSE 3GR-FSE 2GR-FSE	H20.02 ~ H24.11	08.02 ~ 12.11	TCCS	●	●	●	2,3,12,13,23, 39,43~46,55,56, 63,72,111~116, 107,119,121,122			●	
										EPS	●		●		1,2			
ABS/VSC	●	●	●	1,2,3,39,57,60,65, 66,74.						1,4,10								
MAIN BODY	●		●															
AIRCON	●		●	16,20~25,27														
COLLATION	●		●	1,2,17,18,19														
METER	●		●	1~6														
CROWN HYBRID	GWS20# TYPE	2GR-FSE	H20.02 ~ H24.12	08.02 ~ 12.12						TCCS	●	●	●	11,12,13,19,39, 43,44,45,46,55, 63,70,71,72,102, 103,106,107,111, 112,113,115,116, 119,121,122			●	
					ABS	●	●	●	11,12,13,19,39, 43,45,52~56, 58,60,64,69,70, 73,74,77,79	1,2,3,4,7, 8								
					EPS	●		●		1,2								
					MAIN BODY	●		●	2,3,4,6,9,10~22									
					SRS	●		●										
					AIRCON	●		●	15~23	1								
					SEAT MOTOR	●		●	1									
					METER	●		●	1~8									
					COLLATION	●		●	2,15,17,20,21									
					PWR SUPPLY	●		●	1	1								

1. Toyota Diagnostic Software (Ver7.8*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSP	ACTIVE TEST	WORK SUPPOR	COUPLER						
			JP CALENDAR	WESTRN CAL							COM	EXCL					
									121,122,128,136								
					HV	●	●	●	1,2,4,6,7,8,9	-							
					ABS/VSC	●	●	●	1,10,11,14,16,20,35~39,41~44,46,47,57,60,61,65,68,70,71,74~81	1,4,10							
					EPS	●		●	-	2							
					MAIN BODY	●		●	2,3,4,6,9~22								
					SRS	●		●									
					AIRCON	●		●	15~21	1							
					SEAT MOTOR	●		●	1								
					METER	●		●	1~7								
					COLLATION	●		●	1,2,17~20								
					PWR SUPPLY	●		●	1	1							
					AFS	●		●	1~6								
					AWS21# TYPE (HV)	2AR-FSE	H24.12 ~	12.12 ~	TCCS	●	●	●	11~13,19,39,43,45,55,63,70,71,72,102,103,106,107,111~114,119			●	
									HV	●	●	●	4,6,7,8,9				
ABS/VSC	●	●	●	1,2,9,10,17,25,30,31,36,43,52,53,56,60,64,69,70,73,74,77,79					1,2,3,4,7,8								
EPS	●		●	-					2								
MAIN BODY	●		●	2,3,4,6,9~22													
SRS	●		●														
AIRCON	●		●	15~23					1								
SEAT MOTOR	●		●	1													
METER	●		●	1~8													
COLLATION	●		●	2,15,17,20,21													
PWR SUPPLY	●		●	1					1								
AFS	●		●	1~6													
CROWN COMFORT	YXS1# TYPE	3Y-PE	H13.08 ~ H20.07	01.08 ~ 08.07					TCCS	●	●	●				●	
									ABS/VSC	●	●	●					
					SRS	●		●									
	TSS1# TYPE	1TR-FPE	H20.08 ~ H24.01	08.08 ~ 12.01	TCCS	●	●	●	15,23,43,55,57,62,70,71,77,79,81,95,102,103,119,129,130				●				
					Stop&Go	●	●	●	1~5	1,2,3							
					ABS/VSC	●	●	●	2,21~24,28,29,30,31,48,49,66	4,5,10							
					SRS	●		●									
					METER	●		●	1,2,5,6,7								
					TCCS	●	●	●	15,23,39,43,45,55,57,62,70,71,72,77,79,81,95,99,102,103,119,129,130								
	TSS1# TYPE	1TR-FPE	H24.01 ~	12.01 ~	Stop&Start	●	●	●	1~11	1,2,3			●				
					ABS/VSC	●	●	●	2,21~24,28~31,48,49,66	4,5,10							
					SRS	●		●									
					METER	●		●	1,2,5,6,7								
					TCCS	●	●	●									
CROWN SEDAN	GS15# Sys JZS15# Sys	1G-FE 1JZ-GE 2JZ-GE	H08.09 ~ H13.08	96.09 ~ 01.08	TCCS	●		●				●					
					ABS/VSC	●		●									
					SRS	●		●									
CROWN MAJESTA	JZS17# TYPE UZS17# TYPE	2JZ-FSE 1UZ-FE	H11.09 ~ H16.06	99.09 ~ 04.06	TCCS	●		●				●					
					ABS/VSC	●		●									
					SRS	●		●									
	UZS18# TYPE	3UZ-FE	H16.07 ~ H21.02	04.07 ~ 09.02	TCCS	●	●	●	39,43,44,45,46,55,63,70,71,72,102,103,119				●				
					ECT	●		●	1,3,4	1							
					ABS/VSC	●	●	●	1,2,3,10,39,57,60,65,66,74	-							
					EPS	●		●	-	-							
					MAIN BODY	●		●	1,2,4,5,11,13,20,21,25								
					SRS	●		●									
					AIRCON	●		●	15~23	1							
URS206 UZS207	1UR-FSE 3UZ-FE	H21.03 ~	09.03 ~	TCCS	●	●	●	39,43,44,45,46,55,63,70,71,72,				●					

1. Toyota Diagnostic Software (Ver7.8*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPOR	COUPLER				
			JP CALENDAR	WESTRN CAL							COM	EXCL			
CROWN HYBRID			H25.08	13.08					102,103,119						
					ECT	●		●	1,2,3,4	1					
					ABS/VSC	●	●	●	1,2,3,10,39,57,60,65,66,74	4					
					EPS	●		●	-	-					
					MAIN BODY	●		●	1,2,4,5,11,13,20,21,25						
					SRS	●		●							
					AIRCON	●		●	15~23	1					
					SEAT MOTOR	●		●	1						
					METER	●		●	1,2,3,4						
			COLLATION	●		●	2,15,17,20,21								
			PWR SUPPLY	●		●	1	1							
			GWS214 TYPE AWS215 TYPE	2GR-FXE 2AR-FSE	H25.09 ~	13.09 ~	TCCS	●	●	●	11~13,19,39,43,45,55,63,70~72,102,103,106,107,111~114,119		●		
							HV	●	●	●	4,6,7,8,9	2,3			
							ABS/VSC	●	●	●	1,2,9,10,17,25,30,31,36,43,52,53,56,60,64,69,70,73,74,77,79	1,2,3,4,7,8			
							EPS	●		●		2			
							MAIN BODY	●		●	2,3,4,6,9~22				
							SRS	●		●					
							AIRCON	●		●	15~23	1			
							SEAT MOTOR	●		●	1				
METER	●						●	1~8							
COLLATION	●						●	2,15,17,20,21							
PWR SUPPLY	●		●	1	1										
AFS	●		●	1~6											
CROWN ROYAL	GS17# TYPE JKS17# TYPE JZS17# TYPE	1G-FE 1JZ-FSE 2JZ-FSE 1JZ-GE 2JZ-GE	H11.09 ~	99.09 ~							●				
					H15.11	03.11									
			H15.12	03.12 ~										●	
					H20.01	08.01									
			H20.02	08.02											●
					H24.11	12.11									
			H24.12	12.12											●
			GRANVIA	KCH1# TYPE	1KZ-TE	H11.08 ~	99.08 ~	TCCS	●		●			●	
								ABS/VSC	●		●				
H14.04	02.04	SRS				●		●							
KLUGER L/V	ACU2# TYPE MCU2# TYPE	2AZ-FE 1MZ-FE				H12.11 ~	00.11 ~	TCCS	●		●			●	
			ABS/VSC	●				●							
			H19.03	07.03	EPS	●		●							
					MAIN BODY	●		●							
HYBRID	MHU28W	3MZ-FE	H17.03 ~	05.03 ~	TCCS				39,43,44,45,46,63,71,72,102,103,107,119		●				
					H21.02	09.02	HV	●	●	●	4,6,7,8,9				
					ABS/VSC	●	●	●	1,2,3,10,20,35~39,41~44,46,47,75	1					
					EPS	●		●	-	1					
					MAIN BODY	●		●	1,2,4,5,11,13,20,21,25						
					SRS	●		●		-					
					AIRCON	●		●	15~23						
					METER	●		●	1,2,3,4	1					
COASTER (Hino OEM)	PB-XZB PDG-XZB	N04C	H16.05 ~	04.05 ~											
CORONA PREMIO	CT21# TYPE	3C-TE	H08.01 ~	96.01 ~	TCCS	●		●			●				
					ABS/VSC	●		●							
			H13.11	01.11	SRS	●		●							
COMFORT	YXS1# TYPE	3Y-PE	H13.08 ~	01.08 ~	TCCS	●	●	●			●				
					ABS/VSC	●	●	●							
			H20.07	08.07	SRS	●		●							
	TSS1# TYPE	1TR-FPE	H20.08 ~	08.08 ~	TCCS	●	●	●	15,23,43,55,57,62,70,71,77,79,81,95,102,103,119,129,130		●				
		H24.01	12.01												

1. Toyota Diagnostic Software (Ver7.8*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPOR	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
	TSS1# TYPE	1TR-FPE	H24.01 ~	12.01 ~	Stop&Go	●	●	●	1~5	1,2,3	●	
					ABS/VSC	●	●	●	2,21~24, 28~31,48,49,66	4,5,10		
					SRS	●		●				
					TCCS	●	●	●	15,23,39,43,45, 55,57,62,70~72, 77,79,81,95,99, 102,103,119, 129,130			
					Stop&Start	●	●	●	1~11	1,2,3		
					ABS/VSC	●	●	●	2,21~24,28~31 48,49,66	4,5,10		
					METER	●		●	1,2,5,6,7			
SUCCEED	NCP5# TYPE NCP16# TYPE	1NZ-FE 1ND-TV	H14.07 ~	02.07 ~	TCCS	●	●	●	19,39,43~46, 55,63,70~72,99, 102,103,107,119		●	
					ABS/VSC	●	●	●	1,2,3,10,39,55, 59,66,74	1,4		
					EPS	●		●	-	2		
					MAIN BODY	●		●	1,2,4,5,11,13, 20,21,25			
					SRS	●		●				
					METER	●		●	1,2,5,6,7			
					AIRCON	●		●	27			
SIENTA	NCP8# TYPE	1NZ-FE	H15.09 ~	03.09 ~	TCCS	●	●	●	19,39,43,45,55, 63,70,71,72,102, 103,107,119,127		●	
					ABS/VSC	●	●	●	1,2,3,58,74			
					MAIN BODY	●		●				
					SRS	●		●				
					METER	●		●				
					AIRCON	●		●				
					NSP17# TYPE	1NZ-FE 2NR-FKE	H27.06 ~	15.06 ~	TCCS	●		
	ABS/VSC	●	●	●	1,2,3,58,74 72,102,103,107, 119,127							
	ABS/VSC	●	●	●	1,2,3,58,74							
	EPS	●		●	-	2						
	MAIN BODY	●		●	14,15,16,17							
	SRS	●		●								
	METER	●		●	1~8							
	COLLATION	●		●	2,15,17							
AIRCON	●		●	15,18,20,22, 23,27								
SUPRA		2JZ-GTE	H09.08 ~	97.08 ~	TCCS	●		●			●	
			H14.07 ~	02.07 ~	ABS/VSC	●		●				
SPARKY	S22# TYPE S23# TYPE	K3-VE	H14.07 ~	02.07 ~	TCCS	●		●			●	
					ABS/VSC	●		●				
SPRINTER VAN WAGON	CE11# TYPE	3C-E	H10.04 ~	98.04 ~	TCCS	●		●			●	
			H12.07 ~	00.07 ~	ABS	●		●				
	CE10# TYPE	3C-E	H10.04 ~	98.04 ~	SRS	●		●			●	
			H14.06 ~	02.06 ~	TCCS	●		●				
			ABS	●		●						
SRS	●		●									
SPADE	NCP14# TYPE NSP14# TYPE	1NZ-FE 1NR-FE	H24.07 ~	12.07 ~	TCCS	●	●	●	19,39,43,45,55, 63,69,72,99,102 103,107,119,121		●	
					ABS/VSC	●	●	●	1,2,3,58,74			
					EPS	●		●	-	2		
					MAIN BODY	●		●				
					SRS	●		●				
					METER	●		●	1~8			
					COLLATION	●		●	2			
AIRCON	●		●	15,18,20,22, 23,27								
CELICA	ZZT23# TYPE	1ZZ-FE 2ZZ-GE	H11.09 ~	99.09 ~	TCCS	●	●	●			●	
			H18.04 ~	06.04 ~	ABS	●		●				
			MAIN BODY	●		●						
			SRS	●		●						
CELSIOR	UCF20 TYPE	1UZ-FE	H09.07 ~	97.07 ~	TCCS	●		●			●	
			H12.08 ~	00.08 ~	ABS	●		●				
			SRS	●		●						
	UCF30 TYPE	3UZ-FE	H12.08 ~	00.08 ~	TCCS	●		●			●	
			ABS	●		●						

1. Toyota Diagnostic Software (Ver7.8*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPOR	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
			H18.05	06.05	EPS	●		●				
					SRS	●		●				
					MAIN BODY	●		●				
					AIRCON	●		●				
CENTURY	GZG50	1GZ-FE	H09.04	97.04	TCCS	●		●			●	
			~	~	ABS	●		●				
					EPS	●		●				
					SRS	●		●				
					MAIN BODY	●		●				
					AIRCON	●		●				
SOARER	UZZ40	3UZ-FE	H13.04	01.04	TCCS	●		●			●	
			~	~	ABS	●		●				
			H17.07	05.07	EPS	●		●				
					SRS	●		●				
					MAIN BODY	●		●				
					AIRCON	●		●				
DYNA	GE-RZU (RZU3##)	3RZ-FE	H12.05	00.05	TCCS	●		●			●	
			~	~	ABS	●		●				
			H16.04	04.04	SRS	●		●				
	GL-RZU	3RZ-FE 3RZ-FPE	H15.05	03.04	TCCS	●		●			●	
			~	~	ABS	●		●				
			H16.04	04.04	SRS	●		●				
	LD-RZU	3RZ-FE	H16.05	04.06	TCCS	●		●			●	
			~	~	ABS	●		●				
					SRS	●		●				
DYNA (Hino OEM)	KK-XZU	J05C S05C S05D	H11.04	99.01							●	
			~	~								
			H16.11	04.11								
	PB-XZU	J05D N04C S05D	H16.05	04.05								
			~	~								
	VF-XKU	N04C	H15.08	03.08								
			~	~								
	PD-XZU	N04C	H15.08	03.08								
			~	~								
	PH-XZU	N04C	H17.04	05.04								
			~	~								
	BDG-XZU (XKU3##) (XKU4##) (XKU5##)	N04C	H18.09	06.09								
			~	~								
	BJG-XZU BKG-XZU	N04C N04C	H19.12	07.12								
			~	~								
	SKG-XZU (XKC6##) (XKU6##) (XKU7##)	N04C	H23.07	11.07								
			~	~								
	TKG-XZU	N04C	H24.09	12.09								
			~	~								
TOWN ACE	CM7# TYPE	3C-E	H11.06	99.06	TCCS	●		●			●	
			~	~	ABS	●		●				
			H16.07	04.07	SRS	●		●				
(Daihatsu OEM)	S402U	3SZ-VE	H20.02	08.02								
			~	~								
	S412U	3SZ-VE	H22.07	10.07								
			~	~								
TOWN ACE NOAH	CR40G CR50G	3C-TE	H10.12	98.12	TCCS	●		●			●	
			~	~	ABS	●		●				
			H13.10	01.10	SRS	●		●				
					MAIN BODY	●		●				
TOWN ACE VAN	CR42V CR52V	3C-E	H10.12	98.12	TCCS	●		●			●	
			~	~	ABS	●		●				
			H16.10	04.10	SRS	●		●				
					MAIN BODY	●		●				
(Daihatsu OEM)	S402M S412M	3SZ-VE	H20.02	08.02								
			~	~								
CHASER	GX10# TYPE JZX10# TYPE	1G-FE 1JZ-GE	H08.09	96.09	TCCS	●		●			●	
			~	~	ABS	●		●				
			H13.06	01.06	SRS	●		●				
					MAIN BODY	●		●				
TOURING HiACE	KCH40W	1KZ-TE	H11.08	99.08	TCCS	●	●	●			●	
			~	~	ABS	●		●				
			H14.05	02.05	SRS	●		●				
					MAIN BODY	●		●				
	RCH41W	3RZ-FE	H11.08	99.08	TCCS	●	●	●			●	

1. Toyota Diagnostic Software (Ver7.8*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPOR	COUPLER				
			JP CALENDAR	WESTRN CAL							COM	EXCL			
			H14.05	02.05	ABS	●		●							
					SRS	●		●							
					MAIN BODY	●		●							
DUJET (Daihatsu Storia OEM)	M100A	EJ-DE EJ-VE	H10.09	98.09											
			~	~											
			H12.04	04.05											
	M101A	K3-VE K3-VE2	H12.05	00.05											
			~	~											
			H16.05	04.05											
	M110A	EJ-DE EJ-VE	H10.09	98.09											
			~	~											
			H16.05	00.04											
	M111A	K3-VE K3-VE2	H12.05	01.12											
			~	~											
			H16.05	04.05											
TOYOACE	KDY2#0 TYPE TRY2#0 TYPE RZY2#0 TYPE	1KD-FTV	H19.08	07.08	ECD	●	●	●	14,18,21,39,40, 69,97	4,5,8,10, 11,12,13	●				
			~	~	ECT	●		●							
			~	~	EPS	●		●				●			
			~	~	ABS/VSC	●		●							
			~	~	SRS	●		●							
			~	~	MAIN BODY	●		●							
			~	~	AIRCON	●		●							
			~	~											
			~	~											
			~	~											
	KDY2#1 TYPE TRY2#1 TYPE RZY2#1 TYPE	1TR-FE	H15.07	03.07	TCCS	●	●	●	1,6,7,39,43,45,55, 63,70,71,72,102, 103,119	-		●			
			~	~	ECT	●		●							
			~	~	EPS	●		●							
			~	~	ABS/VSC	●		●							
			~	~	SRS	●		●							
			~	~	MAIN BODY	●		●							
			~	~	AIRCON	●		●							
			~	~											
			~	~											
			~	~											
	(Hino OEM)	KDY2#1 TYPE TRY2#1 TYPE RZY2#1 TYPE	1TR-FEP (LPG)	H15.07	03.07	TCCS	●	●	●	23,39,43,45,55, 70,71,72,79,95, 102,103,119	-		●		
				~	~	ECT	●		●						
				~	~	EPS	●		●						
				~	~	ABS/VSC	●		●						
				~	~	SRS	●		●						
				~	~	MAIN BODY	●		●						
				~	~	AIRCON	●		●						
				~	~										
				~	~										
				~	~										
(Hino OEM)	KK-XZU	J05C	H11.04	99.04							●				
			~	~											
				H16.11	04.11										
	VF-XKU	N04C	H15.08	03.08								●			
			~	~											
			~	~											
	PD-XZU	N04C	H15.08	03.08								●			
			~	~											
	PB-XZU	J05D N04C S05D	H16.05	04.05								●			
			~	~											
	PH-XZU	N04C	H17.04	05.04								●			
			~	~											
	BDG-XZU	N04C	H18.09	06.09								●			
			~	~											
	BJG-XKU	N04C	H18.09	06.09								●			
~			~												
BKG-XZU	N04C	H19.12	07.12								●				
		~	~												
SKG-XZU	N04C	H23.07	11.07								●				
		~	~												
TOYOACE (Hino OEM)	TKG-XZU	N04C	H24.09	12.09											
			~	~											
NADIA	SXN1## TYPE	3S-FSE 3S-FE	H10.08	98.08	TCCS	●	●	●			●				
			~	~	ABS	●		●							
			~	~	SRS	●		●							
			~	~	MAIN BODY	●		●							
			~	~											
	ACN1## TYPE	1AZ-FSE	H13.04	01.04	TCCS	●	●	●				●			
			~	~	ABS	●		●							
			~	~	SRS	●		●							
			~	~	MAIN BODY	●		●							
			~	~											
NOAH	AZR6#G TYPE	1AZ-FSE	H13.11	01.11	TCCS	●	●	●	19,39,45,55,63,		●				

1. Toyota Diagnostic Software (Ver7.8*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSP	ACTIVE TEST	WORK SUPPOR	COUPLER							
			JP CALENDAR	WESTRN CAL							COM	EXCL						
NOAH (VOXY)	ZRR7#G TYPE ZRR7#W TYPE ZRR7#R TYPE	3ZR-FE 3ZR-FAE	H19.05 ~ H25.12	07.05 ~ 13.12	ABS/VSC	●	●	●	72,119 1,2,3,74	-	●							
					SRS	●		●										
					MAIN BODY	●		●	4,10,14,15,16	-								
					AIRCON	●		●	15,20~25,27									
					TCCS	●	●	●	3,39,43,45,55,63, 70~72,102,103, 107,119,121,127									
					SEAT MOTOR	●		●	1									
		ZRR8#G TYPE ZRR8#W TYPE	3ZR-FAE	H26.01 ~	14.01 ~	ABS/VSC	●	●	●	1,2,3,74	-	●						
						EPS	●		●	-	2							
						SRS	●		●									
						MAIN BODY	●		●	4,10,14,15,16	-							
						AIRCON	●		●	15,20~25,27								
						SEAT MOTOR	●		●	1								
	HYBRID (VOXY)	ZWR80G TYPE	2ZR-FXE	H26.02 ~	14.02 ~	COLLATION	●		●	1,2,4,5,8~12,16		●						
						TCCS	●	●	●	39,43,45,55,63, 69,72,102,103, 119,121	1,2,3							
						ABS	●	●	●	1,2,3,74								
						EPS	●		●	-	2							
						SRS	●		●									
						MAIN BODY	●		●	4,10,14,15,16	-							
			ZWR80G TYPE	2ZR-FXE	H26.02 ~	14.02 ~	HV	●	●	●	4,6,7,8,9		●					
							ABS/VSC	●	●	●	1,3,10,11,18,34, 39,40,45,52,54, 57,61,65,70,71, 74,75,78,80	2,4						
							EPS	●		●	-	2						
							SRS	●		●								
							MAIN BODY	●		●	4,10,14,15,16	-						
							AIRCON	●		●	15,20~25,27							
HIACE	KZH1##G	1KZ-TE	H11.07 ~ H16.07	99.07 ~ 04.07	TCCS	●	●	●			●							
					ABS/VSC	●	●	●										
					SRS	●		●										
					MAIN BODY	●		●										
					TRH2##W KDH2##W	1TR-FE 2TR-FE	H16.08 ~	04.08 ~	TCCS	●			●	●	1,6,7,39,43,45, 55,63,70,71,72, 102,103,119,127		●	
					ECT				●				●	1,3,4	-			
	ABS/VSC	●	●	●	1,2,3,66				-									
	SRS	●		●														
	MAIN BODY	●		●														
	AIRCON	●		●	15,18,20,22,23, 27													
	TRH2##W KDH2##W	1KD-FTV DIESEL	H16.08 ~	04.08 ~	AFS	●		●	1,2		●							
					ECD	●	●	●	18,21,32,39,40, 58,61,71,97,107									
ECT					●		●	1,3,4	-									
ABS/VSC					●	●	●	1,2,3,66	-									
SRS					●		●											
MAIN BODY					●		●											
HIACE COMMUTER	TRH124B	1TR-FE	H15.08 ~ H16.07	03.08 ~ 04.07	TCCS	●	●	●			●							
					ABS/VSC	●		●										
					SRS	●		●										
					TRH2##B KDH2##B	1KD-FTV DIESEL	H17.01 ~	05.01 ~	ECD	●			●	●	18,21,32,39,40, 58,61,71,97,107		●	
					ECT				●				●	1,3,4	-			
					ABS/VSC				●	●			●	1,2,3,66	-			
	SRS	●		●														
	MAIN BODY	●		●														
	AIRCON	●		●	15,18,20,22,23, 27													
	TRH20# TYPE KDH20# TYPE	1TR-FE 2TR-FE GASOLINE	H16.08 ~	04.08 ~	TCCS	●	●	●			●							
					ABS/VSC	●		●										
					SRS	●		●										
ECD					●	●	●	1,6,7,39,43,45,55, 63,70,71,72,102, 103,107,119	4,5,6,7,8, 9,10,11									
ECT					●	●	●	1,2,3,4										
ABS/VSC					●	●	●	1,2,21,22,23,24,	4,5									

1. Toyota Diagnostic Software (Ver7.8*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPOR	COUPLER		
			JP CALENDAR	WESTRN CAL							COM	EXCL	
	TRH20# TYPE KDH20# TYPE	1KD-FTV DIESEL	H16.08 ~	04.08 ~	MAIN BODY	●		●	28,29,30,31				
					SRS	●		●					
					AIRCON	●		●	27				
					METER	●		●	1,2,4,5,6,7				
					ECD	●	●	●	14,18,21,32,39, 40,58,70,71,97	5,6,7,8,9,10 11,12,13	●		
					ECT	●	●	●	1,2,3,4				
					ABS/VSC	●	●	●	1,2,3,21~24, 28,29,30,31	4,5			
					MAIN BODY	●		●					
					SRS	●		●					
					AIRCON	●		●	15,18,20~22,27				
					METER	●		●	1,2,4,5,6,7				
						TRH21# TYPE KDH21# TYPE	1TR-FE 2TR-FE GASOLINE	H19.08 ~	07.08 ~	ECD	●	●	●
ECT	●	●	●	1,2,3,4									
ABS/VSC	●	●	●	1,2,21,22,23,24, 28,29,30,31						4,5			
MAIN BODY	●		●										
SRS	●		●										
AIRCON	●		●	27									
METER	●		●	1,2,4,5,6,7									
ECD	●	●	●	14,18,21,32,39, 40,58,70,71,97						5,6,7,8,9,10 11,12,13	●		
ECT	●		●	1,2,3,4									
ABS/VSC	●	●	●	1,2,3,21,22,23,24, 28,29,30,31						4,5			
MAIN BODY	●		●										
SRS	●		●										
AIRCON	●		●	15,18,20~22,27									
METER	●		●	1,2,4,5,6,7									
HiLUX	RZN160 Sys RZN170 Sys	3RZ-FE	H11.08 ~ H16.07	99.08 ~ 04.07	TCCS	●	●	●			●		
					ABS/VSC	●		●					
HiLUX SURF	KZN180 Sys KDN180 Sys RZN180 Sys	1KZ-TE 1KD-FTV 3RZ-FE	H10.08 ~ H14.09	98.08 ~ 02.09	TCCS	●	●	●					
					ABS/VSC	●		●					
					SRS	●		●					
					MAIN BODY	●		●					
	RZN210 Sys VZN210 Sys TRN210 Sys	3RZ-FE 5VZ-FE 2TR-FE	H14.07 ~ H21.07	02.10 ~ 09.07	TCCS	●	●	●	2,3,23,39,43,44, 45,46,52,55,56, 63,71,72,87,102, 103,119			●	
					ECT	●		●	1,2,3,4				
					ABS/VSC	●	●	●					
					MAIN BODY	●		●					
	KDN210 Sys GRN210 Sys	1KD-FTV 1GR-FE	H14.07 ~ H21.07	02.10 ~ 09.07	SRS	●		●					
					AIRCON	●		●					
					MAIN BODY	●		●					
					SRS	●		●					
PASSO (Daihatsu Boon OEM)	KGC10 KGC15 QNC10 KGC30 KGC35 NGC30	1KR-FE K3-VE	H16.06 ~ H22.01	04.06 ~ 10.01									
		1KR-FE 1NR-FE	H22.02 ~ ~	10.02 ~ ~									
PASSO SETTE (Daihatsu Coo OEM)	M502E M512E	3SZ-VE	H20.12 ~ H24.02	08.12 ~ 12.02									
HARRIER	SXU1#W TYPE MCU1#W TYPE ACU1#W TYPE	5S-FE 1MZ-FE 2AZ-FE	H09.12 ~ H15.01	97.12 ~ 03.01	TCCS	●	●	●			●		
					ABS/VSC	●		●					
					SRS	●		●					
					MAIN BODY	●		●					
	ACU3#W TYPE MCU3#W TYPE GSU3#W TYPE	2AZ-FE 1MZ-FE 2GR-FE	H15.02 ~ H25.07	03.02 ~ 13.07	TCCS	●	●	●	39,43,45,55,63, 70,71,72,107,119			●	
					ABS/VSC	●		●	1,2,3,57,60,66,74	4			
					SRS	●		●					
					MAIN BODY	●		●					
					METER	●		●	1~7				
					AIRCON	●		●	15,18,20~23				
	ZSU6#W TYPE	3ZR-FAE	H25.12 ~ ~	13.12 ~ ~	TCCS	●	●	●	39,43,45,55,63, 70,71,72,102, 103,107,119,121			●	
					ABS/VSC	●		●	1,2,3,10,57,58, 60,65,66,74				
EPS					●		●	-	2				
SRS					●		●						
MAIN BODY					●		●						
METER					●		●	1~7					

1. Toyota Diagnostic Software (Ver7.8*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPOR	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
					AIRCON	●		●	15,18,20~23			
					SEAT MOTOR	●		●	1			
					COLLATION	●		●	2,15,17			
HARRIER HYBRID	MHU38W	3MZ-FE	H17.03 ~	05.03 ~	TCCS				39,43,44,45,46,63,71,72,102,103,107,119		●	
					HV	●	●	●	4,6,7,8,9			
					ABS/VSC	●	●	●	20,35~38,41~44,46,47,75	1		
					EPS	●		●	-	-		
					MAIN BODY	●		●	2,4,9,13~16,21			
					SRS	●		●	-	-		
					AIRCON	●		●	15~23			
					METER	●		●	1,2,3,4	1		
					AFS	●		●	1~6			
PIXIS EPOCH (Daihatsu Mirae's OEM)	LA300A LA310A	KF-VE	H24.05 ~ H25.07	12.05 ~ 13.07								
SPACE (Daihatsu Move Conte OEM)	L575A L585A	KF-VE KF-DET	H23.09 ~ H25.06	11.09 ~ 13.06								
TRUCK (Daihatsu HIJET OEM)	S201U S321M	KF-VE	H23.12 ~ H26.03	11.12 ~ 14.03								
VAN (Daihatsu HIJET CARGO OEM)	S321M S331M	KF-VE KF-VE	H23.12 ~ H26.03	11.12 ~ 14.03								
VISTA VISTA ARDEO	SV5# TYPE ZZV5# TYPE AZV5# TYPE	3S-FSE 3S-FE 1ZZ-FE 1AZ-FSE	H10.07 ~ H15.07	98.07 ~ 03.07	TCCS	●	●	●			●	
					ABS/VSC	●		●				
					SRS	●		●				
					MAIN BODY	●		●				
FUN CARGO	NCP2# TYPE	2NZ-FE 1NZ-FE	H11.08 ~ H17.09	99.08 ~ 05.09	TCCS	●	●	●			●	
					ABS/VSC	●		●				
					SRS	●		●				
					MAIN BODY	●		●				
PLATZ	NCP1# TYPE SCP11 TYPE	1NZ-FE 2NZ-FE 1SZ-FE	H11.08 ~ H17.10	99.08 ~ 05.10	TCCS	●	●	●			●	
					ABS/VSC	●		●				
					SRS	●		●				
					MAIN BODY	●		●				
PRIUS	NHW1# TYPE	1NZ-FXE	H09.12 ~ H12.04	97.12 ~ 00.04	TCCS	●	●	●			●	
					HV	●		●				
					ABS/VSC	●		●				
					SRS	●		●				
	NHW20 TYPE	1NZ-FXE	H12.05 ~ H15.08	00.05 ~ 03.08	TCCS	●	●	●	19,39,43,45,55,63,70,71,72,102,103,106,107,119		●	
					HV	●	●	●	4,5,6,8			
					BATTERY	●	●	●	1,2,3			
					ABS/VSC	●	●	●	1,2,9,10,17,25,30,31,36,53,56,60,64,69,70,73,74,77,79	1,2,3,4,7,8		
					EPS	●		●				
					MAIN BODY	●		●	4,6,9~16,18,21			
					SRS	●		●				
					AIRCON	●		●	15~23			
					SEAT MOTOR	●		●	1			
					METER	●		●	1~6,8			
	ZVW3# TYPE	2ZR-FXE	H21.05 ~	09.05 ~	TCCS	●	●	●	19,39,43,45,55,63,70,71,72,102,103,106,107,119		●	
					HV	●	●	●	4,6,7,8,9			
					ABS/VSC	●	●	●	1,2,9,10,17,25,30,31,36,53,56,60,64,69,70,73,74,77,79	1,2,3,4,7,8		
					EPS	●		●				
					MAIN BODY	●		●	2,3,4,10~15,16,18,21,22	2		
					SRS	●		●				
					AIRCON	●		●	15~23	1		
					SEAT MOTOR	●		●	1			
					METER	●		●	1~6,8			
					COLLATION	●		●	2,17,20,21			
					PWR SUPPLY	●		●	2	1		
					P CONTROL	●		●				
PRIUS	ZVW35 TYPE	2ZR-FXE	H21.05	09.05	TCCS	●	●	●	19,39,43,45,55,		●	

1. Toyota Diagnostic Software (Ver7.8*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSP	ACTIVE TEST	WORK SUPPOR	COUPLER						
			JP CALENDAR	WESTRN CAL							COM	EXCL					
PRIUS α	(PHV)		~	~					63,70,71,72,102,103,106,107,119								
					HV	●	●	●	4.6,7,8,9								
					PLG-IN CNTRL	●		●									
					ABS/VSC	●	●	●	1,2,9,10,17,25,30,31,36,43,52,53,56,60,64,69,70,73,74,77,79	1,2,3,4,7,8							
					EPS	●		●		2							
					IPA	●		●									
					MAIN BODY	●		●	2,3,4,10~16,18,21,22								
					SRS	●		●									
					AIRCON	●		●	15~23	1							
					SEAT MOTOR	●		●	1								
	METER	●		●	1~6,8												
	COLLATION	●		●	2,17,20,21												
	PWR SUPPLY	●		●	2	1											
	P CONTROL	●		●	-												
	AFS	●		●	1~6												
	ZVW4#W TYPE	2ZR-FXE	H23.05 ~ H24.04	11.05 ~ 12.04	TCCS	●	●	●	19,39,43,45,55,63,70,71,72,102,103,106,107,119		●						
	HV	●	●	●	4.6,7,8,9												
	PLG-IN CNTRL	●		●													
	ABS/VSC	●	●	●	1,2,8,9,10,17,25,30,31,36,43,52,53,56,60,64,69,70,73,74,77,79	1,2,3,4,7,8											
	EPS	●		●		2											
IPA	●		●														
MAIN BODY	●		●	2,3,4,10~16,18,21,22													
SRS	●		●														
AIRCON	●		●	15~23	1												
SEAT MOTOR	●		●	1													
METER	●		●	1~6,8													
COLLATION	●		●	2,17,20,21													
PWR SUPPLY	●		●	2	1												
P CONTROL	●		●	-													
AFS	●		●	1~6													
BLADE	AZE15#H TYPE GRE15#H TYPE	2AZ-FE 2GR-FE 1AZ-FSE	H18.12 ~ H24.04	06.12 ~ 12.04	TCCS	●	●	●	3,39,43,45,55,56,63,70,71,102,103,107,119,127		●						
					ECT	●		●	1,2,3,4	1							
					ABS/VSC	●		●	1,2,3,39,60,65,66,74	4							
					EPS	●		●	-	2							
					MAIN BODY	●		●									
					SRS	●		●									
					METER	●		●	1~6,8								
					AIRCON	●		●	15,18,20~23,27								
					SEAT MOTOR	●		●	1								
					COLLATION	●		●	2,17,20,21								
					AFS	●		●	1,2								
					BREVIS	JCG1# TYPE	1JZ-FSE 2JZ-FSE	H13.06 ~ H19.05	01.06 ~ 07.05	TCCS	●	●	●			●	
										ABS/VSC	●		●				
										SRS	●		●				
MAIN BODY	●		●														
PREMIO	AZT24# TYPE Nzt24# TYPE ZZT24# TYPE AZT24# TYPE Nzt24# TYPE ZZT24# TYPE	1AZ-FSE 1NZ-FE 1AZ-FSE 1NZ-FE	H13.12 ~ H19.05	01.12 ~ 07.05	TCCS	●	●	●	19,39,45,55,63,72,119		●						
					ECT	●		●	1,2,3,4	1							
					EPS	●		●									
					ABS/VSC	●		●									
					MAIN BODY	●		●									
					SRS	●		●									
					METER	●		●	1~6,8								
	Nzt26# TYPE ZRT26# TYPE	1NZ-FE 2ZR-FE 2ZR-FAE 3ZR-FAE	H19.06 ~ 07.06	07.06 ~ 07.06	TCCS	●	●	●	19,39,45,55,63,72,119		●						
	Stop&Start				●		●	1~11	1,2,3								
	ECT				●		●	1,2,3,4	1								
	EPS				●		●										
	ABS/VSC				●		●										
	MAIN BODY				●		●										
	SRS				●		●										
METER	●		●	1~6,8													
COLLATION	●		●	2,17,20,21													
AFS	●		●	1,2													
PROGRES	JCG1# TYPE	1JZ-GE 2JZ-GE	H10.05 ~ 09.05	98.05 ~ 09.05	TCCS	●	●	●			●						
					ABS/VSC	●		●									

1. Toyota Diagnostic Software (Ver7.8*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPOR	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
		1JZ-FSE 2JZ-FSE	H13.03	07.05	SRS	●		●				
					MAIN BODY	●		●				
PRONARD	MCX20	1MZ-FE	H12.04 ~ H15.05	00.04 ~ 03.05	TCCS	●	●	●			●	
					ABS/VSC	●		●				
					SRS	●		●				
					MAIN BODY	●		●				
PROBOX	NCP5# TYPE NLP5# TYPE NCP5# TYPE NLP5# TYPE	1NZ-FE 1ND-TV 1NR-FE 2NZ-FE 1NZ-FNE	H14.04 ~	02.07 ~	TCCS	●	●	●	19,39,43,45,55, 63,69,72,99,102, 103,107,119,121		●	
					EPS	●		●		2		
					ABS/VSC	●	●	●	1,2,3,10,39,55,59	4		
					SRS	●		●				
					MAIN BODY	●		●				
					METER	●		●	1~6.8			
					AIRCON	●		●	27			
BELTA	SCP9# TYPE KSP9# TYPE NCP9# TYPE	1KR-FE 2NZ-FE 2SZ-FE	H17.11 ~ H24.06	05.11 ~ 12.06	TCCS	●	●	●	3,19,39,43,45,55, 56,71,72,102,103	1,2,3	●	
					ABS/VSC	●	●	●	1,2,3,39,57,60, 66,74	4		
					EPS	●		●	-	-		
					SRS	●		●		-		
					MAIN BODY	●		●	3,4,11,12	-		
					AIRCON	●		●	18,20,21,22,27	-		
					SEAT MOTOR	●		●	1	-		
					METER	●		●	1~6	-		
PORTE	NNP1# TYPE	2NZ-FE 1NZ-FE	H16.07 ~ H24.06	04.07 ~ 12.06	TCCS	●	●	●	39,45,55,72,119		●	
					ABS/VSC	●	●	●	1,2,3,60,65,74			
					SRS	●		●				
					MAIN BODY	●		●				
					AIRCON	●		●				
	NCP14# TYPE NSP14# TYPE	1NZ-FE 1NR-FE	H24.07 ~	12.07 ~	TCCS	●	●	●	19,39,43,45,55, 63,69,72,102, 103,107,119,121		●	
					ABS/VSC	●	●	●	1,2,3,39,57,60, 66,74	4		
					SRS	●		●				
					MAIN BODY	●		●				
					METER	●		●	1~6.8			
					COLLATION	●		●	2,17,20,21			
					SEAT MOTOR	●		●	1	-		
					AIRCON	●		●	1,15,18,20~22, 27			
MARK II	GX10# TYPE JZX10# TYPE	1G-FE 1JZ-GE 1JZ-GTE 2JZ-GE	H08.09 ~ H12.10	96.09 ~ 00.10	TCCS	●	●	●			●	
					ABS/VSC	●		●				
					SRS	●		●				
	GX11# TYPE JZX11# TYPE	1G-FE 1JZ-FSE 1JZ-GTE 1JZ-GE	H12.10 ~ H16.10	00.10 ~ 04.10	TCCS	●	●	●			●	
					EPS	●		●				
					ABS/VSC	●		●				
					SRS	●		●				
					MAIN BODY	●		●				
					AIRCON	●		●				
QUALIS	MCV2#W TYPE	1MZ-FE 2MZ-FE	H09.04 ~ H13.12	97.04 ~ 01.12	TCCS	●	●	●			●	
					ABS/VSC	●		●				
					SRS	●		●				
BLIT	GX110W JZX110W	1G-FE 1JZ-FSE 1JZ-GTE 1JZ-GE	H14.01 ~ H19.05	02.01 ~ 07.05	TCCS	●	●	●			●	
					EPS	●		●				
					ABS/VSC	●		●				
					SRS	●		●				
					MAIN BODY	●		●				
MARK X	GRX120	4GR-FSE 3GR-FSE	H16.11 ~ H21.09	04.11 ~ 09.09	TCCS	●	●	●	35,43,44,46,55, 56,71,72,87,102, 103,107,111-117 121,122,128,136		●	
					ECT	●		●	1,2,3,4	1		
					EPS	●		●		1		
					ABS/VSC	●	●	●	1,2,3,39,57,58, 60,65,66,75	-		
					MAIN BODY	●		●				
					SRS	●		●				
					METER	●		●	1~6.8			
					AIRCON	●		●	15,20,21,22,27	-		
					AFS	●		●	1~6			
	GRX130	4GR-FSE 2GR-FSE	H21.09 ~	09.09 ~	TCCS	●	●	●	23,43,44,45,46, 55,63,70,71,72, 102,103,107, 111~117 121,122,128,136		●	
					EPS	●		●		1		
					ABS/VSC	●	●	●	1,2,3,39,57,65,	4		

1. Toyota Diagnostic Software (Ver7.8*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPOR	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
									66,74			
					MAIN BODY	●		●				
					SRS	●		●				
					METER	●		●	1~6,8			
					AIRCON	●		●	15,20,21,22,27	-		
					COLLATION	●		●	2,17,20,21			
					PWR SUPPLY	●		●	2	1		
					SEAT MOTOR	●		●	1	-		
					AFS	●		●	1~6			
MARK X ZIO	ANA10 GGA10	2AZ-FE 2GR-FE	H19.09 ~	07.09 ~	TCCS	●	●	●	23,43,44,45,46, 55,56,63,70,71, 72,102,103,107, 111~117,121, 122,127,128,136		●	
					ECT	●		●	1,2,3,4	1		
					EPS	●		●		1,2		
					ABS/VSC	●	●	●	1,2,3,39,57,65, 66,74	4		
					MAIN BODY	●		●				
					SRS	●		●				
					METER	●		●	1~6,8			
					AIRCON	●		●	15,20,21,22,27	-		
					COLLATION	●		●	2,17,20,21			
					PWR SUPPLY	●		●	2	1		
					SEAT MOTOR	●		●	1	-		
					AFS	●		●	1~6			
LITE ACE	CR40 Sys CR50 Sys KR50 Sys	3C-TE 7K-E	H10.12 ~ H16.10	98.12 ~ 07.08	TCCS	●	●	●			●	
					ABS	●		●				
					SRS	●		●				
					MAIN BODY	●		●				
(Daihatsu OEM)	S40# TYPE S41# TYPE	3SZ-VE	H20.02 ~	08.02 ~								
RAUM	EXZ1# TYPE	1NZ-FE	H09.05 ~ H15.04	97.05 ~ 03.04	TCCS	●	●	●			●	
					ABS	●		●				
					SRS	●		●				
					MAIN BODY	●		●				
	NCZ2# TYPE	1NZ-FE	H15.05 ~ H23.10	03.05 ~ 11.10	TCCS	●	●	●	2,39,43,45,55, 63,72,107			
					ABS/VSC	●		●	1,2,66,74	-		
					SRS	●		●				
					MAIN BODY	●		●				
					AIRCON	●		●		-		
RACTIS	NCP10# TYPE SCP10# TYPE	1NZ-FE 2SZ-FE	H17.10 ~ H22.10	05.10 ~ 10.10	TCCS	●	●	●	39,43,45,55,56, 63,71,102,103, 107,119		●	
					ABS/VSC	●		●	1,2,3,39,57,66,74	-		
					SRS	●		●				
					MAIN BODY	●		●				
					METER	●		●	1~6,8			
					AIRCON	●		●				
					COLLATION	●		●	2,17,20,21			
	NCP12# TYPE NSP12# TYPE	1NZ-FE 1NR-FE 1NR-FKE	H22.11 ~	10.11 ~	TCCS	●	●	●	19,39,43,45,55, 63,71,72,99,102, 103,107,119,121		●	
					EPS	●		●		1		
					ABS/VSC	●		●	1,2,3,39,57,66,74	4		
					SRS	●		●				
					MAIN BODY	●		●				
					SEAT MOTOR	●		●	1	-		
					METER	●		●	1~6,8			
					AIRCON	●		●				
					COLLATION	●		●	2,17,20,21			
RUSH (Daihatsu Be-go OEM)	J2#0E TYPE	3SZ-VE	H18.01 ~	06.01 ~	TCCS	●		●				
					ABS/VSC	●		●				
					SRS	●		●				
LAND CRUISER	HDJ10#K TYPE UZJ10#W TYPE	1HD-FTE 2UZ-FE	H10.01 ~ H19.06	98.01 ~ 07.06	TCCS	●		●			●	
					ABS/VSC	●		●				
					SRS	●		●				
	UZJ20#W TYPE URJ20#W TYPE	2UZ-FE 1UR-FE	H19.09 ~ H21.03	07.09 ~ 09.03	TCCS	●	●	●	1,3,39,43,44,45, 46,55,56,63,69, 72,87,102,103, 119		●	
					EPS	●		●				
					ABS/VSC	●		●	1,3,39,57,60, 66,74	4		
					SRS	●		●				
					MAIN BODY	●		●				
					SEAT MOTOR	●		●	1	-		
					METER	●		●	1~6,8			

1. Toyota Diagnostic Software (Ver7.8*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPOR	COUPLER		
			JP CALENDAR	WESTRN CAL							COM	EXCL	
					AIRCON	●		●	6,8,12,13,15,20,21,23,24,27				
					COLLATION	●		●	2.4~14.16				
PRADO	KDJ9#W TYPE KZJ90 TYPE VZJ90 TYPE	1KD-FTV	H12.07 ~ H14.09	00.07 ~ 02.09	TCCS	●	●	●			●		
					EPS	●		●					
					ABS/VSC	●		●					
					SRS	●		●					
					MAIN BODY	●		●					
					AIRCON	●		●					
	VZJ12#W TYPE RZJ12#W TYPE KDJ12#W TYPE TRJ12#W TYPE GRJ12#W TYPE	5VZ-FE 3RZ-FE 1KD-FTV 2TR-FE 1GR-FE	H14.10 ~ H21.08	02.10 ~ 09.08	TCCS	●	●	●	3,39,43,44,45,46 52,55,56,63,71, 72,102,103,119			●	
					ECT	●		●	1,2,4	1			
					EPS	●		●					
					ABS/VSC	●		●	1,2,3,55,57,60, 65,66,74	4			
					SRS	●		●					
					MAIN BODY	●		●					
					AIRCON	●		●					
	GRJ15# TYPE GDJ15# TYPE TRJ15# TYPE	1GR-FE 2TR-FE	H21.09 ~	09.09 ~	TCCS	●	●	●	1,39,43,44,45, 46,55,69,72,102, 103,119,121,122			●	
					EPS	●		●					
ABS/VSC					●		●	1,2,3,10,55,57, 59,65,66,74	4				
SRS					●		●						
MAIN BODY					●		●						
SEAT MOTOR					●		●	1	-				
METER					●		●	1~6					
AIRCON					●		●	18,20~23,27					
REGIUS	KCH40W RCH41W	1KZ-TE 3RZ-FE	H11.08 ~ H14.05	99.08 ~ 02.05	TCCS	●	●	●			●		
					ABS/VSC	●		●					
					SRS	●		●					
					MAIN BODY	●		●					
					AIRCON	●		●					
REGIUS ACE	TRH1## Sys	1TR-FE	H15.07 ~ H16.07	03.07 ~ 04.07	TCCS	●	●	●			●		
					ABS/VSC	●		●					
					SRS	●		●					
	TRH2## Sys KDH2## Sys	1TR-FE 1KD-FTV 2TR-FE	H24.05 ~	12.05 ~	TCCS	●	●	●	1,39,43,44,45,55, 63,72,102,103, 107,119,121,127			●	
					ECT	●		●	1,2,4	1			
					EPS	●		●					
					ABS/VSC	●		●	1,2,3,66				
					SRS	●		●					
					MAIN BODY	●		●					
					AIRCON	●		●	15,18,20,22,23, 27				
COLLATION	●		●	21									
REGIUS ACE VAN	TRH2## Sys KDH2## Sys	1TR-FE 1KD-FTV 2KD-FTV	H16.08 ~ H24.04	04.08 ~ 12.04	TCCS	●	●	●	1,39,43,44,45,55, 63,72,102,103, 107,119,121,127		●		
					ECT	●		●	1,2,4				
					EPS	●		●					
					ABS/VSC	●		●	1,2,3,66				
					SRS	●		●					
					MAIN BODY	●		●					
					AIRCON	●		●	15,18,20,22,23, 27				
					COLLATION	●		●	21				
LEXUS CT	ZWA10 TYPE (HV)	2ZR-FXE	H23.01 ~	11.01 ~	TCCS	●	●	●	19,39,43,45,72, 102,103,106,107, 119		●		
					HV	●	●	●	1,2,4~9				
					EPS	●		●		2			
					ABS/VSC	●	●	●	1,2,3,9,10,11,18, 34,40,45,52,53, 54,57,65,70,71, 74,75,78,80,	1,4			
					SRS	●		●					
					MAIN BODY	●		●					
					METER	●		●	1~7				
					SEAT MOTOR	●		●	1				
					AIRCON	●		●	15,18~23				
					COLLATION	●		●	2,17				
					AFS	●		●	1,2				
GS (350/430/460)	URS190 TYPE UZS190 TYPE	1UR-FSE 3UZ-FE	H17.07 ~	05.07 ~	TCCS	●	●	●	2,3,11,12,13,23, 39,43,44,45,46,		●		

1. Toyota Diagnostic Software (Ver7.8*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSP	ACTIVE TEST	WORK SUPPOR	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
GS	GWS19# TYPE GRS19# TYPE	2GR-FSE	H24.02	12.02					55,56,72,102,103 107,111~116, 119,121,122,128, 136			
					ECT	●		●	1~4	1		
					EPS	●		●		2		
					ABS/VSC	●	●	●	1,2,3,39,57,60, 65,66,74	4		
					SRS	●		●				
					MAIN BODY	●		●				
					METER	●		●	1~7			
					SEAT MOTOR	●		●	1			
					AIRCON	●		●	18~23			
					COLLATION	●		●	1~14			
	AFS	●		●	1~4							
	GRL1# TYPE AWL10 TYPE GWL10 TYPE	2GR-FSE 4GR-FSE 2AR-FSE 2GR-FXE	H24.01 ~	12.01 ~	TCCS	●	●	●	10,12,13,39,43, 44,45,46,55,63, 69,73,102,103 111~116,119, 121,122,128		●	
					EPS	●		●		2		
					ABS/VSC	●	●	●	1,2,3,10,39,55,57 65,66,74	4		
					SRS	●		●				
					MAIN BODY	●		●				
METER					●		●	1~6				
SEAT MOTOR					●		●	1				
AIRCON					●		●	18~23				
HS (250h)	ANF10 TYPE (HV)	2AZ-FXE	H21.07 ~	09.07 ~	TCCS	●	●	●	39,43,45,55,71, 72,102,103,107		●	
					HV	●	●	●	4~9	-		
					P CONTROL	●	●	●	-	-		
					EPS	●		●		1,2		
					ABS/VSC	●	●	●	1,2,3,7,18,34,39, 40,45,53,55,59, 60,65,70,71,74, 75,78	4		
					SRS	●		●				
					MAIN BODY	●		●				
					METER	●		●	1~7			
					SEAT MOTOR	●		●	1			
					AIRCON	●		●	15~18,20,23,27			
IS (250/350)	GSE20 TYPE	4GR-FSE 2GR-FSE	H17.09 ~ H25.04	05.09 ~ 13.04	TCCS	●	●	●	2,3,23,43~46,55 56,63,72,102, 103,107, 111~116,119 121,122,127		●	
					ECT	●		●	1~4	1		
					EPS	●		●		2		
					ABS/VSC	●	●	●	1,2,3,39,57,60, 65,66,74	4		
					SRS	●		●				
					MAIN BODY	●		●				
					METER	●		●	1~6			
					SEAT MOTOR	●		●	1			
					AIRCON	●		●	15,20~23			
					COLLATION	●		●	1,2,4,5,8~12			
IS (300h)	AVE30 TYPE GSE3# TYPE	2AR-FSE 2GR-FSE 4GR-FSE	H25.05 ~	13.05 ~	TCCS	●	●	●	11,12,13,19,33, 43,45,55,56,63, 71,72,73,102,103 107,111~114, 121,128,136		●	
					HV	●	●	●	4~9	-		
					EPS	●		●		2		
					ABS/VSC	●	●	●	1,10,14,15, 35~39,41~44, 46,47,55,59,62, 65,68,70,71,74, 76,78~81	1,4		
					SRS	●		●				
					MAIN BODY	●		●				
					METER	●		●	1~6			
					SEAT MOTOR	●		●	1			
					AIRCON	●		●	1~5,18~23			
					PWR SUPPLY	●		●	1			
COLLATION	●		●	2,12,15								

1. Toyota Diagnostic Software (Ver7.8*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPOR	COUPLER						
			JP CALENDAR	WESTRN CAL							COM	EXCL					
IS F	USE20	2UR-GSE	H19.10 ~ 07.10	07.10	TCCS	●	●	●	1,3,12,13,23,39,55,63,70,71,72,102~105,107,111~118,121,122,128		●						
					ECT	●		●	1~4	1							
					EPS	●		●		2							
					ABS/VSC	●	●	●	1,2,3,57,60,65,66,74,	4							
					SRS	●		●									
					MAIN BODY	●		●									
					METER	●		●	1~6								
					SEAT MOTOR	●		●	1								
					AIRCON	●		●	15,18,20~23								
					COLLATION	●		●	1,2,4,5,8~12								
					PWR SUPPLY	●		●	1,2	1							
					LFA	LFA10 TYPE	1LR-GUE	H22.12 ~ H24.12	10.12 ~ 12.12	TCCS	●	●	●	1,3,23,43~46,51,55,63,70~72,99,102,103,107,119,121,122,127,		●	
										EPS	●		●		2		
ABS/VSC	●	●	●	1,11,14,16,35~39,41~44,46,47,55,57,61,62,65,69,70,71,75,77,						2,4							
SRS	●		●														
MAIN BODY	●		●														
METER	●		●	1~6													
SEAT MOTOR	●		●	1													
AIRCON	●		●	18,20~23,27													
LS (460)	USF4# TYPE	1UR-FSE	H20.08 ~ 06.09	06.09						TCCS	●	●	●	3,10,11,12,13,19,23,36,37,39,43,45,55,56,57,63,70~72,77,81,82,83,99,102,103,104,105,121,122,111~119,127,128,136		●	
										ECT	●		●	1,2,3,4			
										ABS/VSC	●	●	●	1,2,3,5,6,11,14,16,19,20,21,22,23,24,28,29,30,31,39,46,47,55,57,59,61,66,68,70,71,75,78,79,80,81	1,2,3,4,5,11,12		
										EPS	●		●		2		
										MAIN BODY	●		●	2~6,8,11~13,24			
					SRS	●		●									
					AIRCON	●		●	1~8,9,10,11,12,13,14,15,19,23	1							
					SEAT MOTOR	●		●	1								
					METER	●		●	1~7								
					COLLATION	●		●	1,2,4~10								
					PWR SUPPLY	●		●	1	1							
					LS (600h/600hL)	UVF45 UVF46	2UR-FSE	H19.05 ~ 07.05	07.05	TCCS	●	●	●	11,12,13,39,55,63,69,87,102~105,121,111~119,122,128,136,		●	
										ABS/VSC	●	●	●	1,5,6,11,20,35~39,41~44,46,47,57,59,74,75,78~81	1,2,4,10		
EPS	●		●							2							
MAIN BODY	●		●	2~6,8,11~13,24													
SRS	●		●														
AIRCON	●		●	2,11,15,18,23						1							
SEAT MOTOR	●		●	1													
METER	●		●	1~6													
COLLATION	●		●	21													
PWR SUPPLY	●		●	1						1							
RX (270/350)	AGL10W TYPE GGL1#W TYPE	1AR-FE 2GR-FE	H21.01 ~ 09.01	09.01						TCCS	●	●	●	23,43,44,45,46,55,63,70,71,72,87,102,103,107,119,121,122		●	
										ECT	●		●	1,2,3,4	1		

1. Toyota Diagnostic Software (Ver7.8*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPOR	COUPLER				
			JP CALENDAR	WESTRN CAL							COM	EXCL			
RX HYBRID (450h)					ABS/VSC	●	●	●	1,2,3,10,39,55, 57,65,66,74	4					
					EPS	●		●		2					
					MAIN BODY	●		●							
					SRS	●		●							
					AIRCON	●		●	18,20~23,27	1					
					SEAT MOTOR	●		●	1						
					METER	●		●	1~6						
					COLLATION	●		●	2,18,19						
					PWR SUPPLY	●		●	1	1					
					CHRG CNTRL	●		●	1						
					TCCS	●	●	●	23,39,43~46, 55,70~72, 102,103,107,				●		
					HV	●	●	●	4~9	-					
					EPS	●		●		1					
					MAIN BODY	●		●							
SRS	●		●												
AIRCON	●		●	15,17~23,27											
SEAT MOTOR	●		●	1											
METER	●		●	1~7											
COLLATION	●		●	2,17,21											
TCCS	●	●	●	2,39,43~46, 55,63,71,72, 102,103,107,119		●									
ECT	●		●	1,2,3,4											
EPS	●		●		-										
ABS/VSC	●	●	●	1,2,3,55,57,60, 66,74	4										
MAIN BODY	●		●												
SRS	●		●												
AIRCON	●		●												
SEAT MOTOR	●		●	1											
METER	●		●	1~6											
AFS	●		●	1~4											
SC	UZZ40	3UZ-FE	H17.07 ~ H22.07	05.07 ~ 10.07											

1. Toyota Diagnostic Software (Ver7.8*) List of Active Test Functions

SYSTEM	No.	FUNCTION	SYSTEM	No.	FUNCTION
TCCS (ENGINE)	1	Secondary Air System	TCCS (ENGINE)	72	Fuel Cut Prohibition
	2	A/CMg Clutch Relay		73	Fuel Pump Duty
	3	ACC Cut Relay		74	Fuel Pump Relay
	4	ACM Control		75	Brake Ejector VSV
	5	AI2ASV Open APON		76	Brake Solenoid
	6	AIASV Open APON		77	Line Pressure SOL
	7	AIASV Close APON		78	Line Pressure Up Solenoid
	8	CVT Deceleration SOL		79	Return Side Solenoid Valve
	9	CVT Acceleration SOL		80	Regulator Shut-Off Valve
	10	CVT Shift Position		81	Lock-up SOL
	11	D-4S Injection Quantity Port		82	Lock-up Solenoid
	12	D-4S Injection Quantity Control		83	Lock-up Control SOL
	13	D-4S Injection Quantity Cylinder		84	Variable Intake VSV
	14	D Throttle Drive		85	Boost Pressure Control VSV
	15	ECT Shift Position		86	Cylinder Engine Revolution
	16	EGR VSV		87	Intake Control VSV
	17	EGR Cut VSV		88	Intake Control VSV 2
	18	EGR Cooler Bypass		89	Intake Air Exchange Valve Control
	19	EGR Step Count		90	Intake Air Passage Control
	20	EGR Objective Opening		91	Intake Air Flow Control
	21	EGR Objective Opening B1		92	Oil Supply Inlet
	22	Exhaust Brake VSV		93	Forced S-J Control
	23	FP Relay		94	Forced T-J Control
	24	HC Adsorption Catalyst Exchange		95	Emergency Shut-Off Valve
	25	IDL Time Fuel Cut B2		96	Integrated System Control Solenoid
	26	PB Port Ignition Stop		97	High Pressure Fuel System Inspection
	27	PB Port Injection Stop		98	High Fuel Pressure Forced Drive
	28	PB Control Ignition Stop		99	Misfire F/C Prohibition
	29	PB Control Injection Stop		100	Forward-Reverse Pressure Control
	30	PB Cylinder Ignition Stop		101	All Cylinder Injection Stop
	31	PB Cylinder Injection Stop		102	Electronic Throttle Fast
	32	PM Forced Regeneration		103	Electronic Throttle Slow
	33	S4 Solenoid		104	Electric VVT Linear B1
	34	SCV/TCV		105	Electric VVT Linear B2
	35	SCV Motor		106	Electric Water Pump
	36	SLS		107	Electric Fan
	37	SLS Drive		108	Fuel Pressure Relief Valve Open
	38	S Poisoning Regeneration		109	Fuel-Up VSV
	39	TC Terminal ON		110	Fuel Return Pipe Valve
	40	VN Turbo Opening B1		111	Fuel Injection Period #1
	41	VVT-L OCV B1		112	Fuel Injection Period #2
	42	VVT-L OCV B2		113	Fuel Injection Period #3
	43	VVT Linear Drive B1		114	Fuel Injection Period #4
	44	VVT Linear Drive B2		115	Fuel Injection Period #5
	45	VVT Control		116	Fuel Injection Period #6
	46	VVT Control 2		117	Fuel Injection Period #7
	47	V-matic Engine OFF		118	Fuel Injection Period #8
	48	V-matic Engine ON		119	Fuel Injection Quantity
	49	Rear V-matic Warm-up		120	Exhaust VVT Linear B
	50	Front V-matic Warm-up		121	Exhaust VVT Linear B1
	51	Idle-up VSV		122	Exhaust VVT Linear B2
	52	Aircon Cut		123	Exhaust Bypass Control
	53	Air Pump Heater		124	Exhaust Throttle VSV
	54	Canister Close V		125	Exhaust Exchange Valve Control
	55	Circuit Relay		126	Exhaust Exchange Valve
	56	Starter Relay		127	Power Generation Required Voltage
	57	Slip Control SOL		128	Injection Method Exchange
	58	Swirl Control VSV		129	Speed SOL1
	59	Timing Solenoid		130	Speed SOL2
	60	Tank Bypass		131	Speed Linear SOL1
	61	Diesel Throttle		132	Speed Linear SOL2
	62	Delivery Shut-Off Valve		133	Speed Linear SOL3
	63	Purge VSV		134	Speed Linear SOL4
	64	Purge Cut VSV		135	Speed Linear SOL5
	65	Purge Dilution B1		136	Objective Fuel Pressure
	66	Purge Dilution B2		1	Lock-up Solenoid
	67	Purge Blockade Valve		2	ECT Shift Position
	68	Purge Valve		3	TC Terminal ON
	69	Power Balance		4	Line Pressure Solenoid
	70	Power Balance Ignition		1	Maintenance Mode (2WD)
	71	Power Balance Injection		2	Maintenance Mode (TRC)

1. Toyota Diagnostic Software (Ver7.8*) List of Active Test Functions

SYSTEM	No.	FUNCTION	SYSTEM	No.	FUNCTION	
HV (Hybrid)	3	Maintenance Mode (4WD)	ABS/VSC	46	SMC1	
	4	External Charging Start		47	SMC2	
	5	Inverter Stop Mode		48	SMF	
	6	Cranking		49	SMR	
	7	Water Pump		50	SPFL	
	8	Cooling Fan Drive		51	SPFR	
	9	TC Terminal ON		52	SRC	
	BATTERY (Hybrid)	1		Cooling Fan Drive	53	SSC
		2		External Equalizing Charge Relay	54	SSC Valve Pattern
3		Battery Diagnosis Mode		55	TRC OFF Lamp	
Stop&Go (IDLE STOP)	1	Engine Permit Condition		56	TRC Motor Relay	
	2	Battery Permit Condition		57	VSC·HB Buzzer	
	3	External Temperature Permit Condition		58	VSC·TRC Off Lamp	
	4	S&G Permit Condition		59	VSC OFF Lamp	
	5	Buzzer		60	VSC Lamp	
Stop&Start (IDLE STOP)	1	S&S Prerequisites 2		61	Actuator Pattern Drive	
	2	S&S Aircon Permit		62	Actuator Check	
	3	S&S Brake ECU Control		63	Actuator Drive	
	4	S&S External Temperature Permit		64	Auto-LSD Indicator	
	5	S&S Battery Permit		65	Stop Lamp Relay	
	6	S&S Engine ECU Permit		66	Solenoid Relay	
	7	Oil Pump High Drive		67	Tire Air Pressure Monitor	
	8	Oil Pump Low Drive		68	Drain Pattern Drive	
	9	Buzzer Sound		69	Drain System Drive	
	10	Starter Operation		70	Power Supply Pattern Drive 1	
	11	S&S Engine Hood Starting		71	Power Supply Pattern Drive 2	
ABS/VSC	1	ABS Lamp		72	Buzzer	
	2	ABS Motor Relay		73	Pre-Charge Pump	
	3	ABS Solenoid		74	Brake Warning	
	4	ARS Warning Lamp		75	Brake Control Prohibition	
	5	BH Stand-by Indicator		76	Pump Pattern Drive	
	6	BH Hold Indicator		77	Pump Operation	
	7	DAB Indicator		78	Main Relay 1	
	8	DAC Indicator		79	Main Relay 2	
	9	DSS Buzzer		80	Motor Relay 1	
	10	EBS Relay		81	Motor Relay 2	
	11	ECB Lamp		82	Maintenance Mode	
	12	H/B Motor Relay		MAIN BODY	1	D-Seat Door Unlock
	13	PBOFF Indicator			2	Fr Foot Lamp
	14	RL Wheel Pattern Drive			3	P/W Operation Permit
	15	RL Wheel Drive			4	Illuminated Entry
	16	RR Wheel Pattern Drive			5	Indicator Color Display
	17	RR Wheel Drive			6	Auto-Dimmer Output
	18	SCC			7	Console Spot Lighting
	19	SCCS			8	Steering Lock Power Supply
	20	SC SS Valve	9		Security Horn	
	21	SFLH	10		Tail Lamp Relay	
	22	SFLR	11		Door Lock	
	23	SFRH	12		Trunk Open	
	24	SFRR	13		Hazard	
	25	SFRC	14		Front Fog Relay	
	26	SRCF	15		Head Lamp High Relay	
	27	SRCR	16		Head Lamp Low Relay	
	28	SRLH	17		Horn	
	29	SRLR	18		Rear Fog Relay	
	30	SRRH	19		Reverse Signal	
	31	SRRR	20		Rear Reading Light	
	32	SRMF	21		Wireless Buzzer	
	33	SRMR	22		Car Indoor Lamp OFF	
	34	SLA (SCC Close)	23		Vehicle Horn	
	35	SLAFL Communicating Valve Close	24		Lighting Indicator	
	36	SLAFR Communicating Valve Close	25		Impact Sensing Unlock	
	37	SLARL Communicating Valve Close	26		Intrusion Sensor ① Power Supply	
	38	SLARR Communicating Valve Close	27		Electric Mirror Storage	
	39	SLIP Lamp	28		Electric Mirror Recovery	
	40	SLR (SCC Close)	METER		1	Speedometer
	41	SLRFL Communicating Valve Close			2	Fuel Gauge
	42	SLRFR Communicating Valve Close			3	Fuel Consumption Gauge
	43	SLRRL Communicating Valve Close			4	AT Indicator
	44	SLRRR Communicating Valve Close			5	Display
	45	SMC		6	Telltale	

1. Toyota Diagnostic Software (Ver7.8*) List of Active Test Functions

SYSTEM	No.	FUNCTION	SYSTEM	No.	FUNCTION	
METER	7	Water Temperature Gauge	COLLATION (IMMOBILIZER)	1	Luggage Internal Receiver	
	8	HV System Indicator		2	Indoor Receiver	
SEAT MOTOR	1	Power Window Up/Down		3	Wireless Buzzer	
AIRCON	1	Ion Generator		4	D-Seat Transmitter	
	2	D A/M HOT		5	P-Seat Transmitter	
	3	D A/M COOL		6	RR Seat Transmitter	
	4	P A/M HOT		7	RL Seat Transmitter	
	5	P A/M COOL		8	Fr Indoor Transmitter	
	6	D Blowing FACE		9	Rr Indoor Transmitter	
	7	D Blowing FOOT		10	Luggage External Transmitter	
	8	P Blowing FACE		11	D-Seat Select	
	9	P Blowing FOOT		12	P-Seat Select	
	10	M/H Bypass HOT		13	RR Seat Select	
	11	M/H Bypass COOL		14	RL Seat Select	
	12	FrRr D-Seat A/M		15	Multi-Channel Exchange	
	13	FrRr P-Seat Blow		16	Wireless Buzzer	
	14	D-Seat Blow DEF		17	P-Seat Sensor Power Supply	
	15	Blower Volume		18	RR Seat Sensor Power Supply	
	16	Electric Fan		19	RL Seat Sensor Power Supply	
	17	Electric Water Pump		20	ENG SW Lighting Power Supply	
	18	Rear Defogger Relay		21	Immobilizer Indicator	
	19	Electric Compressor	POWER SUPPLY	1	Steering Lock Power Supply	
	20	D A/M (Pulse)		2	Indicator Color Display	
	21	P A/M (Pulse)		AUTO- LEVELING	1	Leveling Motor-Up
	22	D Blowing (Pulse)			2	Leveling Motor-Down
	23	Inlet (Pulse)			3	Left Swivel Left Motor
	24	Rear D-Seat Air Outlet			4	Left Swivel Right Motor
	25	Rr Blower Volume	5		Right Swivel Left Motor	
	26	Rr A/M (Pulse)	6		Right Swivel Right Motor	
	27	Compressor Drive V	TILT & TELESCOPE	1	Tilt	
CHARGE CNTRL	1	Power Generation Required Voltage		2	Telescope	
STARTING CONTROL	1	Starter Relay				
	2	ACC Cut Relay				

1. Toyota Diagnostic Software (Ver7.8*) List of Work Support Functions

SYSTEM	No.	FUNCTION	WORK CONTENTS
TCCS (ENGINE)	1	AT/CVT LEARNING VALUE INITIALIZATION	Performs the AT/CVT oil pressure learning. Perform during the following work. •During AT/CVT & ECU replacement
	2	CVT OIL PRESSURE LEARNING	Performs the CVT oil pressure learning. Perform during the following work. •During CVT & ECU replacement
	3	G SENSOR 0 POINT LEARNING	Learns the G sensor 0 point. Perform during the following work. •During transmission, yaw rate sensor replacement
	4	PM FORCED REGENERATION	Performs the PM forced regeneration. Perform during the following work. •When forced regeneration is necessary •When DPD lamp, engine check lamp will light.
	5	SUPPLY PUMP LEARNING VALUE INITIALIZATION	Initializes the supply pump learning value. Perform during the following work. •After supply pump, engine ECU replacement
	6	ID CODE READ•STORE	Reads & stores injector ID code. Perform during the following work. •During injector replacement
	7	ID CODE AUTO-REGISTRATION	Stores all the injectors ID codes. Perform during the following work. •During injector replacement
	8	ID CODE MANUAL REGSITRATION	Stores the cylinder injector ID code. Perform during the following work. •During injector replacement
	9	CYLINDER ID CODE CONFIRMATION	Reads & displays cylinder injector ID code. Perform during the following work. •During injector replacement
	10	MICRO-INJECTION QUANTITY COMMON LEARNING	Performs the mirco-injection quantity common learning. Perform during the following work. •During injector ASSY, engine, ECU replacement •During injector revision
	11	MICRO-INJECTION QUANTITY DETAILED LEARNING	Performs the mirco-injection quantity detail learning. Perform during the following work. •During engine ASSY, injector replacement
	12	WIDE AREA INTER-CYLINDER LEARNING INITIALIZATION	Initializes the wide area inter-cylinder revised learning value. Perform during the following work. •During engine replacement
	13	A/F SENSOR LEARNING VALUE INITIALIZATION	Initializes A/F sensor learning value. Perform during the following work. •During A/F sensor replacement
ECT	1	AT/CVT LEARNING VALUE INITIALIZATION	Performs the AT/CVT oil pressure learning. Perform during the following work. •During AT/CVT & ECU replacement
	2	CVT OIL PRESSURE LEARNING	Performs the CVT oil pressure learning. Perform during the following work. •During CVT & ECU replacement
	3	G SENSOR 0 POINT LEARNING	Learns the G sensor 0 point. Perform during the following work. •During transmission, yaw rate sensor replacement
HV	1	BATTERY CONTROL DATA INITIALIZATION	Initializes the battery control data. Perform during the following work. •During system main relay replacement
Stop & Go Stop & Start	1	STARTER OPERATION COUNT	Displays curr starter count before starter replacement.
	2	STARTER OPERATION COUNT	Sets starter operating count after starter replacement.
	3	STARTER OPERATION COUNT	Clears starter operating count after starter replacement. Perform during the following work. •During starter replacement
ABS/VSC	1	YAW RATE•G SENSOR 0 POINT	Clears the yaw rate•G sensor neutral point. Perform during the following work. •During yaw rate sensor/G sensor replacement •During ECU replacement
	2	LINEAR VALVE LEARNING VALUE INITIALIZATION	Initializes the linear valve learning value. Perform during the following work. •During brake actuator replacement •During brake pedal stroke sensor replacement •During ECU replacement
	3	ACCUMULATOR 0 DOWN DRIVE	Releases the accumulator internal pressure. Perform during the following work. •During brake actuator replacement
	4	BACK-UP MEMORY CLEAR	Performs the ECU back-up memory clearing.

1. Toyota Diagnostic Software (Ver7.8*) List of Work Support Functions

			Perform during the following work. •After linear valve offset learning
	5	AIR VENT (ECB)	Performs the brake line air vent. Perform during the following work. •During inspection, after brake fluid replacement
	6	AIR VENT (VSC)	Performs the brake line air vent. Perform during the following work. •During inspection, after brake fluid replacement
	7	BRAKE CONTROL PROHIBITION	Stops the ECB controls. Perform during the following work. •During inspection, after brake fluid replacement
	8	NORMAL AIR VENT	Performs the brake line air vent. Perform during the following work. •During inspection, after brake fluid replacement
	9	ACTUATOR DRIVE	Performs the brake system air vent. Perform during the following work. •After brake system, actuator replacement
	10	AIR VENT (HYDRO-BOOSTER)	Performs the brake line air vent. Perform during the following work. •During inspection, after brake fluid replacement
	11	VSC SYSTEM 0 POINT CLEAR	Clears the VSC learning value. Perform during the following work. •After VSC related-sensors, ECU replacement
EPS (Electric Power Steering)	1	ROTATION ANGLE SENSOR OUTPUT REVISION	Initializes the rotation angle sensor revised value. Perform during the following work. •During power steering ECU, ST actuator replacement •If there is difference in right-left steering force.
	2	STEERING 0 POINT REVISION	Initializes the steering 0 point revised value. Perform during the following work. •During power steering ECU, ST actuator replacement •If there is difference in right-left steering force.
A/C (Air Conditioner)	1	SERVO MOTOR INITIALIZATION	Initializes the servo motor ECU learning value. Perform during the following work. •During servo motor ECU replacement •During A/C amplifier replacement •During battery disconnection
POWER SUPPLY	1	POWER SUPPLY AUTO-OFF FUNCTION CANCEL	Cancels power in the auto-OFF device. Perform during the following work. •During working on long power ON status

2. Nissan Diagnostic Software (Ver5.2*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER		
			JP CALENDAR	WESTRN CAL							COM	EXCL	
180SX	RPS13 KRPS13	SR20DE SR20DET	H03.01	91.01	ENGINE	●		●				●	
			~	~	AT/CVT	●		●					
			H10.12	98.12	ABS	●		●					
AD	VAY12 BWAY12 CVAY12 VY12 BVY12 CVY12 VZNY12 BVZNY12 CVZNY12	CR12DE HR15DE HR16DE	H18.12	06.12	ENGINE	●	●	●	9,12,22,32,42, 43,48,58	6,12,14,15, 19,20	●		
			~	~	AT/CVT	●		●		1,5			
					ABS	●		●		2,13,14,15			
					AIRBAG	●							
					ELEC PwrST	●							
					BCM	●							
					IPDM E/R	●							
					Mtr/Mtr & A/C Amp	●							
					Intelligent Key	●							
			AD-MAX Van	VFGY10	GA15DE	H09.05	97.05	ENGINE	●		●		
~	~	AT/CVT				●		●					
H11.05	99.05	ABS				●		●					
AD-MAX Wagon	WFGY10	GA15DE	H07.06	95.06	ENGINE	●		●				●	
			~	~	AT/CVT	●		●					
			H08.05	96.05	ABS	●		●					
AD EXPERT	VJY12 BVJY12 CVJY12 VY12 BVY12 VZNY12 BVZNY12	HR15DE HR16DE MR18DE	H18.12	06.12	ENGINE	●	●	●	9,12,22,32,42, 43,48,58	6,12,14,15, 19,20	●		
			~	~	AT/CVT	●		●		1,5			
					ABS	●		●		2,13,14,15			
					AIRBAG	●							
					ELEC PwrST	●							
					BCM	●							
					IPDM E/R	●							
					Mtr/Mtr & A/C Amp	●							
					Intelligent Key	●							
			AD VAN	VFNY10 BVFNY10 VY10 BVY10	GA15DE GA13DE	H09.05	97.05	ENGINE	●		●		
~	~	AT/CVT				●		●					
H11.05	99.05	ABS				●		●					
VENY11 BVENY11 VEY11 BVEY11	YD22DD			H11.06	99.06	ENGINE	●		●				
				~	~	AT/CVT	●		●				
				H16.04	04.04	ABS	●		●				
VY11 BVY11 VY11 BVY11	QG13DE QG15DE QG18DE QG18DEN			H11.06	99.06	ENGINE	●		●	1,13,21,26,32,37 42,43,48,58	6,14,15,19 20	●	
				~	~	AT/CVT	●		●				
				H20.12	08.12	ABS	●		●				
					AIRBAG	●							
AD WAGON	WFNY10 BWFNY10 WFY10	GA15DE	H07.06	95.06	ENGINE	●		●				●	
			~	~	AT/CVT	●		●					
			H08.05	96.05	ABS	●		●					
GT-R	R35	VR38DETT	H19.12	07.12	ENGINE	●	●	●			●		
			~	~	AT/CVT	●		●					
					ABS	●		●					
					AIRBAG	●							
					IPDM E/R	●							
					BCM	●							
					Mtr/Mtr & A/C Amp	●							
NT100 CLIPPER (Mitsubishi Mini- cab Truck OEM)	U71T U71TP U72T	3G83	H24.01	12.01									
			~	~									
			H25.11	13.11									
NV100 CLIPPER (Mitsubishi Mini- cab Van OEM)	U71V U72V	3G83	H24.01	12.01									
			~	~									
			H25.11	13.11									
NV200 VANETTE	M20 BM20	HR16DE	H21.05	09.05	ENGINE	●	●	●	9,12,22,32,42, 43,48,58	6,14,15,19 20	●		
			~	~	AT/CVT	●		●					
					ABS	●		●		2,13,14,15			
					AIRBAG	●							
					IPDM E/R	●							
					ELEC PwrST	●							
					BCM	●							
					Mtr/Mtr & A/C Amp	●							
		Intelligent Key	●										

2. Nissan Diagnostic Software (Ver5.2*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER			
			JP CALENDAR	WESTRN CAL							COM	EXCL		
NV200 VANETTE VAN	VM20	HR16DE	H21.05	09.05	ENGINE	●	●	●	9,12,22,32,42,43,48,58	6,14,15,19,20	●			
			~	~	AT/CVT	●		●						
					ABS	●		●		2,13,14,15				
					AIRBAG	●								
					IPDM E/R	●								
					ELEC PwrST	●								
					BCM	●								
					Mtr/Mtr & A/C Amp	●								
		Intelligent Key	●											
NX COUPE	EB13 HB13	GA16DE SR18DE	H02.01	90.01	ENGINE	●		●				●		
			~	~	AT/CVT	●		●						
			H06.04	94.04	ABS	●		●						
ATLAS	SH2F23 SH4F23 SR2F23 SR4F23 SR8F23	KA20DE QD32	H16.08	04.08	ENGINE	●		●				●		
			~	~	AT/CVT	●		●						
			~	~	ABS	●		●						
			H19.05	07.05	AIRBAG	●								
	SQ1F24 SQ2F24	QR20DE	H19.06	07.06	ENGINE	●	●	●	9,12,19,23,32,42,43,48,58	1,2,4,5,6				
				~	~	AT/CVT	●	●	●		6,8,13			
						ABS	●		●					
						AIRBAG	●							
						IPDM E/R	●							
						BCM	●							
						Mtr/Mtr & A/C Amp	●							
	SZ1F24 SZ2F24 SZ4F24 SZ5F24 SZ5F24 TZ2F24 TZ3F24	ZD30DDTi	H19.06	07.06	ENGINE	●	●	●	62,64,69	23,24,27,28,29				
~				~	AT/CVT	●	●	●		6,8,13				
					ABS	●		●						
					AIRBAG	●								
					IPDM E/R	●								
					BCM	●								
					Mtr/Mtr & A/C Amp	●								
AVENIR	W10 PW10 PNW10	SR18DE SR18Di SR20DE SR20DET	H02.05	90.05	ENGINE	●		●				●		
			~	~	AT/CVT	●		●						
			H10.07	98.07	ABS	●		●						
	W11 PW11 PNW11 SW11 RW11 RNW11	QG18DE CD20ET SR20DE SR20DET	H10.08	98.08	ENGINE	●	●	●	1,13,21,32,37,42,43,48,58	6,14,15,19,20		●		
				~	~	AT/CVT	●		●					
				H17.11	05.11	ABS	●		●					
					AIRBAG	●								
WINGROAD	WFNY10 BWFNY10 WFY10 BWFY10 WHNY10 BWHNY10 WHY10	GA15DE SR18DE	H08.05	96.05	ENGINE	●		●	1,32,37,42,43,48,58	18,20		●		
			~	~	AT/CVT	●		●						
			~	~	ABS	●		●						
			H11.04	99.04	AIRBAG	●								
	WFNY11 WHNY11 WHY11 WFY11 WPY11 WRY11	QG18DE	H11.05	99.05	ENGINE	●		●	12,21,32,37,42,43,48,58	6,14,15,19		●		
				~	~	AT/CVT	●		●					
				~	~	ABS	●		●					
				H17.10	05.10	AIRBAG	●							
	Y12	HR15DE (AT)	H17.11	05.11	ENGINE	●		●	7,9,12,19,22,30,32,42,43,48,58	6,14,15,19,20				
				~	~	AT/CVT	●		●					
				~	~	ABS	●		●	2,11,12,13,14				
						AIRBAG	●							
						ELEC PwrST	●							
						BCM	●							
					IPDM E/R	●								
					Mtr/Mtr & A/C Amp	●								
					Intelligent Key	●								
HR15DE (CVT)	H17.11	05.11	~	ENGINE	●		●	7,9,12,19,22,30,32,42,43,48,58	6,14,15,19,20					
			~	~	AT/CVT	●		●		1,5,14				
			~	~	ABS	●		●	2,11,12,13,14					
			~	~	AIRBAG	●								
			~	~	ELEC PwrST	●								
			~	~										

2. Nissan Diagnostic Software (Ver5.2*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER					
			JP CALENDAR	WESTRN CAL							COM	EXCL				
	JY12 NY12	HR15DE MR18DE	H17.11 ~	05.11 ~	BCM	●										
					IPDM E/R	●										
					Mtr/Mtr & A/C Amp	●										
					Intelligent Key	●										
					ENGINE	●	●	9,12,19,22,32,42, 43,48,58	6,14,15,19 20							
					AT/CVT	●	●									
					ABS	●	●	2,11,12,13,14								
					AIRBAG	●										
					IPDM E/R	●										
					BCM	●										
Mtr/Mtr & A/C Amp	●															
EXPERT	VENW11 VEW11	YD22DD	H11.06 ~ H20.12	99.06 ~ 08.12	ENGINE	●		●				●				
					AT/CVT	●		●								
					ABS	●		●	2,11,12,13,14							
	AIRBAG	●														
	VNW11 VW11	QG18DE	H11.06 ~ H20.12	99.06 ~ 08.12	ENGINE	●		●	12,21,32,37,42, 43,48,58	6,14,15,19 20						
					AT/CVT	●		●								
ABS					●		●	2,11,12,13,14								
X-TRAIL	DNT31	M9R	H20.09 ~	08.09 ~	ENGINE	●						●				
					AT/CVT	●		●			1,5,14					
					ABS	●		●	2,11,12,13,14							
					4WD	●		●	1							
					AIRBAG	●										
					ELEC PwrST	●										
					BCM	●										
					IPDM E/R	●										
					Mtr/Mtr & A/C Amp	●										
					Intelligent Key	●										
					ENGINE	●	●	●	9,12,19,23,32, 42,43,48,58	1,2,4,5,6,						
					AT/CVT	●	●	●		6,8,13						
	ABS	●		●												
	4WD	●		●	1											
	AIRBAG	●														
	BCM	●														
	NT30 T30 PNT30	QR20DE SR20VET	H12.10 ~ H19.07	00.10 ~ 07.07	ENGINE	●	●	●	9,12,19,23,32, 42,43,48,58	1,2,4,5,6,						
					AT/CVT	●	●	●		6,8,13						
					ABS	●		●								
					4WD	●		●	1							
					AIRBAG	●										
					BCM	●										
					NT31 T31 TNT31	MR20DE QR25DE	H19.08 ~ H25.11	07.08 ~ 13.11	ENGINE	●	●	●	9,12,19,23,32, 42,43,48,58	1,2,4,5,6,		
									AT/CVT	●	●	●		6,8,13		
ABS									●		●					
4WD									●		●	1				
AIRBAG									●							
IPDM E/R									●							
BCM	●															
Mtr/Mtr & A/C Amp	●															
ELGRAND	ALE50 ALWE50 ATE50 ATWE50 ATE50 AVE50 AVWE50 AVE50 AVWE50	VG33E ZD30DDTi QD32ETi	H09.05 ~ H14.04	97.05 ~ 02.04	ENGINE	●		●				●				
					AT/CVT	●		●								
					ABS	●		●								
					AIRBAG	●										
	APE50 APWE50 APWE50	VQ35DE	H12.08 ~ H14.04	00.08 ~ 02.04	ENGINE	●	●	●	1,11,12,21,32,37, 38,42,43,48,58	14		●				
					AT/CVT	●		●								
					ABS	●		●								
					ELEC PwrST	●										
	E51 NE51 ME51 MNE51	VQ25DE VQ35DE	H14.05 ~ H22.07	02.05 ~ 10.07	ENGINE	●		●	12,21,22,32,38, 42,43,48,58	6,14,15,19 20						
					AT/CVT	●		●								
					ABS	●		●								
					AIRBAG	●										
					ELEC PwrST	●										
					IPDM E/R	●										
BCM	●															
PE52 PNE52 TE52	VQ25DE QR25DE	H22.08 ~	10.08 ~	ENGINE	●	●	●	12,21,22,32,38, 42,43,48,58	6,14,15,19 20							
				AT/CVT	●		●		1,3,5							

2. Nissan Diagnostic Software (Ver5.2*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER		
			JP CALENDAR	WESTRN CAL							COM	EXCL	
	TNE52				ABS	●	●	●	2,11,12,13,14,17,18,19,20	1,2			
					AIRBAG	●							
					IPDM E/R	●							
					Mtr/Mtr & A/C Amp	●							
OTTI (Mitsubishi eK Wagon OEM)	H91W	3G83	H17.06 ~ H18.09	05.06 ~ 06.09									
	H92W		H18.10 ~ H25.06	06.10 ~ 13.06									
KIX (Mitsubishi Pajero Mini OEM)	H59A	4A30	H20.10 ~ H24.08	08.10 ~ 12.08									
CARAVAN	CPGE24 CQGE24 VPE24 VPGE24	KA20DE KA24DE	H11.06 ~ H13.03	99.06 ~ 01.03	ENGINE	●		●				●	
					AT/CVT	●		●					
					ABS	●		●					
					AIRBAG	●		●					
	VPE25 CQGE25 DQGE25 CSGE25 DSGE25 VRE25	KA20DE KA20DE (E-LEV) KA24DE QR25DE	H13.04 ~ H24.06	01.04 ~ 12.06	ENGINE	●	●	●	9,12,19,32,42,43,48,58	6,14,15,19,20		●	
					AT/CVT	●		●					
					ABS	●		●	2,11,12,13,14				
					AIRBAG	●		●					
	CWGE25 CWMGE25 DWGE25 DWMGE25 VWE25 VWME25	ZD30DD ZD30DDTi	H13.04 ~ H24.06	01.04 ~ 12.06	ENGINE	●	●	●	62,64,69	23,24,27,28,29			
					AT/CVT	●		●					
					ABS	●		●	2,11,12,13,14				
					AIRBAG	●		●					
CARAVAN COACH	AEGE24 ARE24 ARME24 ARE24 ARMGE24 KEE24	VG30E TD27ETi	H07.08 ~ H11.06	95.08 ~ 99.06	ENGINE	●		●				●	
					AT/CVT	●		●					
					ABS	●		●					
					AIRBAG	●		●					
	QE25 QGE25 SE25 SGE25	KA24DE QR25DE	H13.11 ~ H24.06	01.11 ~ 12.06	ENGINE	●	●	●	9,12,19,32,42,43,48,58	6,14,15,19,20		●	
					AT/CVT	●		●					
					ABS	●		●	2,11,12,13,14				
					AIRBAG	●		●					
CUBE	Z10	CG13DE	H10.02 ~ H11.10	98.02 ~ 99.10	ENGINE	●						●	
					AT/CVT	●							
					ABS	●							
					AIRBAG	●							
	ANZ10 AZ10	CGA3DE	H11.11 ~ H14.09	99.11 ~ 02.09	ENGINE	●						●	
					AT/CVT	●							
					ABS	●							
					AIRBAG	●							
	BNZ11 BZ11 YZ11	CR14DE	H14.10 ~ H20.10	02.10 ~ 08.10	ENGINE	●		●					
					AT/CVT	●		●					
					ABS	●		●					
					AIRBAG	●		●					
	Z12 NZ12	HR15DE	H20.11 ~	08.11 ~	ENGINE	●		●	7,9,12,19,22,30,32,42,43,48,58	9,15,16,27,32,37,38,47,57			
					AT/CVT	●		●					
					ABS	●		●	2,11,12,13,14				
					AIRBAG	●		●					
					ELEC PwrST	●							
					BCM	●							
					IPDM E/R	●							
					Mtr/Mtr & A/C Amp	●							
CUBE CUBIC	BGZ11 YGZ11 YGNZ11	CR14DE HR15DE	H15.09 ~ H20.11	03.09 ~ 08.11	ENGINE	●		●			●		
					AT/CVT	●		●					
					ABS	●		●					
					AIRBAG	●		●					
					ELEC PwrST	●		●					
CLIPPER (Mitsubishi Mini-cab Van OEM)	U71V U72V	3G83	H15.09 ~ H24.01	03.09 ~ 12.01									
CLIPPER Truck (Mitsubishi Mini-cab Truck OEM)	U71T U71TP U72T		H15.09 ~ H24.01	03.09 ~ 12.01									

2. Nissan Diagnostic Software (Ver5.2*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
	U72TP											
CLIPPER RIO (Mitsubishi Town Box OEM)	U71W		H19.06	07.06								
	U72W		~	~								
CREW	HK30	RB20E	H06.01	94.01	ENGINE	●		●				●
	QK30	NA20P	~	~	AT/CVT	●		●				
	SK30	RD28E	H14.05	02.05	ABS	●		●				
GLORIA	Y31	VG20E	H01.06	89.06	ENGINE	●		●				●
	CY31	VG20DET	~	~	AT/CVT	●		●				
	PY31	VG30E	H03.05	91.05	ABS	●		●				
	PAY31	VG30ET										
	Y32	VG20E	H03.06	91.06	ENGINE	●		●				●
	PY32	VG30E	~	~	AT/CVT	●		●				
	PAY32	VG30DE	H07.05	95.05	ABS	●		●				
	PBY32	VG30DET										
	Y33	VG20E	H07.06	95.06	ENGINE	●		●				●
	MY33	VQ25DE	~	~	AT/CVT	●		●				
	ENY33	RB25DET	H11.05	99.05	ABS	●		●				
	PY33	VG30E			AIRBAG	●						
	HY33	VQ30DE										
	HB33	VQ30DET										
MY34	VQ25DD	H11.06	99.06	ENGINE	●		●			●		
ENY34	RB25DET	~	~	AT/CVT	●		●					
HY34	VQ30DD	H16.09	04.09	ABS	●		●					
		VQ30DET			AIRBAG	●						
GLORIA SEDAN	Y31	VG20E	H01.06	89.06	ENGINE	●		●				●
	CY31	VG20DET	~	~	AT/CVT	●		●				
	PY31	VG30E	H11.07	99.07	ABS	●		●				
	PAY31	VG30ET			AIRBAG	●						
SUNNY	EB13	GA16DE	H02.01	90.01	ENGINE	●		●				●
	HB13	SR18DE	~	~	AT/CVT	●		●				
	HNB13		H05.12	93.12	ABS	●		●				
	B14	GA13DE	H06.01	94.01	ENGINE	●		●				
	FB14	GA15DE	~	~	AT/CVT	●		●				
	FNB14	GA15DE	H10.09	98.09	ABS	●		●				
	EB14	(リ-ンパ-ン)										
	HB14	GA16DE										
		SR18DE										
	B15	QG13DE	H10.10	98.10	ENGINE	●		●				
	FB15	QG15DE	~	~	AT/CVT	●		●				
	FNB15	SR16VE	H16.05	04.05	ABS	●		●				
	JB15	QG18DD										
	QB15											
SB15	YD22DD	H11.09	99.09	ENGINE	●		●					
		~	~	AT/CVT	●		●					
		H14.04	02.04	ABS	●		●					
SUNNY CALIFORNIA	WFY10	GA15DE	H07.06	95.06	ENGINE	●		●				●
	WFNY10		~	~	AT/CVT	●		●				
			H08.04	96.04	ABS	●		●				
SAFARI	WGY60	TB42E	H03.10	91.10	ENGINE	●		●				●
			~	~	AT/CVT	●		●				
			H09.09	97.09	ABS	●		●				
	WYY61	RD28ETi	H09.10	97.10	ENGINE	●		●				
			~	~	AT/CVT	●		●				
			H11.08	99.08	ABS	●		●				
	WGY61	TB45E	H09.10	97.10	ENGINE	●		●				
			~	~	AT/CVT	●		●				
			H14.10	02.10	ABS	●		●				
	WTY61	ZD30DDTi	H11.09	99.09	ENGINE	●		●			●	
			~	~	AT/CVT	●		●				
			H14.10	02.10	ABS	●		●				
	WFGY61	TB48DE	H14.11	02.11	ENGINE	●		●				
			~	~	AT/CVT	●		●				
		H19.06	07.06	ABS	●		●					
				AIRBAG	●							
CIMA	FPY31	VG30DE	H01.08	89.08	ENGINE	●		●				●
	FPAY31	VG30DET	~	~	AT/CVT	●		●				
			H03.07	91.07	ABS	●		●				
	FPY32	VQ30DET	H03.08	91.08	ENGINE	●		●				
	FGY32	VH41DE	~	~	AT/CVT	●		●				
	FGDY32		H08.05	96.05	ABS	●		●				
	FGNY32											
	FHY33	VQ30DET	H08.06	96.06	ENGINE	●		●				
	FGY33	VH41DE	~	~	AT/CVT	●		●				
	FGDY33		H12.12	00.12	ABS	●		●				
	FGNY33				AIRBAG	●						
HF50	VQ30DET	H13.01	01.01	ENGINE	●		●	9,12,32,38,42,	6,14,15,19	●		
GF50	VK45DD	~	~					43,48,58	20			
GNF50	VK45DE	H22.07	10.07	AT/CVT	●		●					

2. Nissan Diagnostic Software (Ver5.2*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
		VK45DE			ABS	●		●				
					AIRBAG	●						
JUKE	F15 NF15 YF15	MR16DDT HR15DE	H22.06	10.06	ENGINE	●	●	●	7,9,12,19,22,30, 32,42,43,48,58	6,14,15,19 20	●	
			~	~	AT/CVT	●		●		1,5		
					ABS	●	●	●	2,11,12,13,14			
					AIRBAG	●						
					ELEC PwrST	●						
					BCM	●						
					IPDM E/R	●						
					Mtr/Mtr & A/C Amp	●						
SILVIA	KPS13 PS13	SR20DE SR20DET	H03.01	91.01	ENGINE	●		●				●
			~	~	AT/CVT	●		●				
			H05.09	93.09	ABS	●		●				
			~	~	ENGINE	●		●				
	CS14 S14	SR20DE SR20DET	H05.10	93.10	AT/CVT	●		●				
			~	~	ABS	●		●				
	S15	SR20DE SR20DET	H11.01	99.01	ENGINE	●		●				
			~	~	AT/CVT	●		●				
			H14.08	02.08	ABS	●		●				
			~	~	AIRBAG	●						
SYLPHY	TB17	MRA8DE	H24.12	12.12	ENGINE	●	●	●	9,12,19,22,32,38, 41,42,43,48,58	6,12,14,15,19 20	●	
			~	~	AT/CVT	●	●	●		1,3,5,7,11,12		
					ABS	●	●	●	2,11,12,13,14, 17,18,19,20	2		
					AIRBAG	●						
					ELEC PwrST	●						
					BCM	●						
					IPDM E/R	●						
					Mtr/Mtr & A/C Amp	●						
					HVAC	●						
					ENGINE	●						
SKYLINE	FR32 ER32 ECR32 HR32 HCR32 HNR32	CA18i RB20DE RB20DET	H01.05	89.05	ENGINE	●		●				●
			~	~	AT/CVT	●		●				
			H05.07	93.07	ABS	●		●				
			~	~	AIRBAG	●						
			~	~	HICAS	●		●				
	ER33 ECR33 ENR33 HR33	RB25DE RB25DET	H05.08	93.08	ENGINE	●		●				
			~	~	AT/CVT	●		●				
			H10.04	98.04	ABS	●		●				
			~	~	AIRBAG	●						
	ENR34 ER34 HR34	RB25DE RB25DET	H10.05	98.05	ENGINE	●		●				●
			~	~	AT/CVT	●		●				
			H13.05	01.05	ABS	●		●				
	V35 NV35 HV35 PV35	VQ25DD VQ30DD VQ35DE	H13.06	01.06	ENGINE	●	●	●	11,12,17,21,26,31, 42,43,48,58	6,14,15,19 20	●	
			~	~	AT/CVT	●		●				
			H18.10	06.10	ABS	●		●	2,11,12,13,14			
			~	~	AIRBAG	●						
			~	~	ELEC PwrST	●						
	V36 NV36 PV36 KV36	VQ25HR VQ35HR VQ37VHR	H18.11	06.11	ENGINE	●	●	●	9,19,32,41,42, 43,48,58	6,14,15,19 20		
			~	~	AT/CVT	●		●				
			H25.10	13.10	ABS	●		●	2,11,12,13,14,17,2			
~			~	AIRBAG	●							
~			~	BCM	●							
~			~	Mtr/Mtr & A/C Amp	●							
~			~	ENGINE	●	●	●	9,19,32,41,42, 43,48,58	6,14,15,19 20			
HV37 HNV37	VQ35HR	H25.11	13.11	AT/CVT	●		●					
		~	~	ABS	●		●	2,11,12,13,14,17,2				
		~	~	AIRBAG	●							
		~	~	BCM	●							
		~	~	Mtr/Mtr & A/C Amp	●							
		~	~	ENGINE	●		●					
		~	~	AT/CVT	●		●					
		~	~	ABS	●		●					
SKYLINE GT-R	BNR32	RB26DETT	H01.08	89.08	ENGINE	●		●				●
			~	~	AT/CVT	●		●				
			H06.12	94.12	ABS	●		●				
	BCNR33	RB26DETT	H07.01	95.01	ENGINE	●		●				
			~	~	AT/CVT	●		●				
			H10.12	98.12	ABS	●		●				
	BNR34	RB26DETT	H11.01	99.01	AIRBAG	●						
			~	~	ENGINE	●		●				
			~	~	AT/CVT	●		●				

2. Nissan Diagnostic Software (Ver5.2*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER			
			JP CALENDAR	WESTRN CAL							COM	EXCL		
			H14.08	02.08	ABS	●		●						
					AIRBAG	●								
SKYLINE GT-R SEDAN	BCNR33		H10.01	98.01	ENGINE	●		●				●		
			~	~	AT/CVT	●		●						
			H10.02	98.02	ABS	●		●						
					AIRBAG	●								
SKYLINE COUPE	HR32 HCR32 HNR32 ECR32	RB20DE RB20DET RB25DE	H01.05	89.05	ENGINE	●		●				●		
			~	~	AT/CVT	●		●						
			H05.07	93.07	ABS	●		●						
					AIRBAG	●								
			HICAS	●		●								
	HR33 ER33 ENR33 ECR33	RB20E RB25DE RB25DET	H05.08	93.08	ENGINE	●		●						
			~	~	AT/CVT	●		●						
			H10.04	98.04	ABS	●		●						
					AIRBAG	●								
			HICAS	●		●								
	HR34 ENR34 ER34	RB20DE RB25DE RB25DET	H10.05	98.05	ENGINE	●		●						
			~	~	AT/CVT	●		●						
			H13.05	01.05	ABS	●		●						
					AIRBAG	●								
			HICAS	●		●								
	CPV35	VQ35DE	H15.01	03.01	ENGINE	●		●				●		
~			~	AT/CVT	●		●							
H19.09			07.09	ABS	●		●							
				AIRBAG	●									
				IPDM E/R	●									
CKV36	VQ37VHR	H19.10	07.10	ENGINE	●		●							
		~	~	AT/CVT	●		●							
				ABS	●		●							
				AIRBAG	●									
				BCM	●									
				IPDM E/R	●									
		Mtr/Mtr & A/C Amp	●											
SKYLINE CROSSOVER	J50 NJ50	VQ37VHR	H21.07	09.07	ENGINE	●		●				●		
			~	~	AT/CVT	●		●						
					ABS	●		●						
					AIRBAG	●								
					BCM	●								
					IPDM E/R	●								
		Mtr/Mtr & A/C Amp	●											
STAGE A	WHC34 WGC34 WGNC34 WGNC34	RB20DE RB25DE RB25DET	H08.09	96.09	ENGINE	●		●				●		
			~	~	AT/CVT	●		●						
			H13.09	01.09	ABS	●		●						
					AIRBAG	●								
M35 NM35 HM35 PM35 PNM35	VQ25DD VQ25DET VQ30DD VQ35DE	H13.10	01.10	ENGINE	●	●	●	4,11,12,17,21,26,33,36,43,45,48,58	4,6,14,15,19,20		●			
		~	~	AT/CVT	●		●							
		H19.06	07.06	ABS	●		●	2,11,12,13,14,17,18,19						
				AIRBAG	●									
CEDRIC	Y31 CY31 PAY31 PY31	VG20E VG20DET VG30E VG30ET	H01.06	89.06	ENGINE	●		●				●		
			~	~	AT/CVT	●		●						
			H03.05	91.05	ABS	●		●						
					AIRBAG	●								
	Y32 PY32 PY32 PAY32 PBY32	VG20E VG30E VG30DE VG30DET	H03.06	91.06	ENGINE	●		●						
			~	~	AT/CVT	●		●						
			H07.05	95.05	ABS	●		●						
	Y33 MY33 ENY33 PY33 HY33 HBY33	VG20E VQ25DE RB25DET VQ30DE VQ30DET	H07.06	95.06	ENGINE	●		●						
			~	~	AT/CVT	●		●						
			H11.05	99.05	ABS	●		●						
					AIRBAG	●								
	MY34 ENY34 HY34	VQ25DD RB25DET VQ30DD VQ30DET	H11.06	99.06	ENGINE	●		●				●		
			~	~	AT/CVT	●		●						
			H16.09	04.09	ABS	●		●						
				AIRBAG	●									
CEDRIC SEDAN	Y31 CY31 UY31 PAY31 PY31	VG20E VG20DET RD28E VG30E VG30ET	H01.06	89.06	ENGINE	●		●				●		
			~	~	AT/CVT	●		●						
			H14.05	02.05	ABS	●		●						

2. Nissan Diagnostic Software (Ver5.2*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER		
			JP CALENDAR	WESTRN CAL							COM	EXCL	
	BJY31 CBJY31 QJY31	VG20P NA20P	H14.06 ~	02.06 ~	ENGINE AT/CVT ABS	● ● ●		● ● ●			●		
CEFIRO	A31 CA31 ECA31 EA31 LA31 LCA31 LA31 LNA31 NA31	RB20E RB20DE RB20DET RB25DE	H02.08 ~	90.08 ~	ENGINE AT/CVT	● ●		● ●				●	
			H04.04 ~	92.04 ~	ABS	●		●					
	A32 PA32 HA32	VQ20DE VQ25DE VQ30DE	H06.08 ~	94.08 ~	ENGINE AT/CVT	● ●		● ●					
			H10.11 ~	98.11 ~	ABS	●		●					
	A33 PA33	VQ20DE VQ25DD	H10.12 ~	98.12 ~	ENGINE AT/CVT ABS	● ● ●		● ● ●	1,17,21,26,32,37, 38,42,43,48,58	6,14,15,19 20		●	
			H15.02 ~	03.02 ~	AIRBAG	●		●	2,11,12,13,14				
	CEFIRO WAGON	WA32 WPA32 WHA32	VQ20DE VQ25DE VQ30DE	H09.06 ~	97.06 ~	ENGINE AT/CVT	● ●		● ●				●
				H12.07 ~	00.07 ~	ABS	●		●				
SERENA	KAJC23	GA16DE	H06.05 ~	94.05 ~	ENGINE AT/CVT ABS	● ● ●		● ● ●	37,57	12		●	
			H08.12 ~	96.12 ~									
	KBC23 KBCC23 KBNC23	SR20DE	H06.05 ~	94.05 ~	ENGINE AT/CVT	● ●		● ●	37,57	12			
			H11.05 ~	99.05 ~	ABS	●		●					
	KVC23 KVNC23	CD20ET	H09.01 ~	97.01 ~	ENGINE AT/CVT ABS	● ● ●		● ● ●	37,57	12			
			H11.05 ~	99.05 ~									
	PC24 PNC24	SR20DE	H11.06 ~	99.06 ~	ENGINE AT/CVT ABS	● ● ●		● ● ●	12,21,22,32,42, 43,48,58	6,14,15,19 20		●	
			H13.11 ~	01.11 ~	AIRBAG	●		●					
	RC24 TC24 TNC24	QR25DE QR20DE	H13.12 ~	01.12 ~	ENGINE AT/CVT ABS	● ● ●		● ● ●	12,21,22,32,42, 43,48,58	6,14,15,19 20			
			H17.04 ~	05.04 ~	AIRBAG	●		●					
	VC24 VNC24	YD25DDTi	H11.06 ~	99.06 ~	ENGINE AT/CVT ABS	● ● ●		● ● ●					
			H13.11 ~	01.11 ~	AIRBAG	●		●					
C25 SC25 CC25 CNC25 NC25 SNC25	MR20DE	H17.05 ~	05.05 ~	ENGINE AT/CVT ABS	● ● ●	●	● ● ●	7,9,12,19,22,30, 32,42,43,48,58	7,13,15,19 20				
		H22.10 ~	10.10 ~	AIRBAG	●		●	2,11,12,13,14	1,5				
				ELEC PwrST	●								
				BCM	●								
				IPDM E/R	●								
				Mtr/Mtr & A/C Amp	●								
				Intelligent Key	●								
				Auto-Slide Door	●								
				HVAC	●								
		C26 SC26 FC26 FNC26 NC26 FNC26 SNC26	MR20DD	H22.11 ~	10.11 ~	ENGINE AT/CVT ABS	● ● ●	●	● ● ●	9,11,18,19,32,41, 42,43,58,59	1,2,6,12,13 14,15,16,23 24		
				AIRBAG	●		●	1,3,5,7,11,12					
				ELEC PwrST	●								
				BCM	●								
				IPDM E/R	●								
				Mtr/Mtr & A/C Amp	●								
				Auto-Slide Door	●								
				HVAC	●								
DATSUN	LFD22 LFMD22 LPD22			KA24DE KA24E KA20DE	H11.06 ~	99.06 ~	ENGINE AT/CVT ABS	● ● ●		● ● ●			
		H14.07 ~	02.08 ~										

2. Nissan Diagnostic Software (Ver5.2*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER		
			JP CALENDAR	WESTRN CAL							COM	EXCL	
TEANA	PD22 J31 TNJ31 PJ31	VQ23DE QR25DE VQ35DE	H15.02 ~ H20.05	03.02 ~ 08.05	AIRBAG	●						●	
					ENGINE	●	●	●	12,21,32,37,42, 43,48,58	6,14,15,19, 20			
					AT/CVT	●		●					
					ABS	●		●					
					AIRBAG	●							
	J32 PJ32 TNJ32	VQ25DE	H20.06 ~ H26.01	08.06 ~ 14.01	ENGINE	●	●	●	9,11,18,19,32,41, 42,43,58,59	1,2,6,12,13 14,15,16,23 24			
					AT/CVT	●	●	●		1,5			
					ABS	●	●	●	2,11,12,13,14, 17,18,19,20	2			
					AIRBAG	●							
					BCM	●							
					IPDM E/R	●							
					Mtr/Mtr & A/C Amp	●							
					HVAC	●							
	TIIDA	C11	HR15DE (AT)	H16.09 ~ H24.08	04.09 ~ 12.08	ENGINE	●	●	●	7,9,12,19,22,30, 32,42,43,48,58	6,14,15,19 20	●	
AT/CVT						●		●					
ABS						●		●	2,11,12,13,14				
AIRBAG						●							
ELEC PwrST						●							
BCM						●							
IPDM E/R						●							
Mtr/Mtr & A/C Amp						●							
Intelligent Key						●							
ENGINE						●	●	●	7,9,12,19,22,30, 32,42,43,48,58	6,14,15,19 20			
AT/CVT						●		●		1,5,14			
ABS						●		●	2,11,12,13,14				
AIRBAG						●							
ELEC PwrST						●							
BCM		●											
IPDM E/R		●											
Mtr/Mtr & A/C Amp		●											
Intelligent Key		●											
JC11		MR18DE	H17.01 ~ H22.07	05.01 ~ 10.07	ENGINE	●	●	●	9,12,19,22,32,42, 43,48,58	6,14,15,19 20			
					AT/CVT	●		●		1,5,14			
					ABS	●		●	2,11,12,13,14				
					AIRBAG	●							
					ELEC PwrST	●							
					BCM	●							
					IPDM E/R	●							
					Mtr/Mtr & A/C Amp	●							
					Intelligent Key	●							
					ENGINE	●	●	●	7,9,12,19,22,32, 42,43,48,58	1,2,6,10,12 13,14,15,20 23,24			
	AT/CVT				●		●		1,5				
	ABS				●	●	●	11,12,13,14	1,2				
	AIRBAG				●								
	ELEC PwrST				●								
BCM	●												
IPDM E/R	●												
Mtr/Mtr & A/C Amp	●												
Intelligent Key	●												
TIIDA LATIO	SC11	HR15DE (AT)	H16.10 ~ H24.10	04.10 ~ 12.10	ENGINE	●	●	●	7,9,12,19,22,30, 32,42,43,48,58	6,14,15,19 20	●		
					AT/CVT	●		●					
					ABS	●		●	2,11,12,13,14				
					AIRBAG	●							
					ELEC PwrST	●							
					BCM	●							
					IPDM E/R	●							
					Mtr/Mtr & A/C Amp	●							
					Intelligent Key	●							

2. Nissan Diagnostic Software (Ver5.2*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
	HR15DE (CVT)	H16.10 ~ H24.10	04.10 ~ 12.10	ENGINE	●	●	●	7,9,12,19,22,30,32,42,43,48,58	6,14,15,19,20			
				AT/CVT	●		●		1,5,14			
				ABS	●		●	2,11,12,13,14				
				AIRBAG	●							
				ELEC PwrST	●							
				BCM	●							
				IPDM E/R	●							
	Mtr/Mtr & A/C Amp	●										
	Intelligent Key	●										
	SJC11	MR18DE	H17.01 ~ H22.07	05.01 ~ 10.07	ENGINE	●	●	●	9,12,19,22,32,42,43,48,58	6,14,15,19,20		
					AT/CVT	●		●		1,5,14		
					ABS	●		●	2,11,12,13,14			
					AIRBAG	●						
					ELEC PwrST	●						
					BCM	●						
					IPDM E/R	●						
	Mtr/Mtr & A/C Amp	●										
	Intelligent Key	●										
	SNC11	HR15DE	H16.10 ~ H24.10	04.10 ~ 12.10	ENGINE	●	●	●	7,9,12,19,22,32,42,43,48,58	1,2,6,10,12,13,14,15,20,23,24		
					AT/CVT	●		●		1,5		
					ABS	●	●	●	11,12,13,14	1,2		
AIRBAG					●							
ELEC PwrST					●							
BCM					●							
IPDM E/R					●							
Mtr/Mtr & A/C Amp	●											
Intelligent Key	●											
TINO	HV10 V10	SR20DE QG18DE	H10.12 ~ H15.03	98.12 ~ 03.03	ENGINE	●		●			●	
					AT/CVT	●		●				
					ABS	●		●				
					AIRBAG	●						
DAYZ (Mitsubishi eK Wagon OEM)	B21W	3B20	H25.06 ~	13.06 ~								
DAYZ ROOX (Mitsubishi eK Space OEM)	B21A	3B20	H26.02 ~	14.02 ~								
DUALIS	J10 KJ10 KNJ10 NJ10	MR20DE	H19.05 ~ H26.03	07.05 ~ 14.03	ENGINE	●	●	●	7,9,12,22,30,32,42,43,48,58	6,14,15,19,20	●	
					AT/CVT	●		●		1,5		
					ABS	●		●	2,11,12,13,14,17,18,19,20			
					AIRBAG	●						
					ELEC PwrST	●						
					BCM	●						
					IPDM E/R	●						
Mtr/Mtr & A/C Amp	●											
Intelligent Key	●											
TERRANO	LR50 LUR50 PR50 RR50 TR50	VG33E TD27ETi QD32ETi ZD30DDTi	H07.09 ~ H14.08	95.09 ~ 02.08	ENGINE	●		●				
					AT/CVT	●		●				
					ABS	●		●				
					AIRBAG	●						
TERRANO REGULUS	JLR50 JLUR50 JRR50 JTR50	VG33E QD32ETi ZD30DDTi	H08.08 ~ H14.08	96.08 ~ 02.08	ENGINE	●		●			●	
					AT/CVT	●		●				
					ABS	●		●				
					AIRBAG	●						
NOTE	E11 NE11	HR15DE	H17.01 ~ H24.08	05.01 ~ 12.08	ENGINE	●	●	●	7,9,12,19,22,30,32,42,43,48,58	6,14,15,19,20	●	
					AT/CVT	●		●		1,5,14		
					ABS	●		●	2,11,12,13,14			
					AIRBAG	●						
					ELEC PwrST	●						
					BCM	●						
					IPDM E/R	●						
Mtr/Mtr & A/C Amp	●											

2. Nissan Diagnostic Software (Ver5.2*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
	E12	HR12DDR HR12DE	H24.09 ~	12.09 ~	Intelligent Key	●						
					ENGINE	●	●	●	7,9,22,30,32,41,42,43,48,58,59	1,2,6,10,12,13,14,15,20,23,24		
					AT/CVT	●		●		1,5		
					ABS	●	●	●	11,12,13,14	1		
					AIRBAG	●						
					ELEC PwrST	●						
					BCM	●						
					IPDM E/R	●						
					Mtr/Mtr & A/C Amp	●						
	NE12	HR12DE	H24.09 ~	12.09 ~	ENGINE	●	●	●	7,9,12,19,22,32,42,43,48,58	1,2,6,10,12,13,14,15,20,23,24		
					AT/CVT	●		●		1,5		
					ABS	●	●	●	11,12,13,14	1,2		
					AIRBAG	●						
					ELEC PwrST	●						
					BCM	●						
					IPDM E/R	●						
					Mtr/Mtr & A/C Amp	●						
					Intelligent Key	●						
	ZE11	HR16DE	H20.09 ~ H24.08	08.09 ~ 12.08	ENGINE	●	●	●	7,9,12,19,22,42,30,32,43,48,58	6,14,15,19,20		
					AT/CVT	●		●		1,5,14		
					ABS	●		●	2,11,12,13,14			
					AIRBAG	●						
					ELEC PwrST	●						
					BCM	●						
					IPDM E/R	●						
					Mtr/Mtr & A/C Amp	●						
					Intelligent Key	●						
BASSARA	JHU30 JNU30 JU30	VQ30DE KA24DE	H11.11 ~ H15.06	99.11 ~ 03.06	ENGINE	●		●				●
					AT/CVT	●		●				
					ABS	●		●				
	JU30 JTNU30 JTU30 JVNU30 JVU30	QR25DE YD25DDTi	H11.11 ~ H13.08	99.11 ~ 01.08	ENGINE	●		●				●
					AT/CVT	●		●				
					ABS	●		●				
VANETTE (Mazda Bongo OEM)	SK22MN SK22VN SK82MN SK82VN SKF2MN SKF2VN SKP2MN	R2 F8 L8	H11.06 ~ H24.05	99.06 ~ 12.05								
VANETTE SERENA	KAJC23 KBC23 KBCC23 KBC23 KBNC23	GA16DE SR20DE SR20DE	H03.06 ~ H06.04	91.06 ~ 94.04	ENGINE	●		●	37,57	12		●
					AT/CVT	●		●				
					ABS	●		●				
VANETTE Truck (Mazda Bongo OEM)	SK22LN SK22TN SK82LN SK82TN SKF2LN SKF2TN SKP2LN SKP2TN	R2 F8 RF L8	H11.06 ~ H26.03	99.06 ~ 14.03								
PULSAR	EN14 HN14 RNN14	GA16DE SR18DE SR20DET	H02.08 ~ H06.12	90.08 ~ 94.12	ENGINE	●		●				●
					AT/CVT	●		●				
					ABS	●		●				
					AIRBAG	●						
PULSAR SEDAN	EN14 EN15 FN15 FNN15 HN14 HN15 JN15	GA16DE GA15DE SR18DE SR16VE	H02.08 ~ H12.09	90.08 ~ 00.09	ENGINE	●		●				●
					AT/CVT	●		●				
					ABS	●		●				
					AIRBAG	●						

2. Nissan Diagnostic Software (Ver5.2*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
PULSAR SERIE	EN15	GA16DE	H07.01	95.01	ENGINE	●		●				●
	FN15	GA15DE	~	~	AT/CVT	●		●				
	FNN15	SR18DE	H12.06	00.06	ABS	●		●				
	HN15 JN15	SR16VE			AIRBAG	●						
PULSAR SERIE S-RV	FN15	GA15DE	H08.05	96.05	ENGINE	●		●				●
	FNN15	SR18DE	~	~	AT/CVT	●		●				
	HNN15	SR16VE	H11.06	99.06	ABS	●		●				
	JN15				AIRBAG	●						
PINO (Suzuki Alto OEM)	HG24S	K6A	H19.01 ~ H22.02	07.01 ~ 10.02								
FUGA	Y50 PY50 PNY50 GY50	VQ25DE VQ25HR VQ35DE VQ35HR VK45DE	H16.10 ~ H21.10	04.10 ~ 09.10	ENGINE	●	●	●	9,11,19,22,32,38, 30,32,43,48,58, 59	6,14,15,19, 20,22	●	
					AT/CVT	●		●				
					ABS	●		●	2,11,12,13,14			
					AIRBAG	●						
					BCM	●						
					IPDM E/R	●						
					Mtr/Mtr & A/C Amp	●						
	Intelligent Key	●										
	Y51 KNY51 KY51	VQ25HR VQ37VHR	H21.11 ~ ~	09.11 ~ ~	ENGINE	●	●	●	9,11,19,22,32,38, 41,42,43,48,58, 59	6,14,15,19, 20,22		
					AT/CVT	●		●				
					ABS	●		●	2,11,12,13,14, 17,18,19,20	1,2		
					AIRBAG	●						
					BCM	●						
					IPDM E/R	●						
Mtr/Mtr & A/C Amp					●							
Intelligent Key	●											
FAIRLADY Z	CZ32 GCZ32 GZ32	VG30DETT VG30DE	H01.07 ~ H12.08	89.07 ~ 00.08	ENGINE	●		●				●
					AT/CVT	●		●				
					ABS	●		●				
	Z33	VQ35DE VQ35HR	H14.07 ~ H20.11	02.07 ~ 08.11	ENGINE	●	●	●	9,11,19,22,32,38, 41,42,43,48,58, 59	6,14,15,19, 20,22	●	
					AT/CVT	●		●				
					ABS	●		●	2			
					AIRBAG	●						
	Z34	VQ37VHR	H20.12 ~ ~	08.12 ~ ~	ENGINE	●	●	●	9,11,19,22,32,38, 41,42,43,48,58, 59	6,14,15,19, 20,22		
					AT/CVT	●		●				
					ABS	●		●	2			
AIRBAG					●							
BCM					●							
FAIRLADY Z CONVERTIBLE	HZ32	VG30DE	H04.08 ~ H10.09	92.08 ~ 98.09	ENGINE	●		●				●
					AT/CVT	●		●				
					ABS	●		●				
					AIRBAG	●						
					BCM	●						
FAIRLADY Z ROADSTAR	HZ33	VQ35DE VQ35HR	H15.10 ~ H18.12 H20.11	03.10 ~ 06.12 08.11	ENGINE	●	●	●	9,11,19,22,32,38, 41,42,43,48,58, 59	6,14,15,19, 20,22	●	
					AT/CVT	●		●				
					ABS	●		●	2			
					AIRBAG	●						
					BCM	●						
	HZ34	VQ37VHR	H21.10 ~ ~	09.10 ~ ~	ENGINE	●	●	●	9,11,19,22,32,38, 41,42,43,48,58, 59	6,14,15,19, 20,22		
					AT/CVT	●		●				
					ABS	●		●	2			
					AIRBAG	●						
					BCM	●						
IPDM E/R	●											
PRIMERA	HNP10	SR20DE	H02.02	90.02	ENGINE	●		●				●

2. Nissan Diagnostic Software (Ver5.2*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER		
			JP CALENDAR	WESTRN CAL							COM	EXCL	
	HP10	SR18Di	~	~	AT/CVT	●		●					
	P10	SR18DE	H07.08	95.08	ABS	●		●					
	HNP11	SR20DE	H07.09	95.09	ENGINE	●		●	1,21,26,32,37,42,43,48,58				
	HP11	SR20VE	~	~									
	P11	SR18DE	H12.12	00.12	AT/CVT	●		●					
	QP11	QG18DD			ABS	●		●					
			QG18DE			AIRBAG	●						
	HP12	SR20VE	H13.08	01.08	ENGINE	●		●	1,21,26,32,37,42,43,48,58		●		
	RP12	QR25DD	~	~									
	TNP12	QR20DE	H17.12	05.12	AT/CVT	●		●					
					ABS	●		●					
					AIRBAG	●							
PRIMERA CAMINO	HNP11	SR20DE	H07.09	95.09	ENGINE	●		●	1,21,26,32,37,42,43,48,58			●	
	HP11	SR20VE	~	~									
	P11	SR18DE	H11.04	99.04	AT/CVT	●		●					
					ABS	●		●					
					AIRBAG	●							
	QP11	QG18DD	H10.09	98.09	ENGINE	●		●	1,21,26,32,37,42,43,48,58		●		
		QG18DE	~	~									
			H11.04	99.04	AT/CVT	●		●					
					ABS	●		●					
					AIRBAG	●							
PRIMERA CAMINO WAGON	WHNP11	SR20DE	H09.09	97.09	ENGINE	●		●	1,21,26,32,37,42,43,48,58			●	
	WHP11	SR20VE	~	~									
	WP11	SR18DE	H12.12	00.12	AT/CVT	●		●					
					ABS	●		●					
					AIRBAG	●							
	WP11	SR18DE	H09.09	97.09	ENGINE	●		●	1,21,26,32,37,42,43,48,58		●		
		QG18DD	~	~									
		QG18DE	H12.12	00.12	AT/CVT	●		●					
					ABS	●		●					
					AIRBAG	●							
PRIMERA HATCHBACK	FHP10	SR20DE	H03.10	91.10	ENGINE	●		●				●	
			~	~									
			H07.08	95.08	AT/CVT	●		●					
					ABS	●		●					
	FHP11	SR20DE	H09.02	97.02	ENGINE	●		●	1,21,26,32,37,42,43,48,58			●	
			~	~									
			H10.12	98.12	AT/CVT	●		●					
					ABS	●		●					
					AIRBAG	●							
PRIMERA WAGON	WHNP11	SR20DE	H09.09	97.09	ENGINE	●		●	1,21,26,32,37,42,43,48,58			●	
		SR20VE	~	~									
	WHP11		H12.12	00.12	AT/CVT	●		●					
					ABS	●		●					
					AIRBAG	●							
	WQP11	QG18DD	H10.09	98.09	ENGINE	●		●	1,21,26,32,37,42,43,48,58				
			QG18DE	~	~								
				H12.12	00.12	AT/CVT	●		●				
						ABS	●		●				
						AIRBAG	●						
	WHP12	SR20VE	H13.08	01.08	ENGINE	●		●	1,21,26,32,37,42,43,48,58				
	WRP12	QR25DD	~	~									
WTNP12	QR20DE	H17.11	05.11	AT/CVT	●		●						
				ABS	●		●						
					AIRBAG	●							
BLUEBIRD	ENU12	SR18Di	H01.10	89.10	ENGINE	●		●				●	
	EU12	SR18Di	~	~									
	HNU12	SR20DE	H03.08	91.08	AT/CVT	●		●					
					ABS	●		●					
	ENU13	SR18DE	H03.09	91.09	ENGINE	●		●	1,32,37,42,43,48,58	15,18,20			
	EU13	SR20DE	~	~									
	HNU13	SR20DET	H07.12	95.12	AT/CVT	●		●					
					ABS	●		●					
	ENU14	SR18DE	H08.01	96.01	ENGINE	●		●	1,32,37,42,43,48,58	18,20			
	EU14	SR20DE	~	~									
	HNU14	SR20VE	H13.08	01.08	AT/CVT	●		●					
					ABS	●		●					
						AIRBAG	●						
	QU14	QG18DD	H10.09	98.09	ENGINE	●		●	1,21,26,32,37,42,43,48,58	15,18,20	●		
	SU14	QG18DE	~	~									
		CD20E	H13.08	01.08	AT/CVT	●		●					
					ABS	●		●					
					AIRBAG	●							
BLUEBIRD ARX	ENU13	SR18DE	H03.09	91.09	ENGINE	●		●	1,32,37,42,43,48,58	15,18,20		●	
	EU13	SR20DE	~	~									
	EUU13	KA24DE	H07.12	95.12	AT/CVT	●		●					
	HNU13				ABS	●		●					
	PU13												

2. Nissan Diagnostic Software (Ver5.2*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER				
			JP CALENDAR	WESTRN CAL							COM	EXCL			
BLUEBIRD OG	SU13	SR20DE	H03.05	91.05	ENGINE	●		●				●			
	HAU12		~	~	AT/CVT	●		●							
			H03.08	91.08	ABS	●		●							
BLUEBIRD SYLPHY	FG10	QG15DE	H12.08	00.08	ENGINE	●	●	●	7,9,12,19,22,30,32,42,43,48,58	6,14,15,19,20	●				
	QG10	QG18DE	~	~	AT/CVT	●		●							
	QG10	QR20DD	H24.12	12.12	ABS	●		●	2,11,12,13,14						
	QNG10	MR20DE			AIRBAG	●									
	TG10				ELEC PwrST	●									
	G11				BCM	●									
	NG11				IPDM E/R	●									
	KG11				Intelligent Key	●									
	BLUEBIRD HARD TOP	ENU12	SR18Di	H01.10	89.10	ENGINE	●		●			●			
EU12		SR20DE	~	~	AT/CVT	●		●							
HNU12		SR20DET	H03.08	91.08	ABS	●		●							
PRAIRIE	HM11	KA24E	H02.09	90.09	ENGINE	●		●			●				
	HNM11		~	~	AT/CVT	●		●							
			H07.07	95.07	ABS	●		●							
PRAIRIE JOY	PM11	SR20DE	H07.08	95.08	ENGINE	●		●			●				
	PNM11		~	~	AT/CVT	●		●							
			H10.10	98.10	ABS	●		●							
PRAIRIE LIBERTY	PM12	SR20DE	H10.11	98.11	ENGINE	●		●			●				
	PNM12	SR20DET	~	~	AT/CVT	●		●							
		H13.04	01.04	ABS	●		●								
PRESAGE	NU30	KA24DE	H10.06	98.06	ENGINE	●		●			●				
	U30	QR25DE	~	~	AT/CVT	●		●							
	TNU30	VQ30DE	H15.05	03.05	ABS	●		●							
	TU30				AIRBAG	●									
	HU30														
	VNU30	VU30	YD25DDTi	H10.06	98.06	ENGINE	●		●						
				~	~	AT/CVT	●		●						
				H13.07	01.07	ABS	●		●						
	TNU31	QR25DE	H15.06	03.06	ENGINE	●	●	●	1,9,12,22,32,42,43,48,58	6,14,15,19,20					
	TU31	VQ35DE	~	~	AT/CVT	●		●		1,5					
	PNU31		H21.07	09.07	ABS	●		●	2,11,12,13,14						
	PU31				AIRBAG	●									
				BCM	●										
				IPDM E/R	●										
				Intelligent Key	●										
				Auto-Slide Door	●										
PRESIDENT	PGF50	VK45DE	H15.10	03.10	ENGINE	●	●	●	11,12,21,32,38,42,43,48,58	6,14,15,19,20	●				
			~	~	AT/CVT	●		●							
			H22.06	10.06	ABS	●		●	2						
					AIRBAG	●									
PRESEA	HR10	SR20DE	H02.06	90.06	ENGINE	●		●				●			
			~	~	AT/CVT	●		●							
			SR18Di	H06.12	94.12	ABS	●		●						
	HR11	SR20DE	SR18DE	H07.01	95.01	ENGINE	●		●						
			~	~	AT/CVT	●		●							
			R11	GA15DE	H11.08	99.08	ABS	●		●					
HOMY COACH	AEGE24	VG30E	H07.08	95.08	ENGINE	●		●	1,32,42,43,48,58	15,18,20		●			
			~	~	AT/CVT	●		●							
			H09.04	97.04	ABS	●		●							
	ARE24	TD27ETi	ARME24	H07.08	95.08	ENGINE	●		●	1,6,7					
			~	~	AT/CVT	●		●							
			ARMGE24	H09.04	97.04	ABS	●		●						
MARCH	K11	CG10DE	H04.01	92.01	ENGINE	●		●		14		●			
			HK11	CG13DE	~	~	AT/CVT	●		●					
			~	~	ABS	●		●							
	AK11	CGA3DE	CGA3DE	H11.11	99.11	ENGINE	●		●			●			
			~	~	AT/CVT	●		●							
			H14.02	02.02	ABS	●		●							
	K12	AK12	CR10DE	H14.03	02.03	ENGINE	●		●	7,9,12,19,22,30,32,42,43,48,58	9,15,16,27,32,37,38,47,57				
				~	~	AT/CVT	●		●						
				BK12	CR12DE	~	~	ABS	●		●	2,11,12,13,14			
				BNK12	CR14DE	~	~	AIRBAG	●						
				YK12	HR15DE	~	~	ELEC PwrST	●						
						H22.06	10.06	BCM	●						
				IPDM E/R	●										
				Mtr/Mtr	●										

2. Nissan Diagnostic Software (Ver5.2*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER		
			JP CALENDAR	WESTRN CAL							COM	EXCL	
	K13 NK13	HR12DE	H22.07 ~ H22.06	10.07 ~ 10.06	& A/C Amp								
					Intelligent Key	●							
					ENGINE	●		●	7,9,12,19,22,30, 32,42,43,48,58	6,14,15,19 20			
					AT/CVT	●		●		1,5			
					ABS	●		●	2,11,12,13,14				
					AIRBAG	●							
					ELEC PwrST	●							
					BCM	●							
					IPDM E/R	●							
					Mtr/Mtr & A/C Amp	●							
Intelligent Key	●												
MARCH BOX	WK11 WAK11	CG10DE CGA3DE	H11.11 ~ H14.02	99.11 ~ 02.02	ENGINE	●		●			●		
					AT/CVT	●		●					
					ABS	●		●					
MARCH CABRIOLET	FHK11	CG13DE	H09.08 ~ H10.10	97.08 ~ 98.10	ENGINE	●		●				●	
					AT/CVT	●		●					
					ABS	●		●					
MICRA C+C	FHZK12	HR16DE	H19.06 ~ H22.08	07.06 ~ 10.08	ENGINE	●		●	9,12,22,32,42, 43,48,58	6,14,15,19 20	●		
					AT/CVT	●		●					
					ABS	●		●	2,11,12,13,14				
					AIRBAG	●							
					ELEC PwrST	●							
					BCM	●							
MAXIMA	PJ30	VE30DE	H03.08 ~ H05.12	91.08 ~ 93.12	ENGINE	●		●				●	
					AT/CVT	●		●					
					ABS	●		●					
MISTRAL	KR20 R20	TD27BETi	H09.01 ~ H11.02	97.01 ~ 99.02	ENGINE	●		●				●	
					AT/CVT	●		●					
					ABS	●		●					
MURANO	PNZ50 PZ50 TZ50	VQ35DE QR25DE	H16.09 ~ H20.08	04.09 ~ 08.08	ENGINE	●		●	9,12,22,32,42, 43,48,58	6,14,15,19 20	●		
					AT/CVT	●		●					
					ABS	●		●	2,11,12,13,14				
					AIRBAG	●							
					BCM	●							
					IPDM E/R	●							
	Mtr/Mtr & A/C Amp	●											
	Intelligent Key	●											
	PNZ51 TNZ51 TZ51	QR25DE VQ35DE	H20.09 ~ ~	08.09 ~ ~	ENGINE	●		●	9,12,22,32,42, 43,48,58	6,14,15,19 20			
					AT/CVT	●		●					
					ABS	●		●	2,11,12,13,14				
					AIRBAG	●							
					BCM	●							
IPDM E/R					●								
Mtr/Mtr & A/C Amp					●								
Intelligent Key	●												
MOCO (Suzuki MR Wagon OEM)	MG21S MG22S MG33S	K6A R06A	H14.04 ~ H23.01 ~ H23.02	02.04 ~ 11.01 ~ 11.02									
RASHEEN	RFNB14 RHNB14 RKNB14	GA15DE SR18DE SR20DE	H06.12 ~ H12.08	94.12 ~ 00.08	ENGINE	●		●				●	
					AT/CVT	●		●					
					ABS	●		●					
LA FESTA	B30 NB30	MR20DE	H16.12 ~ H24.12	04.12 ~ 12.12	ENGINE	●		●	7,9,12,19,30,32, 42,43,48,58	6,14,15,19 20		●	
					AT/CVT	●		●					
					ABS	●		●	2,11,12,13,14				
					AIRBAG	●							
					ELEC PwrST	●							
					BCM	●							
					IPDM E/R	●							
					Mtr/Mtr & A/C Amp	●							
Intelligent Key	●												
LA FESTA HIGHWAY STAR (Mazda Premacy OEM)	CWEAWN CWEFVN	LF-VE LF-VD LF-VDS	H23.06 ~ H25.02	11.06 ~ 13.02									

2. Nissan Diagnostic Software (Ver5.2*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER			
			JP CALENDAR	WESTRN CAL							COM	EXCL		
LARGO	VW30 VNW30 W30 VW30 CW30 NCW30 NW30	CD20ETi KA24DE	H05.05	93.05	ENGINE	●		●				●		
			~	~	AT/CVT	●		●						
			H11.05	99.05	ABS	●		●						
LEAF	ZE0	EM61	H22.12	10.12	AT/CVT	●	●	●				●		
			~	~	HV Battery	●	●	●						
			H24.10	12.10	CHARGER	●	●	●						
					Motor Cntrl	●	●	●						
					Shift	●								
					ABS	●	●	●						
					EHS/PKB	●		●						
					BRAKE	●								
					ELEC PwrST	●								
					AIRBAG	●								
					BCM	●								
					IPDM E/R	●								
					Mtr/Mtr & A/C Amp	●								
					HVAC	●								
					Telematics	●								
		AZE0	EM57	H24.11	12.11	AT/CVT	●	●	●					
	~			~	HV Battery	●	●	●						
					CHARGER	●	●	●						
					Motor Cntrl	●	●	●						
					Shift	●								
					ABS	●	●	●						
					EHS/PKB	●		●						
					BRAKE	●								
					ELEC PwrST	●								
					AIRBAG	●								
LIBERTY	RM12 RNM12	QR20DE	H13.05	01.05	ENGINE	●		●				●		
			~	~	AT/CVT	●		●						
			H16.11	04.11	ABS	●		●						
					AIRBAG	●								
ROOX (Suzuki Palette OEM)	ML21S	K6A	H21.12	09.12										
			~	~										
			H24.05	12.05										
LUCINO	EN15 FN15 FNN15 HN15 JN15	GA15DE GA16DE SR16VE SR18DE	H07.01	95.01	ENGINE	●		●				●		
			~	~	AT/CVT	●		●						
			H12.08	00.08	ABS	●		●						
					AIRBAG	●								
LUCINO S-RV	FN15 FNN15 JN15 HNN15	GA15DE SR16VE SR18DE	H08.05	96.05	ENGINE	●		●				●		
			~	~	AT/CVT	●		●						
			H12.08	00.08	ABS	●		●						
					AIRBAG	●								
LUCINO COUPE	FB14 HB14 JB14	GA15DE SR18DE SR16VE	H06.05	94.05	ENGINE	●		●				●		
			~	~	AT/CVT	●		●						
			H11.04	99.04	ABS	●		●						
					AIRBAG	●								
RNESSA	N30 NN30 PNN30	SR20DE SR20DET KA24DE	H09.10	97.10	ENGINE	●		●				●		
			~	~	AT/CVT	●		●						
			H13.12	01.12	ABS	●		●						
LEOPARD	JY33 JMY33 JENY33 JPY33 JHY33 JHBY33	VG20E VQ25DE RB25DET VG30E VQ30DE VQ30DET	H09.10	97.10	ENGINE	●		●				●		
			~	~	AT/CVT	●		●						
			H12.12	00.12	ABS	●		●						
LEOPARD JFERRIE	JPY32 JGBY32	VG30DE VH41DE	H04.06	92.06	ENGINE	●		●				●		
			~	~	AT/CVT	●		●						
			H08.02	96.02	ABS	●		●						
LAUREL	FC33 HC33 HCC33 EC33 ECC33	CA18i RB20E RB20DET RB25DE	H03.01	91.01	ENGINE	●		●				●		
			~	~	AT/CVT	●		●						
			H04.12	92.12	ABS	●		●						
	HC34	RB20E	H05.01	93.01	ENGINE	●		●						

2. Nissan Diagnostic Software (Ver5.2*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
	GC34	RB20DE	~	~	AT/CVT	●		●				
	GCC34	RB25DE	H09.05	97.05	ABS	●		●				
	GNC34	RB25DET										
	HC35	RB20DE	H09.06	97.06	ENGINE	●		●				
	GC35	RB25DE	~	~	AT/CVT	●		●				
	GNC35	RB25DET	H14.12	02.12	ABS	●		●				
	GCC35	RD28E			AIRBAG	●						
	SC35											

2. Nissan Diagnostic Software (Ver5.2*) List of Active Test Functions

SYSTEM	No.	FUNCTION	SYSTEM	No.	FUNCTION	
ENGINE	1	AAC Valve Opening	ENGINE	72	Throttle ON/OFF SV B	
	2	EAI Control S/V		73	Swirl Control S/V 1	
	3	EGR Cut S/V		74	Swirl Control S/V 2	
	4	EGR Control (Mode 1)		75	Pressure Regulator	
	5	EGR Control (Mode 3)		76	Radiator Fan	
	6	EGR Control S/V		AT/CVT	1	CVT Oil Cooler Fan Circuit
	7	EGR Control Valve			2	Shift Solenoid A
	8	ETC-ISC Revision Quantity			3	Shift Solenoid B
	9	EVAP Purge S/V			4	Shift Solenoid C
	10	FICD S/V			5	Shift Solenoid D
	11	FPCM			6	Shift Solenoid E
	12	V/T Indicated Angle	ABS	1	ABS/4WD Communication	
	13	V/T Control S/V		2	ABS Motor	
	14	Idling Stop		3	ABS Warning Lamp	
	15	Idle Count Adjustment		4	ASCD Output Signal	
	16	Idle Revision S/V		5	ETS Solenoid	
	17	Engine Mounting		6	SLIP Lamp	
	18	Alternator Voltage		7	TCS Fuel Signal	
	19	Alternator Pwr Generation Var Control		8	TK ATSTRSA ABS	
	20	Canister Drain Cut S/V		9	VDC Warning Lamp	
	21	Canister Control S/V		10	Rear ABS S/V	
	22	Cooling Fan		11	Rear-Right (RR) ABS S/V	
	23	Cooling Fan Duty		12	Rear-Left (RL) ABS S/V	
	24	Sub-Fuel Control S/V		13	Front-Right (FR) ABS S/V	
	25	Sub-Fuel Pump Relay		14	Front-Left (FL) ABS S/V	
	26	Swirl Control S/V		15	Both Rear ABS S/V	
	27	Swirl Control V B1		16	Both Front ABS S/V	
	28	Swirl Control V B2		17	Rear-Right (RR) ABS SV-ACT	
	29	Tumble Control Valve Open/Close		18	Rear-Left (RL) ABS SV-ACT	
	30	Tumble Control Valve Open/Close		19	Front-Right (FR) ABS SV-ACT	
	31	Valve Timing Control S/V		20	Front-Left (FL) ABS SV-ACT	
	32	Power Balance		21	Both Rear ABS SV-ACT	
	33	Power Balance Mode 1		22	Both Front ABS SV-ACT	
	34	Power Balance Mode 3	4WD	1	ET Solenoid	
	35	Fuel Return Valve	SuperHicas	1	Pseudo Running	
	36	Pressure Regulator				
	37	Radiator Fan				
	38	Variable Intake S/V				
	39	Variable Intake S/V 2				
	40	Boost Pressure Control				
	41	Intake Side V/T Angle				
	42	Coolant				
	43	Ignition Timing				
	44	Ignition Timing FB Fixed				
	45	Ignition Timing - Mode 1				
	46	Ignition Timing - Mode 3				
	47	Fuel Pressure Control S/V				
	48	Fuel Pump Relay				
	49	Fuel Pump Relay 2				
	50	Fuel Pump Relay 3				
	51	Fuel Temperature				
	52	Fuel Shut-Off Valve				
	53	Fuel Shut-Off Valve 1				
	54	Fuel Shut-Off Valve 2				
	55	Fuel Shut-Off Valve 3				
	56	Fuel Injection				
	57	Fuel Injection Period				
	58	Fuel Injection Quantity				
	59	Exhaust Side V/T Angle				
	60	EGR S/V A				
	61	EGR S/V B				
	62	EGR/V Opening				
	63	EGR Control C/V				
	64	ETC Opening				
	65	Inter-cooler Fan				
	66	Inter-cooler Pump				
	67	Engine Mounting				
	68	Cooling Fan				
	69	Glow Relay				
	70	Glow Relay 2				

2. Nissan Diagnostic Software (Ver5.2*) List of Active Test Functions

SYSTEM	No.	FUNCTION	SYSTEM	No.	FUNCTION
	71	Throttle ON/OFF SV A			

2. Nissan Diagnostic Software (Ver5.2*) List of Work Support Functions

SYSTEM	No.	FUNCTION	WORK CONTENTS
ENGINE	1	ECM EXCHANGE DURING DATA STORING	Stores the recorded data in the ECM into the DT. Perform during the following work. •If ECM is replaced.
	2	ECM EXCHANGE DURING DATA WRITING	Writes the stored data from the DT into the ECM. Perform during the following work. •After ECM is replaced.
	3	M/T NEUTRAL POSITION LEARNING	Does the shift lever neutral position learning. Perform during the following work. •If gear lever position sensor is replaced. •If ECM is replaced. •If N shift position indicator continues to flash/blink.
	4	V/T ADJUSTMENT	Adjusts the V/T. Perform during the following work. •When adjusting the V/T
	5	VVEL POSITION SENSOR	Adjusts the VVEL position sensor. Perform during the following work. •When adjusting the VVEL position sensor
	6	IDLING SPEED REVISION	Revises the idle speed. Perform during the following work. •When revising the idle speed
	7	IDLING OBJECTIVE SPEED	Sets the objective idle speed. Perform during the following work. •When setting the objective idle speed
	8	ENGINE RE-START SYSTEM OPERATION COUNTER CLEAR	Clears the engine re-start system operation counter. Perform during the following work. •If starter motor is replaced.
	9	SUB-BATTERY DISCHARGE CURRENT INTEGRATED VALUE CLEAR	Clears sub-battery discharge current integrated value. Perform during the following work. •If sub-battery is replaced.
	10	STARTER OPERATION COUNT CLEAR	Clears the starter motor operation count. Perform during the following work. •If starter motor is replaced.
	11	SUPERCHARGER MAGNET CLUTCH ENGAGEMENT COUNT CLEAR	Clears supercharger magnet clutch engagement count. Perform during the following work. •If supercharger magnet clutch is replaced.
	12	THROTTLE FULLY-CLOSED POSITION LEARNING	Does the throttle fully-closed position learning. Perform during the following work. •If electronic control throttle desorption is done. •If ECM harness connector desorption is done. •If internal electronic control throttle is cleaned.
	13	BATTERY DISCHARGE CURRENT INTEGRATED VALUE CLEAR	Clears the battery discharge current integrated value. Perform during the following work. •If battery is replaced.
	14	INTAKE AIR QUANTITY LEARNING	Does the intake air quantity learning during idling. Perform during the following work. •If electronic control throttle or ECM is replaced. •During idling speed, or ignition timing is out of standards
	15	AIR-FUEL RATIO LEARNING CLEAR	Returns A/F ratio feedback revision coefficient to initial setting. Perform during the following work. •If auto-learning control value is cleared.
	16	AIR-FUEL RATIO INITIAL LEARNING	Does the air-fuel ratio learning during idling. Perform during the following work. •IF ECM is replaced. •If electronic control throttle is replaced. •If air-flow meter is replaced. •If fuel injector is replaced. •If air-fuel ratio sensor 1 is replaced.
	17	IGNITION TIMING FIXED	Fixes the ignition timing. Perform during the following work. •When fixing the ignition timing
	18	IGNITION TIMING ADJUSTMENT	Adjusts the ignition timing. Perform during the following work. •When adjusting the objective ignition timing
	19	IGNITION TIMING REVISION	Revises the objective ignition timing. Perform during the following work. •When revising the objective ignition timing
	20	FUEL PRESSURE REMOVAL	Stops the fuel pump. Perform during the following work. •When removing the fuel pressure from the fuel line.
	21	FUEL SYSTEM INSPECTION	Performs the fuel system inspection. Perform during the following work.

2. Nissan Diagnostic Software (Ver5.2*) List of Work Support Functions

			•When performing the fuel system inspection
22	EXHAUST SIDE V/T ADJUSTMENT	Adjusts the exhaust side V/T. Perform during the following work. •When adjusting the exhaust side VT	
23	CLEAR DURING DPF EXCHANGE	Clears the DPF learning value. Perform during the following work. •If it will be replaced with new DPF.	
24	DPF REGENERATION	Regenerates the DPF. Perform during the following work. •IF ECM is replaced. •If A/F ratio sensor1 heater is ON during insp, repair. •In case of PM over-accumulation •If DPF manual regeneration SW display does not turn-OFF, even if manual regeneration is implemented •If DTC P2002 is inspected.	
25	EGR V/POS LEARNING CLEAR	Clears EGR control valve fully-closed position learning value. Perform during the following work. •If EGR control valve desorption is done, replaced.	
26	PTO REGISTRATION	Records the PTO revised value in the ECM. Perform during the following work. •When storing the PTO revised value in the ECM.	
27	INJECTOR LEARNING VALUE CLEAR	Clears the fuel injector learning value. Perform during the following work. •If fuel injector is replaced.	
28	INJECTOR REVISION VALUE REGISTRATION	Records the fuel injector revised value in the ECM. Perform during the following work. •If fuel injector is replaced. •IF ECM is replaced.	
29	THROTTLE FULLY-CLOSED POSITION LEARNING CLEAR	Clears the throttle valve fully-closed position learning value. Perform during the following work. •If electronic throttle control desorption is done, replaced.	
30	AIR-FUEL RATIO SENSOR LEARNING VALUE CLEAR	Clears the air-fuel ratio sensor learning value. Perform during the following work. •If air-fuel ratio sensor 1 is replaced. •If second-hand ECM is replaced.	
31	AIR-FUEL RATIO LEARNING VALUE CLEAR	Clears the air-fuel ratio learning value. Perform during the following work. •If fuel injector is replaced. •If air flow sensor is replaced.	
32	EXHAUST GAS PRESSURE SENSOR LEARNING CLEAR	Clears the exhaust gas pressure sensor learning value. Perform during the following work. •If exhaust gas pressure sensor is replaced.	
AT/CVT	1	CVTF PERFORMANCE CHECK	Displays the CVTF performance data. Perform during the following work. •When checking if CVT fluid replacement is necessary
	2	EEPROM CLEAR CHECK	Checks if EEPROM has been cleared. Perform during the following work. •If EEPROM is cleared.
	3	G SENSOR CALIBRATION	Records the G sensor calibration data. Perform during the following work. •If G sensor desorption is done or replaced. •If TCM is replaced. •If control valve is replaced.合 •If transmission ASSY is replaced. •If TCM calibration data is cleared.
	4	ECO MODE RESET FUNCTION	Resets to ECO-mode default status. Perform during the following work. •When resetting the ECO-mode
	5	ENGINE BRAKE ADJUSTMENT	Sets the auto-engine brake control. Perform during the following work. •When adjusting the engine brake
	6	GEAR POSITION ADJUSTMENT	Adjusts & records the actuator operation range. Perform during the following work. •When adjusting the gear position
	7	CALIBRATION DATA CLEAR	TCM clears the stored calibration data. Perform during the following work. •If transmission ASSY is replaced.
	8	CLUTCH TOUCH POINT ADJUSTMENT	Adjusts & records the clutch touch point. Perform during the following work. •When adjusting the clutch touch point
	9	CLUTCH POINT LEARNING	Does the clutch meet point learning. Perform during the following work.

2. Nissan Diagnostic Software (Ver5.2*) List of Work Support Functions

			•When doing the clutch point learning
	10	FORWARD CLUTCH POINT LEARNING	Does the clutch point learning. Perform during the following work. •When doing the forward clutch point learning.
	11	LEARNING VALUE CLEAR	TCM clears the stored learning value. Perform during the following work. •If trans-axle ASSY is replaced.
	12	MEMORY DATA CLEAR	Performs the calibration data & learning value clearing. Perform during the following work. •If trans-axle ASSY is replaced.
	13	MAXIMUM CLUTCH STROKE MEASUREMENT	Measures the maximum clutch stroke. Perform during the following work. •When measuring the maximum clutch stroke
	14	ELECTRIC OIL PUMP AIR VENT	Implements the electric oil pump air vent. Perform during the following work. •If trans-axle ASSY is replaced. •If air enters the internal sub-strainer
	15	INTERNAL DATA INITIALIZATION	Initializes the internal data. Perform during the following work. •When initializing the internal data
ABS	1	FRONT-REAR G SENSOR CALIBRATION	Performs yaw rate/lateral/front-rear G sensor calibration. Perform during the following work. •If ABS actuator C/U desorption is done, replaced.
	2	STEERING ANGLE SENSOR ADJUSTMENT	Performs the steering angle sensor neutral point adjustment. Perform during the following work. •If ABS actuator C/U is replaced. •If steering angle sensor desorption is done, replaced. •If steering component's desorption is done, replaced. •If suspension component's desorption is done, replaced. •If wheel alignment is adjusted.

3. Honda Diagnostic Software (Ver6.1*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER		
			JP CALENDAR	WESTRN CAL							COM	EXCL	
CR-V	RD1 RD2	B20B	H07.10	95.10	PGM-FI	●		●				●	
			~	~	AT	●		●					
			H13.08	01.08	ABS/VSA	●			●				
					SRS	●			●				
	RD4 RD5 RD6 RD7 RE3 RE4	K20A K24A	H13.09	01.09	PGM-FI	●		●				●	
			~	~	AT	●		●					
			H23.11	11.11	ABS/VSA	●			●				
					SRS	●			●				
	RM1 RM4	R20A K24A	H23.12	11.12	PGM-FI	●	●	●	11,12				
			~	~	AT	●		●					
					ABS/VSA	●			●	1,2,3,4			
					SRS	●			●				
CR-X DEL SOL	EG1 EG2 EJ4	B16A D15B D16A	H07.10	95.10	PGM-FI	●		●				●	
			~	~	AT	●		●					
			H10.12	98.12	ABS/VSA	●			●				
					SRS	●			●				
					EPS	●			●				
CR-Z	ZF1	LEA	H22.02	10.02	PGM-FI	●	●	●	11,12			●	
			~	~	IMA	●	●	●					
			H24.08	12.08	AT	●			●				
					ABS/VSA	●			●	1,2,3,4			
					SRS	●			●				
	ZF2	LEA	H24.09	12.09	PGM-FI	●	●	●	11,12				
			~	~	IMA	●	●	●					
					AT	●			●				
					ABS/VSA	●			●	1,2,3,4			
					SRS	●			●				
HR-V	GH1	D16A	H10.09	98.09	PGM-FI	●		●				●	
			~	~	AT	●		●					
			H17.12	05.12	ABS/VSA	●			●				
					SRS	●			●				
					EPS	●			●				
MDX	YD1	J35A	H15.03	03.03	PGM-FI	●		●				●	
			~	~	AT	●		●					
			H18.03	06.03	ABS/VSA	●			●				
					SRS	●			●				
					EPS	●			●				
N BOX	JF1 JF2	S07A	H23.12	11.12	PGM-FI	●	●	●	7,8,11,12,1,14,15	1,2,3		●	
			~	~	AT	●	●	●	1,2	1			
					ABS/VSA	●			●	1,2,3,4,5,6,7,8	1		
					SRS	●			●				
N BOX+	JF1 JF2	S07A	H23.12	11.12	PGM-FI	●	●	●	7,8,11,12,1,14,15	1,2,3		●	
			~	~	AT	●	●	●	1,2	1,2			
					ABS/VSA	●			●	1,2,3,4,5,6,7,8	1		
					SRS	●			●				
N ONE	JG1 JG2	S07A	H24.11	12.11	PGM-FI	●	●	●	7,8,11,12,1,14,15	1,2,3		●	
			~	~	AT	●	●	●	1,2	1,2			
					ABS/VSA	●			●	1,2,3,4,5,6,7,8	1		
					SRS	●			●				
N WGN	JH1 JH2	S07A	H25.11	13.11	PGM-FI	●	●	●	7,8,11,12,1,14,15	1,2,3		●	
			~	~	AT	●	●	●	1,2				
					ABS/VSA	●			●	1,2,3,4,5,6,7,8	1		
					SRS	●			●				
NSX	NA1 NA2	C30A C32B	H07.03	95.03	PGM-FI	●		●				●	
			~	~	AT	●		●					
			H17.12	05.12	ABS/VSA	●			●				
					SRS	●			●				
					EPS	●			●				
NSX-R	NA1	C32B	H14.05	02.05	PGM-FI	●		●				●	
			~	~	AT	●		●					
			H17.12	05.12	ABS/VSA	●			●				
					SRS	●			●				
S2000	AP1 AP2	F20C F22C	H11.04	99.04	PGM-FI	●		●				●	
			~	~	AT	●		●					
			H21.06	09.06	ABS/VSA	●			●				
					SRS	●			●				
S-MX	RH1 RH2	B20B	H08.11	96.11	PGM-FI	●		●				●	
			~	~	AT	●		●					
			H14.01	02.01	ABS/VSA	●			●				
					SRS	●			●				
Z	PA1	E07Z	H10.10	98.10	PGM-FI	●		●				●	
			~	~	AT	●		●					

3. Honda Diagnostic Software (Ver6.1*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
			H14.01	02.01	ABS/VSA	●		●				
					SRS	●		●				
					EPS	●						
AVANCIER	TA1	F23A	H11.09 ~ H15.06	99.09 ~ 03.06	PGM-FI	●		●			●	
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●						
ACTY Truck	HA3 HA4	E07A E07Z	H06.01 ~ H11.04	94.01 ~ 99.04	PGM-FI	●		●				●
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●						
	HA6 HA7	E07Z	H11.05 ~ H21.11	99.05 ~ 09.11	PGM-FI	●		●			●	
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
	HA8 HA9	E07Z	H21.12 ~ ~	09.12 ~ ~	PGM-FI	●		●				
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●						
ACTY Van	HH3 HH4	E07A	H06.01 ~ H11.05	94.01 ~ 99.05	PGM-FI	●		●				●
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
	HH5 HH6	E07Z	H11.06 ~ ~	99.06 ~ ~	PGM-FI	●		●			●	
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
ACCORD	CD3 CD4 CD5 CD6	F18B F20B F22B H22A	H05.05 ~ H09.08	93.05 ~ 97.08	PGM-FI	●		●				●
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
	CF3 CF4 CF5 CL1 CL3 CL7 CL8 CL9	F18B F20B H22A K20A K24A R20A	H09.09 ~ H20.11	97.09 ~ 08.11	PGM-FI	●		●			●	
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
	CU2 CU1	K24A R20A	H20.12 ~ H25.03	08.12 ~ 13.03	PGM-FI	●		●				
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
ACCORD	CD7 CD8	F22B H22A	H06.03 ~ H09.08	94.03 ~ 97.08	PGM-FI	●		●				●
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
アコードツアラー	CW2 CW1	K24A R20A	H20.12 ~ H25.03	08.12 ~ 13.03	PGM-FI	●		●			●	
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
ACCORD WAGON	CE1 CF2	F22B H22A	H06.03 ~ H09.09	94.03 ~ 97.09	PGM-FI	●		●				●
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
	CF6 CF7 CH9 CL2 CH2 CM2 CM3 CM1	F23A H23A K20A K24A	H09.10 ~ H20.12	97.10 ~ 08.12	PGM-FI	●		●			●	
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
ASCOT	CE4 CE5	G20A G25A	H05.10 ~ H09.08	93.10 ~ 97.08	PGM-FI	●		●				●
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
INSIGHT	ZE1	ECA-MF2	H11.09 ~ H18.06	99.09 ~ 06.06	PGM-FI	●		●			●	
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				

3. Honda Diagnostic Software (Ver6.1*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
	ZE2 ZE3	LDA LEA	H21.02 ~ H26.03	9.02 ~ 14.03	PGM-FI	●	●	●	1,5,6,8,10,11,12, 14,15			
					IMA	●	●	●				
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●						
INSPIRE	UA1 UA2 UA3	C32A G20A G25A	H07.02 ~ H10.09	95.02 ~ 98.09	PGM-FI	●		●				●
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
	CP3 UA4 UA5 UC1	J25A J30A J32A J35A	H10.10 ~ H24.09	98.10 ~ 12.09	PGM-FI	●		●				●
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
INTEGRA	DA6 DC1 DC2	B16A B18C ZC	H03.10 ~ H13.06	91.10 ~ 01.06	PGM-FI	●		●				●
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
	DC5	K20A	H13.07 ~ H18.06	01.07 ~ 06.06	PGM-FI	●		●				●
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
INTEGRA SJ	EK3	D15B D15B (SOHC VTEC)	H08.03 ~ H13.12	96.03 ~ 01.12	PGM-FI	●		●				●
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
	EK3	D15B (SOHC)	H11.07 ~ H13.12	99.07 ~ 01.12	PGM-FI	●		●				●
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
INTEGRA SEDAN	DA8 DB1 DB6 DB7 DB8 DB9	B16A B16B B18B B18C ZC	H03.10 ~ H13.06	91.10 ~ 01.06	PGM-FI	●		●				●
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
INTEGRA Type	DC2	B18C	H07.10 ~ H13.06	95.10 ~ 01.06	PGM-FI	●		●				●
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
					PGM-FI	●		●				
	DC5	K20A	H13.07 ~ H18.06	01.07 ~ 06.06	ABS/VSA	●		●				●
					SRS	●		●				
					EPS	●		●				
					PGM-FI	●		●				
					ABS/VSA	●		●				
INTEGRA Type SEDAN	DB8	B18C	H07.10 ~ H13.06	95.10 ~ 01.06	PGM-FI	●		●				●
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
					PGM-FI	●		●				
VEZEL	RU1 RU2	L15B	H25.12 ~	13.12 ~	PGM-FI	●	●	●	1,3,4,7,8,10~15	1,2		●
					AT	●		●				
					ABS/VSA	●		●	1,2,3,4			
					SRS	●		●				
					PGM-FI	●	●	●	1,3,4,7,8,10~15	1,2		●
VEZEL HYBRID	RU3 RU4	LEB	H25.12 ~	13.12 ~	IMA	●	●	●	2	1		●
					AT	●		●				
					ABS/VSA	●		●	1,2,3,4			
					SRS	●		●				
					PGM-FI	●		●				
AIRWAVE	GJ1 GJ2	L15A	H17.04 ~ H22.08	05.04 ~ 10.08	AT	●		●				●
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
					PGM-FI	●		●				
EDIX	BE1 BE2 BE3 BE4 BE8	D17A K20A K24A	H16.07 ~ H21.08	04.07 ~ 09.08	AT	●		●				●
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
					PGM-FI	●		●				
ELYSION	RR1	K24A	H16.05 ~ H25.10	04.05 ~ 13.10	AT	●		●				●
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
					PGM-FI	●		●				
ELEMENT	YH2	K24A	H15.04	03.04	PGM-FI	●		●				●

3. Honda Diagnostic Software (Ver6.1*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER					
			JP CALENDAR	WESTRN CAL							COM	EXCL				
			~ H17.07	~ 05.07	AT	●		●								
					ABS/VSA	●		●								
					SRS	●										
					EPS	●										
ODYSSEY	RA1 RA2 RA3 RA4 RA5	F22B F23A J30A	H06.10 ~ H11.11	94.10 ~ 99.11	PGM-FI	●		●					●			
					AT	●		●								
					ABS/VSA	●		●								
					SRS	●		●								
	RA6 RA7 RA8 RA9 RB1 RB2 RB3 RB4	F23A J30A K24A	H11.12 ~ H25.10	99.12 ~ 13.10	PGM-FI	●		●					●			
					AT	●		●								
					ABS/VSA	●		●								
					SRS	●		●								
					EPS	●										
	RC1 RC2	K24W	H25.11 ~	13.11 ~	PGM-FI	●	●	●	11.12							
					AT	●		●								
					ABS/VSA	●		●	1,2,3,4							
					SRS	●		●								
ORTHIA	EL1 EL2 EL3	B18B B20B	H08.03 ~ H14.01	96.03 ~ 02.01	PGM-FI	●		●					●			
					AT	●		●								
					ABS/VSA	●		●								
					SRS	●		●								
					EPS	●		●								
CAPA	GA4 GA6	D15B	H10.04 ~ H14.01	98.04 ~ 02.01	PGM-FI	●		●					●			
					AT	●		●								
					ABS/VSA	●		●								
					SRS	●		●								
					EPS	●		●								
GRACE	GM6 GM9	L15B	H27.06 ~	15.06 ~	PGM-FI	●	●	●	1,3,4,7,8,10~15	1,2						
					AT	●		●								
					ABS/VSA	●		●	1,2,3,4							
					SRS	●		●								
GRACE HYBRID	GM4 GM5	LEB	H26.12 ~	14.12 ~	PGM-FI	●	●	●	1,3,4,7,8,10~15	1,2						
					IMA	●	●	●	2	1						
					AT	●		●								
					ABS/VSA	●		●	1,2,3,4							
					SRS	●		●								
CROSSROAD	RT1 RT2 RT3 RT4	R18A R20A	H19.02 ~ H22.08	07.02 ~ 10.08	PGM-FI	●		●					●			
					AT	●		●								
					ABS/VSA	●		●								
					SRS	●		●								
					EPS	●		●								
THAT' S	JD1 JD2	E07Z	H14.02 ~ H19.06	02.02 ~ 07.06	PGM-FI	●		●					●			
					AT	●		●								
					ABS/VSA	●		●								
					SRS	●		●								
					EPS	●		●								
CIVIC	EG4 EG6 EK2 EK3 EK4	B16A D13B D15B D15B (SOHC 3-VTEC)	H03.09 ~ H12.08	91.09 ~ 0.08	PGM-FI	●		●					●			
					AT	●		●								
					ABS/VSA	●		●								
					SRS	●		●								
					EPS	●		●								
	EK3 EU1 EU2 EU3 EU4	D15B D15B (SOHC) D17A	H11.07 ~ H17.08	99.07 ~ 05.08	PGM-FI	●		●						●		
					AT	●		●								
					ABS/VSA	●		●								
					SRS	●		●								
					EPS	●		●								
CIVIC COUPE	EJ1 EJ7	D16A	H05.02 ~ H10.12	93.02 ~ 98.12	PGM-FI	●		●					●			
					AT	●		●								
					ABS/VSA	●		●								
					SRS	●		●								
					EPS	●		●								
CIVIC SEDAN	FD1 FD2	R18A K20A	H17.09 ~ H22.08	05.09 ~ 10.08	PGM-FI	●		●					●			
					AT	●		●								
					ABS/VSA	●		●								
					SRS	●		●								
					EPS	●		●								
CIVIC Type R	EK9	B16B	H09.08 ~ H13.11	97.08 ~ 01.11	PGM-FI	●		●					●			
					ABS/VSA	●		●								
					SRS	●		●								
					EPS	●		●								
	EP3 FD2	K20A	H13.12 ~ H22.08	01.12 ~ 10.08	PGM-FI	●		●					●			
					ABS/VSA	●		●								
CIVIC Type R	FN2	K20A	H21.11	09.11	PGM-FI	●	●	●	11.12				●			

3. Honda Diagnostic Software (Ver6.1*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER			
			JP CALENDAR	WESTRN CAL							COM	EXCL		
EURO			~	~	ABS/VSA	●		●						
			H24.06	12.06	SRS	●								
					EPS	●								
CIVIC HYBRID	ES9	LDA	H13.12	01.12	PGM-FI	●		●				●		
			~	~	AT	●		●						
			H17.08	05.08	ABS/VSA	●		●						
					SRS	●		●						
					EPS	●								
	FD3	LDA-MF5	H17.09	05.09	PGM-FI	●	●	●	11,12			●		
			~	~	IMA	●	●	●						
			H22.12	10.12	AT	●		●						
					ABS/VSA	●		●						
					SRS	●		●						
					EPS	●								
CIVIC FERIO	EG8 EG9 EH1 EJ3 EK2 EK3 EK4 EK5 EK8	B16A D13B D15B D15B (SOHC 3-VTEC)	H03.09	91.09	PGM-FI	●		●						
			~	~	AT	●		●						
			H12.08	00.08	ABS/VSA	●		●						
					SRS	●		●						
					EPS	●		●						
	EK3 ES1 ES2 ES3 ET2	D15B (SOHC)	H11.07	99.07	PGM-FI	●		●				●		
			~	~	AT	●		●						
			H17.08	05.08	ABS/VSA	●		●						
					SRS	●		●						
					EPS	●								
	SHUTTLE	GK8 GK9	L15B	H27.05	15.05	PGM-FI	●	●	●	1,3,4,7,8,10~15	1,2			
				~	~	AT	●		●					
						ABS/VSA	●		●		1,2,3,4			
					SRS	●		●						
SHUTTLE	GP7 GP8	LEB	H27.05	15.05	PGM-FI	●	●	●	1,3,4,7,8,10~15	1,2				
			~	~	IMA	●	●	●	2	1				
					AT	●		●						
					ABS/VSA	●		●		1,2,3,4				
STEP WAGON	RF1 RF2	B20B	H08.05	96.05	PGM-FI	●		●				●		
			~	~	AT	●		●						
			H13.03	01.03	ABS/VSA	●		●						
					SRS	●		●						
					EPS	●		●						
	RF3	K20A	H13.04	01.04	PGM-FI	●		●				●		
			~	~	AT	●		●						
			H21.09	09.09	ABS/VSA	●		●						
					SRS	●		●						
					EPS	●		●						
	RK1	R20A	H21.10	09.10	PGM-FI	●		●	11,12			●		
			~	~	AT	●		●						
			H27.03	15.03	ABS/VSA	●		●						
					SRS	●		●						
					EPS	●		●						
STREET	HH3 HH4	E07A	H05.10	93.10	PGM-FI	●		●				●		
			~	~	AT	●		●						
			H10.09	98.09	ABS/VSA	●		●						
					SRS	●		●						
					EPS	●		●						
STREAM	RN1 RN2 RN3 RN4 RN5	D17A K20A K20B	H12.10	00.10	PGM-FI	●		●				●		
			~	~	AT	●		●						
			H18.06	06.06	ABS/VSA	●		●						
					SRS	●		●						
					EPS	●		●						
	RN6 RN7 RN8 RN9	R18A R20A	H18.07	06.07	PGM-FI	●		●	11,12					
			~	~	AT	●		●						
			H26.05	14.05	ABS/VSA	●		●						
					SRS	●		●						
					EPS	●		●						
SABER	UA1 UA2 UA3	G20A G25A C32A	H07.02	95.02	PGM-FI	●		●				●		
			~	~	AT	●		●						
			H10.09	98.09	ABS/VSA	●		●						
					SRS	●		●						
					EPS	●		●						
	UA4 UA5	J25A J32A	H10.10	98.10	PGM-FI	●		●				●		
			~	~	AT	●		●						
			H15.06	03.06	ABS/VSA	●		●						
					SRS	●		●						
					EPS	●		●						
ZEST	JE1 JE2	P07A	H18.02	06.02	PGM-FI	●		●				●		
			~	~	AT	●		●						
					ABS/VSA	●		●						

3. Honda Diagnostic Software (Ver6.1*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
ZEST					SRS	●						
					EPS	●						
TODAY	JA4 JA5	E07A	H05.01 ~ H10.09	93.01 ~ 98.09	PGM-FI	●		●				●
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
DOMANI	MA4 MA5 MA6 MA7 MB3 MB4 MB5	B18B D16A D15B ZC	H04.11 ~ H12.09	92.11 ~ 00.09	PGM-FI	●		●				●
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
TORNEO	CF3 CF4 CF5 CL1 CL3	F18B F20B H22A	H09.09 ~ H14.10	97.09 ~ 02.10	PGM-FI	●		●				●
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
PARTNER	EY6 EY7 EY8 EY9 GJ3 GJ4	D13B D15B D16A L15A L15A	H08.03 ~ H18.02 H18.03 ~ H22.08	96.03 ~ 06.02 06.03 ~ 10.08	PGM-FI	●		●				●
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
					PGM-FI	●		●				●
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
VAMOS	HM1 HM2	E07Z	H11.06 ~	99.06 ~	PGM-FI	●		●				●
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
VAMOS HOBIO VAN	HJ1 HJ2	E07Z	H15.04 ~	03.04 ~	PGM-FI	●		●				●
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
FIT	GD1 GD2 GD3 GD4 GE6 GE7 GE8 GE9 GK3 GK4 GK5 GK6	L13A L15A L13B	H13.06 ~ H19.09 H19.10 ~ H25.08 H25.09 ~	01.06 ~ 07.09 07.10 ~ 13.08 13.09 ~	PGM-FI	●		●				●
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
					PGM-FI	●	●	●	1,3,4,7,8,10~15	1,2		
					AT	●		●				
					ABS/VSA	●		●	1,2,3,4			
					SRS	●		●				
					EPS	●		●				
FIT ARIA	GD6 GD7 GD8 GD9	L13A L15A	H14.12 ~ H21.01	02.12 ~ 09.01	PGM-FI	●		●				●
					AT	●		●				
					ABS/VSA	●		●				
					SRS	●		●				
					EPS	●		●				
FIT SHUTTLE	GG7 GG8	L15A	H23.06 ~ H27.03	11.06 ~ 15.03	PGM-FI	●	●	●	11,12			●
					AT	●		●				
					ABS/VSA	●		●	1,2,3,4,5,6,7,8			
					SRS	●		●				
FIT SHUTTLE HYBRID	GP2	LDA	H23.06 ~ H27.03	11.06 ~ 15.03	PGM-FI	●	●	●	11,12			●
					IMA	●	●	●				
					AT	●		●				
					ABS/VSA	●		●	1,2,3,4,5,6,7,8			
					SRS	●		●				
FIT HYBRID	GP1 GP4 GP5 GP6	LDA LEB	H22.10 ~ H25.09 H25.09 ~	10.10 ~ 13.09 13.09 ~	PGM-FI	●	●	●	11,12			●
					IMA	●	●	●				
					AT	●		●				
					ABS/VSA	●		●	1,2,3,4			
					SRS	●		●				
					PGM-FI	●	●	●	1,3,4,7,8,10~15	1,2		
					IMA	●	●	●	2	1		
					AT	●		●				
					ABS/VSA	●		●	1,2,3,4			
					SRS	●		●				
FREED	GB3 GB4	L15A	H20.05 ~	08.05 ~	PGM-FI	●	●	●	1,4,8,11,12,14			●
					AT	●	●	●				
					ABS/VSA	●		●	1,2,3,4			

3. Honda Diagnostic Software (Ver6.1*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER			
			JP CALENDAR	WESTRN CAL							COM	EXCL		
FREED SPIKE	GB3 GB4	L15A	H22.07 ~	10.07 ~	SRS	●					●			
					EPS	●								
					PGM-FI	●	●	●	1,4,8,11,12,14					
					AT	●	●	●						
					ABS/VSA	●		●	1,2,3,4					
					SRS	●								
FREED SPIKE HYBRID	GP3	LEA	H23.10 ~	11.10 ~	SRS	●					●			
					EPS	●								
					PGM-FI	●	●	●	1,4,8,11,12,14					
					IMA	●	●	●						
					AT	●	●	●						
					ABS/VSA	●		●	1,2,3,4					
FREED HYBRID	GP3	LEA	H23.10 ~	11.10 ~	SRS	●					●			
					EPS	●								
					PGM-FI	●	●	●	1,4,8,11,12,14					
					IMA	●	●	●						
					AT	●	●	●						
					ABS/VSA	●		●	1,2,3,4					
PRELUDE	BA8 BA9 BB1 BB4 BB5 BB6 BB7 BB8	F22B H22A	H03.09 ~	91.09 ~	SRS	●		●				●		
					EPS	●								
					PGM-FI	●		●						
					AT	●		●						
			H12.08 ~	00.08 ~	ABS/VSA	●		●						
					SRS	●		●						
					EPS	●		●						
MOBILIO	GB1 GB2	L15A	H13.12 ~	01.12 ~	PGM-FI	●		●			●			
					AT	●		●						
			H20.04 ~	08.04 ~	ABS/VSA	●		●						
					SRS	●								
					EPS	●								
MOBILIO SPIKE	GK1 GK2	L15A	H14.09 ~	02.09 ~	PGM-FI	●		●			●			
					AT	●		●						
			H20.04 ~	08.04 ~	ABS/VSA	●		●						
					SRS	●								
					EPS	●								
LIFE	JA4	E07A	H09.04 ~	97.04 ~	PGM-FI	●		●				●		
					AT	●		●						
			H26.03 ~	14.03 ~	ABS/VSA	●		●						
					SRS	●		●						
					EPS	●		●						
	JB1 JB2 JB3 JB4 JB5 JB6 JB7 JB8 JC1 JC2	E07Z P07A	H10.10 ~	98.10 ~	PGM-FI	●		●					●	
					AT	●		●						
			H26.03 ~	14.03 ~	ABS/VSA	●		●						
					SRS	●		●						
					EPS	●								
LA GREAT	RL1	J35A	H11.06 ~	99.06 ~	PGM-FI	●		●			●			
					AT	●		●						
			H16.02 ~	04.02 ~	ABS/VSA	●		●						
					SRS	●		●						
					EPS	●								
RAFAGA	CE4 CE5	G20A G25	H05.10 ~	93.10 ~	PGM-FI	●		●				●		
					AT	●		●						
			H09.08 ~	97.08 ~	ABS/VSA	●		●						
					SRS	●		●						
					EPS	●		●						
LEGEND	KA9	C35A	H08.02 ~	96.02 ~	PGM-FI	●		●				●		
					AT	●		●						
			H16.09 ~	04.09 ~	ABS/VSA	●		●						
					SRS	●		●						
					EPS	●		●						
LEGEND	KB1 KB2	J35A J37A	H16.10 ~	04.10 ~	PGM-FI	●		●			●			
					AT	●		●						
			H24.07 ~	12.07 ~	ABS/VSA	●		●						
					SRS	●								
					EPS	●								
LOGO	GA3 GA5	D13B	H08.10 ~	96.10 ~	PGM-FI	●		●				●		
					AT	●		●						
			H13.05 ~	01.05 ~	ABS/VSA	●		●						
					SRS	●		●						
					EPS	●		●						

3. Honda Diagnostic Software (Ver6.1*) List of Active Test Functions

SYSTEM	No.	FUNCTION	SYSTEM	No.	FUNCTION
PGM-FI (ENGINE)	1	A/C Clutch	IMA (Electric Powertrain)	1	IPU Cooling Fan Drive
	2	P2 Relief SOL.V		2	High Voltage Battery Fan
	3	VTC Test	AT	1	Solenoid Valve OFF
	4	VTEC SOL V Drive		2	Solenoid Valve ON
	5	VTEC Spool SOL V A		3	Shift Lock Solenoid
	6	VTEC Spool SOL V B	ABS/VSA	1	FL Solenoid
	7	VTEC Test		2	FR Solenoid
	8	Injector All Cylinder Stop		3	RL Solenoid
	9	Wastegate SOL V		4	RR Solenoid
	10	Starter Test		5	Front-Left (FL) VSA
	11	Power Balance		6	Front-Right (FR) VSA
	12	Radiator Fan		7	Rear-Left (RL) VSA
	13	Electric Water Pump		8	Rear-Right (RR) VSA
	14	Fuel Pump Operation			
	15	Fuel Pump Stop			

3. Honda Diagnostic Software (Ver6.1*) List of Work Support Functions

SYSTEM	No.	FUNCTION	WORK CONTENTS
PGM-FI (ENGINE)	1	CRANK PATTERN CLEAR	Clears the crank pattern. Perform during the following work. <ul style="list-style-type: none"> ·If ECU is updated. ·If ECU desorption is done. ·If TDC sensor desorption is done. ·If cam chain desorption is done. ·If crank sensor desorption is done. ·If cylinder head desorption is done.
	2	CRANK PATTERN LEARNING	Does the crank pattern learning. Perform during the following work. <ul style="list-style-type: none"> ·If ECU is updated. ·If ECU desorption is done. ·If TDC sensor desorption is done. ·If cam chain desorption is done. ·If crank sensor desorption is done. ·If cylinder head desorption is done. ·If "crank pattern clear" is implemented.
	3	THROTTLE VALVE REVISED VALUE CLEAR	Clears the carbon accumulated revised value. Perform during the following work. <ul style="list-style-type: none"> ·If the throttle valve is cleaned.
IMA (ELECTRIC POWER- TRAIN)	1	MOTOR ROTOR POSITION SENSOR LEARNING	Does the motor rotor position sensor learning. Perform during the following work. <ul style="list-style-type: none"> ·If motor/battery ECU is replaced. ·If motor rotor pos sen desorption & replacement are done. ·If motor rotor desorption & replacement are done. ·If motor stator desorption & replacement are done.
AT	1	TILT SENSOR LEARNING	Does the tilt sensor learning. Perform during the following work. <ul style="list-style-type: none"> ·If ECU desorption is done.
	2	CVT ELECTRIC OIL PUMP FORCED	Does the CVT electric oil pump air vent. Perform during the following work. <ul style="list-style-type: none"> ·If transmission is replaced. ·During T/M desorption is involved, parts are ·If control system parts are replaced. ·If CVT electric oil pump is replaced.
ABS/VSA	1	VSA SENSOR MIDPOINT WRITING	Does the VSA sensor midpoint writing. Perform during the following work. <ul style="list-style-type: none"> ·If CVT transmission desorption is done. ·If VSA modulator control unit update is done. ·If VSA modulator control unit desorption is done. ·If intermediate shaft desorption is done. ·If cable relay desorption is done. ·If steering gear box desorption is done. ·If steering column/EPS control unit desorption is done. ·If steering wheel desorption is done. ·If tie rod ball joints boots are replaced. ·If front stabilizer is replaced. ·If front damper desorption is done. ·If front drive shaft desorption is done. ·If front knuckle/hub/wheel bearing desorption is done. ·If front lower alarm desorption is done. ·If rear axle beam desorption is done. ·If rear spring desorption is done. ·If rear damper desorption is done. ·If rear hub bearing unit desorption is done. ·If steering angle sensor desorption is done.

4. Mazda Diagnostic Software (Ver4.0*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER		
			JP CALENDAR	WESTRN CAL							COM	EXCL	
AZ-OFF ROAD (Suzuki Jimny OEM)	JM23W	K6A(Turbo)	H10.10	98.10									
			~ H26.3	~ 14.03									
AZ-WAGON (Suzuki Wagon OEM)	MD11S	F6A(N·A) F6A(Turbo)	H10.10	98.10									
			~ H12.11	~ 00.11									
	MD12S	F6A(Turbo)	H12.12	00.12									
			~ H13.10	~ 01.10									
		K6A(N·A) K6A(N·A) VVT	H10.10	98.10									
			~ H12.11	~ 00.11									
AZ-WAGON (Suzuki Wagon OEM)	MD12S	K6A(Turbo)	H10.10	98.10									
			~ H12.11	~ 00.11									
	MD22S	K6A (M Turbo)	H13.11	01.11									
			~ H15.09	~ 03.09									
			K6A(N·A) VVT	H12.12	00.12								
	MJ21S	K6A(Turbo)	H15.09	03.09									
			K6A (DI Turbo)	H15.10	03.10								
			~ H19.04	~ 07.04									
	MJ22S	K6A(N·A) VVT	H15.10	03.10									
			~ H19.04	~ 07.04									
K6A(STurbo)			H19.04	07.04									
MJ23S	K6A (DI Turbo)	H19.01	07.01										
		~ H20.08	~ 08.08										
	K6A (M Turbo)	K6A(N·A) VVT	H20.08	08.08									
			~ H24.08	~ 12.08									
AZ-WAGON (Suzuki Wagon OEM)	MJ23S	K6A(N·A) VVT K6A(Turbo)	H20.09	08.09									
			~ H24.08	~ 12.08									
CX_5	KE2AW KE2FW KEEAW KEEFW	SH-VPTS	H24.02	12.02	PCM	●	●	●			●		
			~ ~	~ ~	TCM	●		●					
		PE-VPS	ABS	●		●							
			RCM	●		●							
CX_7	ER3P	L3-VDT	H18.12	06.12	PCM	●	●	●			●		
			~ H24.01	~ 12.01	TCM	●		●					
			ABS	●		●							
			RCM	●		●							
MPV	LV5W LVEW LV5W LVEW	G5-E JE-E G5-E JE-E	H07.12	95.12	PCM	●		●				●	
			~ ~	~ ~	TCM	●		●					
			H11.05	99.05	ABS	●		●					
			~ ~	~ ~	RCM	●		●					
	LW3W	L3-DE	H14.04	02.04	PCM	●	●	●			●		
			~ H18.01	~ 06.01	TCM	●		●					
			ABS	●		●							
			RCM	●		●							
LY3P	L3-VDT L3-VE	H18.02	06.02	PCM	●	●	●			●			
		~ ~	~ ~	TCM	●		●						
		ABS	●		●								
		RCM	●		●								
RX-8	SE3P	13B-MSP	H15.04	03.04	PCM	●	●	●			●		
			~ ~	~ ~	TCM	●		●					
			ABS	●		●							
			RCM	●		●							
AXELA	BK3P BK5P(Remo- del) BKEP BK5P	L3-VE ZY-VE (LPG) LF-DE	H15.10	03.10	PCM	●	●	●			●		
			~ ~	~ ~	TCM	●		●					
			H18.05	06.05	ABS	●		●					
			~ ~	~ ~	RCM	●		●					
			ZY-VE	H15.10	03.10	PCM	●	●	●				
				~ ~	~ ~	TCM	●		●				
				H21.05	09.05	ABS	●		●				
				~ ~	~ ~	RCM	●		●				
			LF-VE	H18.06	06.06	PCM	●	●	●				
				~ ~	~ ~	TCM	●		●				
				H21.05	09.05	ABS	●		●				
				~ ~	~ ~	RCM	●		●				
BL5FP BLEAP		ZY-VE LF-VE	H21.06	09.06	PCM	●	●	●					
			~ ~	~ ~	TCM	●		●					
			ABS	●		●							
			RCM	●		●							

4. Mazda Diagnostic Software (Ver4.0*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER				
			JP CALENDAR	WESTRN CAL							COM	EXCL			
	BLEFP	LF-VDS	H21.06	09.06	PCM	●	●	●							
			~	~	TCM	●		●							
			H23.08	11.08	ABS	●		●							
					RCM	●		●							
	BLFFP	PE-VPS	H23.09	~	11.09	PCM	●	●	●						
						TCM	●		●						
						ABS	●		●						
						RCM	●		●						
	BMEFS	PE-VPS	H25.09	~	13.09	PCM	●	●	●						
						TCM	●		●						
						ABS	●		●						
						RCM	●		●						
AXELA SPORTS	BK3P BKEP	L3-VDT LF-VE	H18.06	06.06	PCM	●	●	●			●				
			~	~	TCM	●		●							
			H21.05	09.05	ABS	●		●							
					RCM	●		●							
	BK3P	L3-VE	H18.02	~	06.02	PCM	●	●	●						
						TCM	●		●						
						ABS	●		●						
						RCM	●		●						
	BK5P	ZY-VE	H15.10	~	03.10	PCM	●	●	●						
						TCM	●		●						
						ABS	●		●						
						RCM	●		●						
	BKEP	LF-DE	H15.10	~	03.10	PCM	●	●	●						
						TCM	●		●						
						H18.05	06.05	ABS	●				●		
								RCM	●				●		
	BL3FW BLEAW	L3-VDT LF-VE	H21.06	~	09.06	PCM	●	●	●						
						TCM	●		●						
						ABS	●		●						
						RCM	●		●						
	BL5FW BLEFW	ZY-VE LF-VDS	H21.06	~	09.06	PCM	●	●	●						
						TCM	●		●						
						H23.08	11.08	ABS	●				●		
								RCM	●				●		
BLFFW	PE-VPS	H23.09	~	11.09	PCM	●	●	●							
					TCM	●		●							
					ABS	●		●							
					RCM	●		●							
AXELA HYBRID	BYEFP	PE-VPH	H25.10	13.10	PCM	●	●	●			●				
					TCM	●		●							
					ABS	●		●							
					RCM	●		●							
ATENZA	GG3P GGEP	L3-VDT LF-VE	H17.06	05.06	PCM	●	●	●			●				
			~	~	TCM	●		●							
			H19.12	07.12	ABS	●		●							
					RCM	●		●							
	GG3P GGEP	L3-VE LF-DE	H14.05	~	02.05	PCM	●	●	●						
						TCM	●		●						
						H19.12	07.12	ABS	●				●		
								RCM	●				●		
	GH5AP GH5FP GHEFP	L5-VE	H20.01	~	08.01	PCM	●	●	●						
						TCM	●		●						
		LF-VE	H22.01	~	10.01	ABS	●		●						
						RCM	●		●						
	GH5FP	L5-VE	H22.01	~	10.01	PCM	●	●	●						
						TCM	●		●						
						ABS	●		●						
						RCM	●		●						
	GJ2F GJ5FP GJEFP	SH PY-VPR PE-VPR	H24.10	~	12.10	PCM	●	●	●						
						TCM	●		●						
						ABS	●		●						
						RCM	●		●						
ATENZA SPORTS	GG3S	L3-VE	H14.05	02.05	PCM	●	●	●			●				
			~	~	TCM	●		●							
			H19.12	07.12	ABS	●		●							
					RCM	●		●							
	GGES	LF-DE	H14.05	~	02.05	PCM	●	●	●						
						TCM	●		●						
						H17.05	05.05	ABS	●				●		
								RCM	●				●		
		LF-VE	H17.06	~	05.06	PCM	●	●	●						
						TCM	●		●						
						H19.12	07.12	ABS	●				●		
								RCM	●				●		
	GH5AS GH5FS	L5-VE	H20.01	~	08.01	PCM	●	●	●						
						TCM	●		●						
						ABS	●		●						
						RCM	●		●						

4. Mazda Diagnostic Software (Ver4.0*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER											
			JP CALENDAR	WESTRN CAL							COM	EXCL										
ATENZA SPORTS WAGON	GHEFS	LF-VE	H20.01	08.01	PCM	●	●	●			●											
			~	~	TCM	●		●														
			H21.12	09.12	ABS	●		●														
					RCM	●		●														
	ATENZA SPORTS WAGON	GH5AW GH5FW	L5-VE	H20.01	08.01	PCM	●	●	●					●								
				~	~	TCM	●		●													
						ABS	●		●													
						RCM	●		●													
		ATENZA SPORTS WAGON	GHEFW	LF-VD	H22.01	10.01	PCM	●	●	●							●					
					~	~	TCM	●		●												
							ABS	●		●												
							RCM	●		●												
ATENZA SPORTS WAGON			GHEFW	LF-VE	H20.01	08.01	PCM	●	●	●			●									
					~	~	TCM	●		●												
					H21.12	09.12	ABS	●		●												
							RCM	●		●												
	ATENZA SPORTS WAGON		GY3W	L3-VE	H14.06	02.06	PCM	●	●	●				●								
					~	~	TCM	●		●												
					H19.12	07.12	ABS	●		●												
							RCM	●		●												
		ATENZA SPORTS WAGON	GYEW	LF-DE	H14.05	02.05	PCM	●	●	●							●					
					~	~	TCM	●		●												
					H17.05	05.05	ABS	●		●												
							RCM	●		●												
ATENZA SPORTS WAGON			GYEW	LF-VE	H17.06	05.06	PCM	●	●	●			●									
					~	~	TCM	●		●												
					H19.12	07.12	ABS	●		●												
							RCM	●		●												
	ATENZA WAGON		GJ5FW	PY-VPR	H24.11	12.11	PCM	●	●	●				●								
					~	~	TCM	●		●												
							ABS	●		●												
							RCM	●		●												
		ATENZA WAGON	GFER	FS-DE	H14.04	02.04	PCM	●	●	●							●					
							TCM	●		●												
							ABS	●		●												
							RCM	●		●												
ATENZA WAGON			GFFP	RF-MDT	H10.07	98.07	PCM	●		●			●									
					~	~	TCM	●		●												
					H11.10	99.10	ABS	●		●												
							RCM	●		●												
	CAPELLA WAGON		GW5R GW8W GWER	KL-ZE FP-DE FS-DE	H09.11	97.11	PCM	●		●				●								
					~	~	TCM	●		●												
					H14.04	02.04	ABS	●		●												
							RCM	●		●												
		CAPELLA WAGON	GWER	FS-ZE	H09.11	97.11	PCM	●		●							●					
					~	~	TCM	●		●												
					H13.11	01.11	ABS	●		●												
							RCM	●		●												
CAPELLA WAGON			GWEW	FS-DE	H07.12	95.12	PCM	●		●			●									
					~	~	TCM	●		●												
							ABS	●		●												
							RCM	●		●												
	CAPELLA WAGON		GWEW	FS-ZE	H11.10	99.10	PCM	●		●				●								
					~	~	TCM	●		●												
					H14.04	02.04	ABS	●		●												
							RCM	●		●												
		CAPELLA WAGON	GFWF	RF-MDT	H09.11	97.11	PCM	●		●							●					
					~	~	TCM	●		●												
					H11.09	99.09	ABS	●		●												
							RCM	●		●												
CAROL (Suzuki Alto OEM)			HB12S	K6A(N·A)	H10.10	98.10																
					~	~																
					H12.11	00.11																
			HB22S	K6A(N·A)	K6A(N·A)	H10.10	98.10															
	~					~																
	HB23S		K6A(N·A)	K6A(N·A)	H14.11	02.11																
					~	~																
	HB24S		K6A(N·A)	K6A(N·A)	H16.08	04.08																
		~			~																	
	HB25S HB35S	K6A(N·A) VVT R06A(N·A)	K6A(N·A)	H21.12	09.12																	
				~	~																	
	SCRUM (Suzuki Every OEM)	DG52V	F6A(N·A) F6A(Turbo)	H11.01	99.01																	
~				~																		
DG62V		K6A(N·A) K6A(Turbo)	K6A(N·A)	H13.08	01.08																	
				~	~																	
			H17.08	05.08																		

4. Mazda Diagnostic Software (Ver4.0*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER				
			JP CALENDAR	WESTRN CAL							COM	EXCL			
	DG64V	K6A(N·A) K6A(Turbo)	H17.09 ~	05.09 ~											
	DH52V	F6A(N·A)	H11.01 ~	99.01 ~											
			H13.08 01.08												
		F6A(Turbo)	H11.01 ~	99.01 ~											
			H13.08 01.08												
	SCRUM Truck (Suzuki Carry OEM)	DG52T	F6A(N·A)	H11.01 ~	99.01 ~										
DG52T		F6A(Turbo)	H11.01 ~	99.01 ~											
			H12.04 00.04												
DG63T		K6A(N·A)	H14.05 ~	02.05 ~											
DG65T	K6A(N·A)	H17.07 ~	05.07 ~												
SCRUM Wagon (Suzuki Every Wagon OEM)	DG52W	K6A(Turbo)	H11.06 ~	99.06 ~											
	DG62W	K6A(N·A) K6A(Turbo)	H13.09 ~	01.09 ~											
			H17.08 05.08												
	DG64W	K6A(N·A)	H17.09 ~	05.09 ~											
DG64W	K6A(Turbo)	H17.09 ~	05.09 ~												
SPIANO (Suzuki Alto Lapin OEM)	HF21S	K6A (MTurbo)	H14.10 ~	02.10 ~											
			H19.04 07.04												
		K6A(N·A) VVT	H14.02 ~	02.02 ~											
			H20.11 08.11												
K6A (Sターボ)	H16.10 ~	04.10 ~													
	H20.11 08.11														
K6A(Turbo)	H15.09 ~	03.09 ~													
	H16.09 04.09														
SENTIA	HEEA	JE-E JE-ZE	H07.10 ~	95.10 ~	PCM	●	●					●			
	HEEP		H12.06 00.06			TCM	●	●							
							ABS	●	●						
					RCM	●	●								
TITAN (Isuzu Elf OEM)	BDG-LJR85	4JJ1-TC	H18.11 ~	06.11 ~											
	BDG-LKR85														
	BDG-LKS85														
	BDG-LLR85														
	BDG-LMR85														
	BDG-LMS85														
	BDG-LNR85														
	BDG-LPR85														
	BDG-LPS85														
	BKG-LHR85														
	BKG-LHS85														
	BKG-LJR85														
	BKG-LJS85														
	BKG-LKR85														
	BKG-LLR85														
	BKG-LLS85														
	BKG-LMR85														
	BKG-LNR85														
	BKG-LNS85														
	BKG-LPR85														
	KR-LHR69				4JG2	H14.06 ~	02.06 ~								
	KR-LHS69				4JG2	H16.05 04.05									
	PA-LPR81				4HL1-NA 4HL1-TC	H16.06 ~	04.06 ~								
	PB-LKR81				4HL1-NA	H18.10	06.10								
	PB-LKS81				4HL1-NA	H16.06	04.06								
	PB-LPR81				4HL1-TC	~	~								
	PB-LPS81				4HL1-NA	H18.10	06.10								
PB-LKR81	4HL1-TC	H17.05 ~	05.05 ~												
PB-LKS81		~	~												
PB-LPR81		H18.10	06.10												
PB-LPS81															
PDG-LKR85	4JJ1-TC	H18.11	06.11												

4. Mazda Diagnostic Software (Ver4.0*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER				
			JP CALENDAR	WESTRN CAL							COM	EXCL			
	PDG-LPR75 PKG-LPR75	4HK1-TC 4HK1-TC	~	~											
TITAN	WH65H(改) WHF5G(改) WHF5T(改)	TF(LPG)	H14.06	02.06	PCM	●	●	●			●				
			~	~	TCM	●		●							
			H16.05	04.05	ABS	●		●							
					RCM	●		●							
TITAN DASH	SY54L SY54T SY56L SY56T SYE4T SYE6T SYE6T(改)	WL	H12.09	00.09	PCM	●		●				●			
			~	~	TCM	●		●							
			H16.10	04.10	ABS	●		●							
					RCM	●		●							
	SYF4L SYF4T SYF6L SYF6T	FE-E FE(LPG)	RF-CDT	H16.11	04.11	PCM	●	●	●			●			
				~	~	TCM	●		●						
				H22.08	10.08	ABS	●		●						
						RCM	●		●						
DEMIO	DE3AS DE3FS ZJ-VEM DE5FS	ZJ-VE	H19.07	07.07	PCM	●	●	●			●				
			~	~	TCM	●		●							
					ABS	●		●							
					RCM	●		●							
	DEJFS	ZY-VE P3-VPS	H23.06	~	11.06	PCM	●	●	●						
						TCM	●		●						
						ABS	●		●						
						RCM	●		●						
	DW3W DW5W	B3-ME B5-ME	H08.08	~	96.08	PCM	●	●	●						
						TCM	●		●						
						ABS	●		●						
						RCM	●		●						
	DY3R DY5R	ZJ-VE ZY-VE	H16.04	~	04.04	PCM	●	●	●						
						TCM	●		●						
						ABS	●		●						
						RCM	●		●						
DY3W DY5W	ZJ-VE ZY-VE	H14.08	~	02.08	PCM	●	●	●							
					TCM	●		●							
					ABS	●		●							
					RCM	●		●							
TRIBUTE	EP3W	L3-DE	H15.12	03.12	PCM	●	●	●			●				
			~	~	TCM	●		●							
			H17.10	05.10	ABS	●		●							
					RCM	●		●							
	EPEW	YF	H12.10	~	00.10	PCM	●	●	●						
						TCM	●		●						
						ABS	●		●						
						RCM	●		●						
	EPFW	AJ-DE	H12.10	~	00.10	PCM	●	●	●						
						TCM	●		●						
						ABS	●		●						
						RCM	●		●						
	BIANTE	CC3FW CCEAW CCEFW	L3-VE LF-VD LF-VD	H20.07	08.07	PCM	●	●	●			●			
				~	~	TCM	●		●						
						ABS	●		●						
						RCM	●		●						
CCEFW		LF-VDS	H21.06	~	09.06	PCM	●	●	●						
						TCM	●		●						
						ABS	●		●						
						RCM	●		●						
FAMILIA	BHA3S BHA8S BHALS	B3-ME BP-ZE Z5-DE	H08.10	96.10	PCM	●		●				●			
			~	~	TCM	●		●							
			H11.07	99.07	ABS	●		●							
					RCM	●		●							
FAMILIA NEO	BHA5S BHA8S BHALS	B5-ZE B5-ZE Z5-DE	H06.06	94.06	PCM	●		●				●			
			~	~	TCM	●		●							
			H08.09	96.09	ABS	●		●							
					RCM	●		●							
FAMILIA S-WAGON	BJ5W	ZL-DE	H10.06	98.06	PCM	●		●				●			
			~	~	TCM	●		●							
			H16.03	04.03	ABS	●		●							
					RCM	●		●							
	BJ5W BJFW	ZL-VE FS-ZE	H11.08	~	99.08	PCM	●		●						
						TCM	●		●						
						H16.03	04.03	ABS	●		●				
								RCM	●		●				
	BJ8W	FP-DE	H10.06	~	98.06	PCM	●		●						
						TCM	●		●						
						H12.09	00.09	ABS	●		●				
								RCM	●		●				
FAMILIA SEDAN	BHA3P	B3-ME	H08.10	96.10	PCM	●		●				●			
			~	~	TCM	●		●							
			H10.05	98.05	ABS	●		●							

4. Mazda Diagnostic Software (Ver4.0*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
	BHA5P	B5-ZE	H06.06	94.06	RCM	●		●				
			~	~	PCM	●		●				
			~	~	TCM	●		●				
			H08.09	96.09	ABS	●		●				
					RCM	●		●				
	BHA6R BHA7P BHA7R BHA8P BHALP	B6-DE 4EE1-T 4EE1-T BP-ZE Z5-DE Z5-DE(LPG) Z5-DEL	H06.06	94.06	PCM	●		●				
			~	~	TCM	●		●				
			H10.05	98.05	ABS	●		●				
			H06.06	94.06	RCM	●		●				
			~	~								
	BJ3P	B3-ME	H10.06	98.06	PCM	●		●				
			~	~	TCM	●		●				
			H14.08	02.08	ABS	●		●				
					RCM	●		●				
	BJ5P	ZL-DE	H10.06	98.06	PCM	●		●				
			~	~	TCM	●		●				
			H15.08	03.08	ABS	●		●				
					RCM	●		●				
		ZL-VE	H11.08	99.08	PCM	●		●				
			~	~	TCM	●		●				
			H14.08	02.08	ABS	●		●				
	BJEP	RF	H10.06	98.06	PCM	●		●				
			~	~	TCM	●		●				
H12.09			00.09	ABS	●		●					
				RCM	●		●					
BJFP	FS-ZE	H12.10	00.10	PCM	●	●	●					
		~	~	TCM	●		●					
		H15.08	03.08	ABS	●		●					
				RCM	●		●					
FAMILIA VAN (Nissan AD OEM)	BVAY12	CR12DE	H19.01	07.01								
FAMILIA VAN (Nissan AD Van OEM)	BVENY11 BVEY11	YD22DD	H11.06	99.06								
			~	~								
	BVFNY10 BVFY10	GA15DE GA15DE	H09.05	97.05								
			~	~								
	BVIFY11	QG15DE	H11.06	99.06								
BVGY11	QG18DEN	H14.08	H20.12									
		~	~									
BVHNY11	QG18DE	H11.06	99.06									
FAMILIA VAN (Nissan Expert OEM)	BVJY12	MR18DE	H19.01	07.01								
FAMILIA VAN (Nissan AD Van OEM)	BVY10	GA13DE	H09.05	97.05								
			~	~								
	BVY11	QG13DE	H11.06	99.06								
			~	~								
BVY12	HR15DE	H19.01	07.01									
BVZNY12	HR16DE	H20.12	08.12									
FAMILIA BUSINESS WAGON (Nissan AD Van OEM)	BWHNY11	QG18DE	H11.06	99.06								
FAMILIA WAGON (Nissan Wingroad OEM)	BWFNY10 BWFY10	GA15DE	H07.07	95.07								
			~	~								
	BWHNY10 BWHY10	SR18DE	H11.05	99.05								
			~	~								
			H08.06	96.06								
			~	~								
			H11.05	99.05								
FLAIR (Suzuki Wagon R OEM)	MJ34S	R06A(N·A)	H24.10	12.10								
FLAIR WAGON (Suzuki Palette OEM)	MM21S	K6A (MTurbo) K6A(N·A) VVT	H24.06	12.06								
			~	~								
FLAIR WAGON (Suzuki Spacia	MM32S	R06A(N·A)	H25.04	13.04								

4. Mazda Diagnostic Software (Ver4.0*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
OEM)		R06A (Turbo)	H25.04 ~	13.04 ~								
PREMACY LA FESTA HIGHWAY STAR	CP8W	FP-DE	H11.04 ~ H17.01	99.04 ~ 05.01	PCM	●		●				●
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
	CPEW	FS-ZE	H13.07 ~ H17.01	01.07 ~ 05.01	PCM	●	●	●				
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
	CR3W	L3-VE	H17.02 ~ H21.06	05.02 ~ 09.06	PCM	●	●	●				
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
	CREW	LF-DE	H17.02 ~ H22.06	05.02 ~ 10.06	PCM	●	●	●				
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
		LF-VD LF-VE	H19.01 ~ H15.08	07.01 ~ 03.08	PCM	●	●	●				
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
	CWEAW CWEAWN CWEFW	LF-VE LF-VD	H22.07 ~	10.07 ~	PCM	●	●	●				
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
CWEFWN	LF-VDS	H12.10 ~	00.10 ~	PCM	●	●	●					
				TCM	●		●					
				ABS	●		●					
				RCM	●		●					
PROCEED	UF66M	G6-E	H08.06 ~ H11.01	96.06 ~ 99.01	PCM	●		●				
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
PROCEED MARVY	UV56R	G5-E	H08.03 ~ H11.12	96.03 ~ 99.12	PCM	●		●				
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
	UVL6R	WL-T	H08.03 ~ H11.12	96.03 ~ 99.12	PCM	●		●				
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
PROCEED LEVANTE (Suzuki Escudo OEM)	TF11W TJ11W	H20A(N·A)	H07.02 ~ H08.10	95.02 ~ 96.10								
	TF51W TJ51W TJ61W	J20A(N·A) H25A(N·A)	H08.11 ~ H09.10	96.11 ~ 97.10								
	TF52W TJ52W	J20A(N·A)	H09.11 ~ H11.08	97.11 ~ 99.08								
	TJ32W TJ62W	RF(Turbo) H25A(N·A)	H10.03 ~ H11.08	98.03 ~ 99.08								
VERISA	DC5R	ZY-VE DC5W	H16.06 ~	04.06 ~	PCM	●	●	●				
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
BONGO Truck	SK22L SK22LM SK22LN SK22T SK22TM SK22TN	R2	H11.06 ~ H15.11	99.06 ~ 03.11	PCM	●	●	●				
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
	SK82L SK82LM SK82LN SK82T SK82TM SK82TN	F8-E	H11.06 ~ H22.07	99.06 ~ 10.07	PCM	●	●	●				
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
	SKF2L SKF2LM SKF2LN SKF2T SKF2TM SKF2TN	RF-CDT	H15.12 ~ H22.07	03.12 ~ 10.07	PCM	●	●	●				
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
	SKP2L SKP2LM SKP2LN	L8-DE	H22.08 ~	10.08 ~	PCM	●	●	●				
					TCM	●		●				
					ABS	●		●				

4. Mazda Diagnostic Software (Ver4.0*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
	SKP2T SKP2TM SKP2TN				RCM	●		●				
BONGO Van	SK22M SK22MM SK22MN	R2	H11.06 ~ H15.11	99.06 ~ 03.11	PCM	●		●				●
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
	SK22V SK22VM SK22VN	R2	H15.12 ~ H22.07	03.12 ~ 10.07	PCM	●		●				
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
	SK82M SK82MM SK82MN SK82V	F8-E	H11.06 ~ H22.07	99.06 ~ 10.07	PCM	●		●				
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
	SK82VM SK82VN SKF2M SKF2MM SKF2MN SKF2V SKF2VM SKF2VN	F8-E RF-CDT	H15.12 ~ H22.07	03.12 ~ 10.07	PCM	●		●				
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
SKP2M SKP2MM SKP2MN SKP2V SKP2VM SKP2VN	L8-DE	H22.08 ~ ~	10.08 ~ ~	PCM	●	●	●			●		
				TCM	●		●					
				ABS	●		●					
				RCM	●		●					
	SKP2V SKP2VM SKP2VN	L8-DE	H15.12 ~ H22.07	03.12 ~ 10.07	PCM	●	●	●				
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
BONGO FRIENDEE	SG5W SGE3 SGEW SGL3 SGL5 SGLR SGLW	J5-DE FE-E WL-T	H07.06 ~ H17.11	95.06 ~ 05.11	PCM	●		●			●	
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
BONGO BRAWNY Truck	SD29M SD29T SD2AM SD2AT SD89T SDEAT	R2 F8 FE-E	H05.09 ~ H09.04	93.09 ~ 97.04	PCM	●		●			●	
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
BONGO BRAWNY Van	SK54V SK56M SK56MM SK56V SK56VM SK5HM SK5HV	WL	H11.06 ~ H17.10	99.06 ~ 05.10	PCM	●		●			●	
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
	SKE6V SKE6VM	FE-E	H11.06 ~ H22.07	99.06 ~ 10.07	PCM	●	●	●			●	
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
	SKF6M SKF6MM SKF6V SKF6VM	RF-CDT	H17.11 ~ H19.07	05.11 ~ 07.07	PCM	●	●	●				
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
	SR29V SR2AM SR2AV	R2	H05.08 ~ H09.04	93.08 ~ 97.04	PCM	●		●			●	
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
SR59V SR5AM SR5AV	WL	H09.05 ~ H11.05	97.05 ~ 99.05	PCM	●		●					
				TCM	●		●					
				ABS	●		●					
				RCM	●		●					
SRE9V SREAV	FE-E	H05.08 ~ H09.04	93.08 ~ 97.04	PCM	●		●					
				TCM	●		●					
				ABS	●		●					
				RCM	●		●					
MILLENNIA	TA3A TA3P	KJ-ZEM	H09.07 ~ H12.06	97.07 ~ 00.06	PCM	●		●			●	
					TCM	●		●				
					ABS	●		●				
					RCM	●		●				
	TA5A	KL-ZE	H09.07 ~ H10.06	97.07 ~ 98.06	PCM	●		●				
					TCM	●		●				
					ABS	●		●				
	TA5P	KL-ZE	H09.07	97.07	PCM	●		●				

4. Mazda Diagnostic Software (Ver4.0*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER				
			JP CALENDAR	WESTRN CAL							COM	EXCL			
	TAFP	KF-ZE	~ H15.08	~ 03.08	TCM	●		●							
			~ H10.07	~ 98.07	ABS	●		●							
			~ H14.09	~ 02.09	RCM	●		●							
					PCM	●		●							
					TCM	●		●							
					ABS	●		●							
EUNOS 800	TA3A TA3P TA5A	KJ-ZEM	~ H08.06	~ 96.06	PCM	●		●				●			
			~ H09.06	~ 97.06	TCM	●		●							
					ABS	●		●							
	TA3Y TA3Z TA5Y TA5Z	KJ-ZEM	~ H05.10	~ 93.10	RCM	●		●							
			~ H08.05	~ 96.05	PCM	●		●							
					TCM	●		●							
LAPUTA (Suzuki Kei OEM)	HP11S HP21S HP21S	F6A(Turbo) K6A(N·A) K6A(Turbo)	~ H11.03	~ 99.03	ABS	●	●	●							
			~ H13.03	~ 01.03	RCM	●		●							
					PCM	●		●							
	HP12S	F6A(Turbo)	~ H13.04	~ 01.04	TCM	●	●	●							
			~ H13.10	~ 01.10	ABS	●		●							
					RCM	●		●							
	HP21S	K6A(N·A) VVT	~ H12.10	~ 00.10	PCM	●	●	●							
			~ H13.10	~ 01.10	TCM	●		●							
					ABS	●		●							
	HP22S	K6A (MTurbo) K6A(N·A) VVT	~ H13.11	~ 01.11	RCM	●		●							
			~ H18.01	~ 06.01	PCM	●	●	●							
					TCM	●		●							
	HP22S	K6A(Turbo)	~ H13.04	~ 01.04	ABS	●		●							
			~ H18.01	~ 06.01	RCM	●		●							
					PCM	●	●	●							
	LANTIS	CBA8P CBAEP	BP-ZE KF-ZE	~ H05.08	~ 93.08	TCM	●		●					●	
				~ H09.12	~ 97.12	ABS	●		●						
						RCM	●		●						
					PCM	●	●	●							
LANTIS COUPE	CBA8P CBAEP	BP-ZE KF-ZE	~ H05.08	~ 93.08	TCM	●		●				●			
			~ H09.12	~ 97.12	ABS	●		●							
					RCM	●		●							
					PCM	●	●	●							
ROADSTER	NA8C	BP-ZE [RS]	~ H05.10	~ 93.10	TCM	●		●				●			
			~ H09.12	~ 97.12	ABS	●		●							
					RCM	●		●							
					PCM	●	●	●							
	NB6C NB8C	B6-ZE [RS] BP-VE[RS] [RS]	~ H10.01	~ 98.01	TCM	●		●							
			~ H17.07	~ 05.07	ABS	●		●							
					RCM	●		●							
					PCM	●	●	●							
	NB8C	BP-ZE [RS]	~ H12.07	~ 00.07	TCM	●	●	●					●		
			~ H17.07	~ 05.07	ABS	●		●							
					RCM	●		●							
					PCM	●	●	●							
	NB8C	BP-ZET [RS]	~ H15.09	~ 03.09	TCM	●		●							
			~ H17.07	~ 05.07	ABS	●		●							
					RCM	●		●							
					PCM	●	●	●							
NCEC	LF-VE		~ H17.08	~ 05.08	TCM	●		●							
					ABS	●		●							
					RCM	●		●							
					PCM	●	●	●							

5. Subaru Diagnostic Software (Ver5.0*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
R1	RJ System (RJ1) (RJ2)	EN07 DOHC EN07 SOHC	H17.01	05.01	ENGINE	●		●	12		●	
			~	~	TRANSMISSION	●		●				
			H22.03	10.03	ABS/VDC	●		●	1			
R2	RC System (RC1) (RC2)	EN07 DOHC EN07 SOHC	H15.03	03.03	ENGINE	●		●	12		●	
			~	~	TRANSMISSION	●		●				
			H22.03	10.03	ABS/VDC	●		●	1			
IMPREZA	GD System (GD2) (GD3) (GD9) (GDA) (GDB) (GDC) (GDD)	EJ15 SOHC EJ20 SOHC EJ20 DOHC	H12.08	00.08	ENGINE	●		●	1~19		●	
			~	~	TRANSMISSION	●		●		2,3,4		
			H19.10	07.10	ABS/VDC	●		●	1,2			
					AIRBAG	●		●				
	GG System (GG2) (GG3) (GG9) (GGA) (GGB) (GGC) (GGD)	EJ15 SOHC EJ20 SOHC EJ20 DOHC	H12.08	00.08	ENGINE	●		●	1~19			
			~	~	TRANSMISSION	●		●		2,3,4		
			H19.10	07.10	ABS/VDC	●		●	1,2			
					AIRBAG	●		●				
	GE System (GE2) (GE3) (GE6) (GE7)	EJ20 SOHC EL15 DOHC	H20.10	08.10	ENGINE	●		●	1~19			
			~	~	TRANSMISSION	●		●		1,2,3,4		
			H23.11	11.11	ABS/VDC	●		●	1,2			
					AIRBAG	●		●				
	GH System (GH2) (GH3) (GH6) (GH7) (GH8)	EJ20 SOHC EL15 DOHC	H20.10	08.10	ENGINE	●		●	1~19			
			~	~	TRANSMISSION	●		●		1,2,3,4		
			H23.11	11.11	ABS/VDC	●		●	1,2			
					AIRBAG	●		●				
	GR System (GRB) (GRF)	EJ25 DOHC EJ20 DOHC	H20.10	07.10	ENGINE	●		●	1~19			
			~	~	TRANSMISSION	●		●		2,3,4		
			H26.11	14.08	ABS/VDC	●		●	1,2			
					AIRBAG	●		●				
	GV System (GVB) (GVF)	EJ25 DOHC EJ20 DOHC	H20.10	07.10	ENGINE	●		●	1~19			
			~	~	TRANSMISSION	●		●		2,3,4		
			H26.11	14.08	ABS/VDC	●		●	1,2			
					AIRBAG	●		●				
GP System (GP2) (GP3) (GP6) (GP7)	FB16 DOHC FB20 DOHC	H23.12	11.12	ENGINE	●		●	1~19				
		~	~	TRANSMISSION	●		●		2,3,4			
		H25.05	13.05	ABS/VDC	●		●	1,2				
				AIRBAG	●		●					
GJ System (GJ2) (GJ3) (GJ6) (GJ7)	FB16 DOHC FB20 DOHC	H23.12	11.12	ENGINE	●		●	1~19				
		~	~	TRANSMISSION	●		●		2,3,4			
		H25.05	13.05	ABS/VDC	●		●	1,2				
				AIRBAG	●		●					
EXIGA	YA System (YA4) (YA5) (YA9) (YAM)	EJ20 DOHC EJ25 SOHC FB25 DOHC	H20.06	08.06	ENGINE	●		●	1~19		●	
			~	~	TRANSMISSION	●		●		2,3,4		
			H25.06	13.06	ABS/VDC	●		●	1,2			
					AIRBAG	●		●				
SAMBAR	TT System (TT1) (TT2)	EN07 SOHC	H11.02	99.02	ENGINE	●		●	12		●	
			~	~	TRANSMISSION	●		●				
			H24.03	12.03	ABS/VDC	●		●	1			
					AIRBAG	●		●				
	TV System (TV1) (TV2)	EN07 SOHC	H11.02	99.02	ENGINE	●		●	12			
			~	~	TRANSMISSION	●		●				
			H24.03	12.03	ABS/VDC	●		●	1			
					AIRBAG	●		●				
	TW System (TW1) (TW2)	EN07 SOHC	H11.02	99.02	ENGINE	●		●	12			
			~	~	TRANSMISSION	●		●				
			H24.03	12.03	ABS/VDC	●		●	1			
					AIRBAG	●		●				
SAMBAR TRUCK (DAIHATSU HIJET OEM)	S2# System (S201H) (S201J) (S211H) (S211J)	KF-VE	H24.12	12.12								
			~	~								
			H26.09	14.09								
SAMBAR VAN (DAIHATSU HIJET OEM)	S3# System (S321B) (S321Q) (S331B) (S331Q)	KF-VE KF-DET	H24.04	12.04								
			~	~								

5. Subaru Diagnostic Software (Ver5.0*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER		
			JP CALENDAR	WESTRN CAL							COM	EXCL	
STELLA (DAIHATSU MOVE OEM)	RN System (RN1) (RN2)	EN07 DOHC	H18.06	06.06	ENGINE	●		●	12		●		
			~	~	TRANSMISSION	●		●					
			H23.03	11.03	ABS/VDC	●		●	1				
					AIRBAG	●		●					
DIASWAGON (DAIHATSU ATRAI WAGON OEM)	S3# System (S321N) (S331N)	KF-DET	H21.09	09.09									
			~	~									
DEX (DAIHATSU COO-OEM)	M401F	K3-VE	H20.11	08.11									
			~	~									
			H25.10	13.10									
TREZIA (TOYOTA RACTIS OEM)	NSP System (NSP120X) NCP Sys (NCP120X) (NCP125X)	1NZ-FE 1NR-FE 1NR-FKE	H22.11	10.11									
			~	~									
FORESTER	SG System (SG5) (SG9)	EJ20 DOHC EJ20 SOHC EJ25 DOHC	H14.02	02.02	ENGINE	●		●	1~19		●		
			~	~	TRANSMISSION	●		●		2,3,4			
			H19.11	07.11	ABS/VDC	●		●	1,2				
			AIRBAG	●		●							
	SH System (SH5) (SH9) (SHJ)	EJ20 DOHC EJ25 DOHC FB20 DOHC	H19.12	07.12	ENGINE	●		●	1~19				
			~	~	TRANSMISSION	●		●		2,3,4			
H24.09			12.09	ABS/VDC	●		●	1,2					
		AIRBAG	●		●								
PLEO (DAIHATSU MIRA OEM)	RA System (RA1) (RA2)	EN07 DOHC EN07 SOHC	H10.10	98.10	ENGINE	●		●	12		●		
			~	~	TRANSMISSION	●		●					
			H22.03	10.03	ABS/VDC	●		●	1				
					AIRBAG	●		●					
	RV System (RV1) (RV2)	EN07 DOHC EN07 SOHC	H10.10	98.10	ENGINE	●		●	12				
			~	~	TRANSMISSION	●		●					
			H22.03	10.03	ABS/VDC	●		●	1				
					AIRBAG	●		●					
L275 Sys (L275F) (L275B) L285 Sys (L285F) (L285B)	KF-DET KF-VE		H22.04	10.04									
			~	~									
LUCRA (DAIHATSU TANTO Exe OEM)	L455F L465F	KF-DET KF-VE	H22.04	10.04									
			~	~									
			H27.04	15.04									
LEGACY	BE System (BE5) (BE9) (BEE)	EJ20 SOHC EJ20 DOHC EJ25 DOHC EZ30 DOHC	H10.12	98.12	ENGINE	●		●	1~19		●		
			~	~	TRANSMISSION	●		●		2,3,4			
			H15.05	03.05	ABS/VDC	●		●	1,2				
					AIRBAG	●		●					
	BH System (BH5) (BH9) (BHC) (BHE)	EJ20 SOHC EJ20 DOHC EJ25 DOHC EZ30 DOHC	H10.06	98.06	ENGINE	●		●	1~19				
			~	~	TRANSMISSION	●		●		2,3,4			
			H15.05	03.05	ABS/VDC	●		●	1,2				
					AIRBAG	●		●					
	BL System (BL5) (BL9) (BLE)	EJ20 SOHC EJ20 DOHC EJ25 SOHC EJ25 DOHC EZ30 DOHC	H15.06	03.06	ENGINE	●		●	1~19				
			~	~	TRANSMISSION	●		●		1,2,3,4			
			H21.05	09.05	ABS/VDC	●		●	1,2				
					AIRBAG	●		●					
	BP System (BP5) (BP9) (BPE)	EJ25 SOHC EJ25 DOHC EZ30 DOHC	H15.10	03.10	ENGINE	●		●	1~19				
			~	~	TRANSMISSION	●		●		1,2,3,4			
			H21.05	09.05	ABS/VDC	●		●	1,2				
					AIRBAG	●		●					
	BM System (BM9) (BMG) (BMM)	EJ25 SOHC EJ25 DOHC FB25 DOHC FA20 DOHC	H21.05	09.05	ENGINE	●		●	1~19				
			~	~	TRANSMISSION	●		●		2,3,4			
			H26.04	14.04	ABS/VDC	●		●	1,2				
					AIRBAG	●		●					
BR System (BR9) (BRG) (BRM)	EJ25 SOHC EJ25 DOHC FB25 DOHC	H21.05	09.05	ENGINE	●		●	1~19					
		~	~	TRANSMISSION	●		●		2,3,4				
		H26.04	14.04	ABS/VDC	●		●	1,2					
				AIRBAG	●		●						

5. Subaru Diagnostic Software (Ver5.0*) List of Active Test Functions

SYSTEM	No.	FUNCTION	SYSTEM	No.	FUNCTION
ENGINE	1	Sequential Turbo	ABS/VDC	1	ABS Function Check Mode
	2	Fuel Pump		2	VDC Function Check Mode
	3	CPC Solenoid			
	4	Radiator Fan Relay			
	5	Aircon Relay			
	6	PCV Solenoid			
	7	Atmosphere Open Solenoid			
	8	AAI Solenoid			
	9	Tank Internal Pressure Exchange SOL			
	10	Boost Pressure Control Solenoid			
	11	Secondary Air Combination Valve 1			
	12	Anti-Theft System			
	13	Fuel Pump Control OFF Drive			
	14	Fuel Pump Control ON/OFF Drive			
	15	Idle Ignition Timing Fixed			
	16	Idle Speed Control			
	17	Injector Control (Injection Stop Mode)			
	18	Injector Control (Injection Quantity Control)			
	19	EGR Valve Control			

5. Subaru Diagnostic Software (Ver5.0*) List of Work Support Functions

SYSTEM	No.	FUNCTION	WORK CONTENTS
TRANS- MISSION	1	AT AIR VENT	Performs the AT fluid air vent. Perform during the following work. •If body control valve, ATF are replaced. •If transmission ASSY is replaced or disassembled.
	2	AT LEARNING MODE	Performs the AT learning. Perform during the following work. •If TCU/transmission ASSY are replaced or disassembled.
	3	REAR DIFFERENTIAL INSPECTION	Checks if the rear differential assembly is done Perform during the following work. •After rear differential installation.
	4	AWD ON/OFF EXCHANGE MODE	Performs switching of AWD⇒FWD. Perform during the following work. •If work is required in FWD status, AWD vehicles.
ABS/VDC	1	STEERING ANGLE NEUTRAL & LATERAL G SENSOR 0 POINT SETTING MODE	Sets the steering angle sensor neutral position & lateral G sensor 0 point. Perform during the following work. •If steering angle sensor is installed or replaced. •If steering wheel is installed or replaced. •If suspension parts are installed or replaced. •If wheel alignment is installed or replaced. •If VDCCU&H/U is installed or replaced. •If VDCCU&H/U brackets are installed or replaced.
	2	FRONT-REAR G SENSOR & LATERAL G SENSOR 0 POINT SETTING MODE	Sets the front-rear G sensor & lateral G sensor 0 point. Perform during the following work. •If suspension parts are installed or replaced. •If VDCCU&H/U is installed or replaced. •If VDCCU&H/U brackets are installed or replaced.

6. Mitsubishi Diagnostic Software (Ver5.0*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER					
			JP CALENDAR	WESTRN CAL							COM	EXCL				
eK ACTIVE eK CUSTOM eK CLASSY eK SPORTS	H81W	3G83	H16.05	04.05	MPI/GDI	●		●	1~3, 7~9,11,24		●					
			~	~	AT/CVT	●		●	25							
			~	~	ABS	●		●	1~4, 14,15							
			~	~	SRS	●		●								
eK WAGON eK SPACE (Nissan Dayz OEM)	B11A B11W	3B20	14.02	H26.02												
			~	~												
eK WAGON eK SPORTS (Nissan Dayz OEM)	H81W H82W	3G833AT	H13.10	01.10												
			~	~												
			H25.05	13.05												
RVR	GA3W GA4W	4B10 4J10	H22.02	10.02	MPI/GDI	●		●	1~4, 7~11 13~19, 21		●					
			~	~	AT/CVT	●		●	3,5,9							
			~	~	ABS	●		●	7~15, 20	2~7						
			~	~	SAS	●				1						
			~	~	4WS/PwrST	●		●	1							
			~	~	SRS	●		●	1,2							
			~	~	ETACS	●		●		3,4						
i	HA1W	3B20	H18.10	06.10	MPI/GDI	●		●	1~4,7~21		●					
			~	~	AT/CVT	●		●	6,13	4,9						
			H25.07	13.07	ABS	●		●	7~10							
			~	~	SRS	●		●	1							
i-MIEV	HA3W HA4W	Y4F1 Y51	H21.09	09.09	EV-ECU	●		●	1~13		●					
			~	~	BMU	●		●	1~3	1,2						
			~	~	MCU	●		●	1	1						
	HA3W HA4W	Y4F1 Y51	H21.09 ~ ~	09.09 ~ ~	CMU1	●		●		1						
					CMU2	●		●			1					
					CMU3	●		●				1				
					CMU4	●		●				1				
					CMU5	●		●				1				
					CMU6	●		●				1				
					CMU7	●		●				1				
					CMU8	●		●				1				
					CMU9	●		●				1				
					CMU10	●		●				1				
					CMU11	●		●				1				
					CMU12	●		●				1				
					ABS	●		●				7~10				
					SRS	●		●				1				
					ETACS	●		●								
					OUTLANDER	CW4W	4B11	H17.10	05.10	MPI/GDI	●		●	1~4, 7~11, 13~19, 22	1,4,5	●
~	~	AT/CVT	●					●	30	1,2,4,9						
~	~	ABS	●					●	7~15	1,2,3,4,5						
~	~	SAS	●							1						
~	~	SRS	●					●	1							
~	~	ETACS	●					●								
~	~	AC	●					●								
CW5W CW6W	4B12 6B31	H24.10 ~ ~	12.10 ~ ~	MPI/GDI				●		●	1~4, 8~22	1,4,5				
				AT/CVT				●		●	30	1,2,4,9				
				ABS		●		●	7~15	1,2,3,4,5						
				SAS		●					1					
				SRS		●		●	1							
				ETACS		●		●								
				AC		●		●								
				GF7W GF8W		4J11 4J12	H24.10 ~ ~	12.10 ~ ~	MPI/GDI	●		●	1~4, 8~22	1,4,5		
									AT/CVT	●		●	30	1,2,4,9		
ABS	●		●						7~15	1,2,3,4,5						
SAS	●										1					
SRS	●		●		1, 2, 3											
ETACS	●		●													
AC	●		●													
OUTLANDER PHEV	GG2W	4B11	H24.10		12.10				MPI/GDI	●		●	1~4, 8~22	1,4,5	●	
			~		~				ABS	●		●	7~15, 20,21	1,2,3,4,5		
			~	~	SAS	●				1						
			~	~	SRS	●		●	1							
			~	~	ETACS	●		●		1,2,4						
AIRTREK	CU2W CU4W	4G63 4G64 4G69	H13.06	01.06	MPI/GDI	●		●	1~9, 11,28,29		●					
			~	~	AT/CVT	●		●	1~4, 18~21 26,28							
			~	~	ABS	●		●	1~4							
			~	~	SRS	●		●								
ECLIPSE ECLIPSE SPIDER	D2#Type Sys D3#Type Sys D5#Type Sys	4G63	H02.02	90.02	MPI/GDI	●		●	1~11,16,24,26		●					
			~	~	AT/CVT	●		●	1~4,18~21, 26~28							
			~	~	ABS	●		●	1,3,4,16,17,22							
			~	~	SRS	●		●								
GALANT FORTIS	CY3A	4B10	H21.12	09.12	MPI/GDI	●		●	1~4, 7~11, 1,4,5	●						

6. Mitsubishi Diagnostic Software (Ver5.0*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER								
			JP CALENDAR	WESTRN CAL							COM	EXCL							
	CY4A	4B11	~ H23.09	~ 11.09					13~19, 22										
					AT/CVT	●	●	30	1,2,4,9-16										
					ABS	●	●	7~15											
					4WS/PwrST	●	●	1											
					SAS				1										
					SRS	●	●		1										
		ETACS	●	●		1													
		AC	●																
		MPI/GDI	●	●	1~4, 7~11, 13~19, 22	1													
		AT/CVT	●	●	30	1,2,4,9-16													
		ABS	●	●	7~15														
		4WS/PwrST	●	●	1														
		SAS				1													
		SRS	●	●		1													
ETACS	●	●		1															
AC	●																		
GALANT FORTIS SPORTS BACK	CX3A CX4A CX6A	4B10 4B11 4J10	H21.12 ~ H23.09	09.12 ~ 11.09	MPI/GDI	●	●	1~4, 7~11, 13~19, 22	1,4,5		●								
					AT/CVT	●	●	30	1,2,4,9-16										
					ABS	●	●	7~15											
		4WS/PwrST	●	●	1														
		SAS				1													
		SRS	●	●		1													
		ETACS	●	●		1													
		AC	●																
		GRANDIS	NA4W	4G69	H15.05 ~ H21.03	03.05 ~ 09.03	MPI/GDI	●	●	1~4,7~11,28			●						
							ABS	●	●	1,2,3,4									
							SRS	●	●										
							COLT	Z2#Type Sys	4A90 4A91 4G15 4G19	H14.11 ~ ~	02.11 ~ ~	MPI/GDI	●	●	1~4,7~9,11,28			●	
												AT/CVT	●	●	14~24				
												ABS	●	●	1,2,3,4				
SRS	●											●							
ETACS	●	●		27~75															
COLT PLUS	Z2#Type Sys	4A90 4A91 4G15	H16.10 ~ ~	04.10 ~ ~	MPI/GDI	●	●	1~4, 7~10 28			●								
					AT/CVT	●	●	14~20											
					ABS	●	●	1,2,3,4											
					SRS	●	●												
					ETACS	●	●		27~75										
TOWN BOX (Suzuki Every OEM)	DS64W	K6A	H26.02 ~ ~	14.02 ~ ~															
TOWN BOX	U6#Type Sys	3G83	H11.04 ~ H23.12	99.04 ~ 11.12	MPI/GDI	●	●	1~3, 7~9, 11			●								
					AT/CVT	●	●	24, 25											
					ABS	●	●	1,2,3,4,14,15											
					SRS	●	●												
TOWN BOX WIDE	U65W U66W	4A31	H11.06 ~ H13.03	99.06 ~ 01.03	MPI/GDI	●	●	1~3, 7~9,11			●								
					AT/CVT	●	●	24,25											
					ABS	●	●	1,2,3,4,14,15											
					SRS	●	●												
						●	●												
DIAMANTE DIAMANTE WAGON	F1#Type Sys F2#Type Sys F3#Type Sys F4#Type Sys	6G71 6A12 6G73	H02.05 ~ H13.12	90.05 ~ 01.12	MPI/GDI	●	●	1~9,11,24			●								
					AT/CVT	●	●	1~4,18~20,26											
					ABS	●	●	21,27,28											
					SRS	●	●	1~4											
						●	●												
DION	CR5W CR6W CR9W	4G93 4G94 4G63	H14.05 ~ H17.12	02.05 ~ 05.12	MPI/GDI	●	●	1~4, 7~9, 11 28			●								
					AT/CVT	●	●	14~17, 24											
					ABS	●	●	1~4											
					SRS	●	●												
						●	●												
DELICA D2 (Suzuki Solio OEM)	MB15S	K12B	H23.03 ~ ~	11.03 ~ ~															
DELICA D3 (Nissan NV200 OEM)	BM20	HR16DE	H23.10 ~ ~	11.10 ~ ~															
DELICA D5	CV1W	4N14	H25.01 ~ ~	13.01 ~ ~	MPI/GDI	●	●	1~4,31~49	6~23		●								
					AT/CVT	●	●		1										
					ABS	●	●	7~15,20	1~6										
					SAS				1										
					SRS	●	●												
					ETACS	●	●		3										
					AC	●													
	DS64W CV4W CV5W	4J11 4B11 4B12	H19.01 ~ ~	07.01 ~ ~	MPI/GDI	●	●	1~4, 7~11 13~16,22	1,4,5										
					AT/CVT	●	●	1~12	1,2,4,9										
					ABS	●	●	1~4	1~6										
					SAS				1										
SRS	●	●		1															

6. Mitsubishi Diagnostic Software (Ver5.0*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
					ETACS	●		●		3		
					AC	●						
DELICA CARGO (Mazda Bongo OEM)	SK56MM SK56VM SKF6MM SKF6VM	WL WL RF RF	H11.10 ~	99.10 ~								
DELICA SPACE GEAR	PA#Type Sys PB#Type Sys PC#Type Sys PD#Type Sys PF#Type Sys PD#Type Sys PE#Type Sys PF#Type Sys	4G64 6G72 4D56 4M40	H06.05 ~ H14.07	94.05 ~ 02.07	MPI/GDI AT/CVT ABS SRS	● ● ● ●		● ● ● ●	1~9,11,16,20 1~4,27,28 24,25,30,31		●	
DELICA Truck (Mazda Bongo OEM)	SK2#Type Sys SK8#Type Sys SKF#Type Sys SKP#Type Sys	R2 F8 RF L8	H11.10 ~	99.10 ~								
DELICA Van (Nissan NV200 OEM)	BVM20	HR16DE	H23.10 ~	11.10 ~								
DELICA Van (Mazda Bongo OEM)	SK2#Type Sys SK8#Type Sys SKF#Type Sys SKP#Type Sys	R2 F8 RF L8	H11.10 ~ H15.11	99.10 ~ 03.11								
TOPPO	H82A	3G83(N·A)	H20.09 ~ H25.07	08.09 ~ 13.07	MPI/GDI AT/CVT ABS SRS	● ● ● ●		● ● ● ●	1~3, 7~9,11,24 25 1~4, 14,15 1		●	
TRITON	KB9T	6G74	H18.09 ~ H23.07	06.09 ~ 11.07	MPI/GDI AT/CVT ABS SRS	● ● ● ●		● ● ● ●	1~4, 8~11 13~19, 24~26 1~4, 6,12 7~10 1		●	
PAJERO	V2#Type Sys V4#Type Sys V6#Type Sys V7#Type Sys	4M40 6G72 6G74 6G75	H08.05 ~ H18.09	96.05 ~ 06.09	AT/CVT ABS SRS MPI/GDI AT/CVT ABS SRS	● ● ● ● ● ● ● ●		● ● ● ● ● ● ● ●	1~5,18~21 26,28,29 1~6,22~29 1~9,11,20 1~5,18~21 26,28,29 1~6,22~29		● ●	
	V8#Type Sys V9#Type Sys	6G72 6G75	H18.10 ~ H24.09	06.10 ~ 12.09	MPI/GDI AT/CVT ABS SRS AC	● ● ● ● ●		● ● ● ● ●	1~19 3~12 1~6,22~29 1,2	1 10,11	●	
		4M41	H20.09 ~	08.09 ~	MPI/GDI AT/CVT ABS SRS AC	● ● ● ● ●		● ● ● ● ●	1~4,34~40 50~53 1~12 1~6,22~29 1,2	4,6~14 15,24 17,18		
PAJERO IO	H6#Type Sys H7#Type Sys	4G93 4G94	H10.06 ~ H12.05	98.06 ~ 00.05	MPI/GDI AT/CVT ABS SRS	● ● ● ●		● ● ● ●	1~4, 7~9,11,28 25 1~4		●	
PAJERO Jr.	H57A	4A31	H07.11 ~ H10.05	95.11 ~ 98.05	MPI/GDI ABS SRS	● ● ●		● ● ●	1~4, 8,9,11,28 77 1~4		●	
PAJERO MINI	H56A H51A H53A H58A	4A30 4A30 4A30 4A30	H06.12 ~ H10.09	94.12 ~ 98.09	MPI/GDI AT/CVT ABS SRS	● ● ● ●		● ● ● ●	1~4, 8,9,11,28 77 25		●	
DIGNITY (Nissan Cima OEM)	BH#Type Sys BY51	VQ35VHR	H24.04 ~	12.04 ~								
PROUDIA (Nissan Fuga OEM)	BK#Type Sys BY51	VQ37VHR VQ25HR	H24.07 ~	12.07 ~								
MINICA MINICA TOPPO MINICA TOWN B	H2#Type Sys H3#Type Sys H4#Type Sys	3G81 3G83 4A30	S64.01 ~ H02.01	89.01 ~ 90.01	MPI/GDI AT/CVT ABS SRS	● ● ● ●		● ● ● ●	1~4, 8,9,11,28 77 25		●	
MINICAB Truck	U4#Type Sys U6#Type Sys	3G83	H06.01 ~	94.01 ~	MPI/GDI	●		●	1~4, 8,9,11,28 77			

6. Mitsubishi Diagnostic Software (Ver5.0*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
			H10.12	98.12	AT/CVT	●		●	25			
					ABS	●		●				
					SRS	●		●				
MINICAB Van (Suzuki Every OEM)	DS64V	K6A	H26.02 ~	14.02 ~							●	
MINICAB Van	U4#Type Sys U6#Type Sys	3G83	H06.01 ~ H10.12	94.01 ~ 98.12	MPI/GDI	●		●	1~4, 8,9,11,28 77		●	
					AT/CVT	●		●	25			
					ABS	●		●				
					SRS	●		●				
MINICAB Miev	U67V U68V	Y4F1	H23.12 ~ H25.09	11.12 ~ 13.09	EV-ECU	●		●	1~13		●	
					BMU	●		●	1~3			
					MCU	●		●				
					CMU1	●		●				
					CMU2	●		●				
					CMU3	●		●				
					CMU4	●		●				
					CMU5	●		●				
					CMU6	●		●				
					CMU7	●		●				
					CMU8	●		●				
					CMU9	●		●				
					CMU10	●		●				
					CMU11	●		●				
					ABS	●		●				
					SRS	●		●				
					ETACS	●		●				
MINICAB Miev Truck	U68T	Y51	H25.01 ~	13.01 ~	EV-ECU	●		●	1~13		●	
					BMU	●		●	1~3	1,2		
					MCU	●		●	1	1		
					CMU1	●		●		1		
					CMU2	●		●		1		
					CMU3	●		●		1		
					CMU4	●		●		1		
					CMU5	●		●		1		
					CMU6	●		●		1		
					CMU7	●		●		1		
					CMU8	●		●		1		
					CMU9	●		●		1		
					CMU10	●		●		1		
					ABS	●		●	7~10			
					SRS	●		●	1			
MIRAGE MIRAGE SEDAN	CA#Type Sys CC#Type Sys CB#Type Sys	4G13 4G15 4G91 4G92 4G93 4A10	H03.10 ~ H07.09	91.10 ~ 95.01	MPI/GDI	●						●
	CJ#Type Sys CL#Type Sys CK#Type Sys CM#Type Sys	6A10 6A11 4G13 4G15 44G63 4G92 4G93	H7.10 ~	95.10 ~	MPI/GDI	●					●	
	A05A	3A90 3A92	H24.08 ~	12.08 ~	MPI/GDI	●		●	1~4,7~11 14~19,22	1,2,3,4	●	
					AT/CVT	●		●		1~7		
					ABS	●		●	7~15,20	1,8		
					4WS/PwrST	●		●	1			
					SAS	●		●		1		
					SRS	●		●	1			
					ETACS	●		●				
					AC	●		●				
LANCER	CB#Type Sys CD#Type Sys CE#Type Sys CK#Type Sys CM#Type Sys CS#Type Sys	4G13 4G15 4G91 4G92 4G93 6A10	H03.10 ~ H07.09	91.10 ~ 95.09	MPI/GDI	●		●	1~4, 7~9,11,24		●	
					AT/CVT	●		●	1~4, 26,27,29			
					ABS	●		●	1~4			
					SRS	●		●				
LANCER EVOLUTION	CD#Type Sys CE#Type Sys CN#Type Sys CP#Type Sys CT#Type Sys CB#Type Sys	4G63 4G63 4G63 4G63 4G63 4B11	H04.10 ~ H05.12	92.10 ~ 93.12	MPI/GDI	●		●	1~4, 7~9,11,17 24,31~34		●	
					ABS	●		●	1~4			
					SRS	●		●				
			H21.08 ~ H27.08	08.08 ~ 15.08	MPI/GDI	●		●	1~4,7~11 13~19,22	1,4,5	●	
					AT/CVT	●		●		10~16		
					ABS	●		●	1~4	1~6		

6. Mitsubishi Diagnostic Software (Ver5.0*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
					SAS					1		
					SRS	●		●	1			
					ETACS	●		●		1		
					AC	●						
LANCER CARGO	CS2V	4G15	H15.01 ~ H20.11	03.01 ~ 08.11	MPI/GDI	●		●	1~4, 7~11,24			●
					AT/CVT	●		●	14~17, 24			
					ABS	●		●	1~4			
					SRS	●		●				
LANCER CARGO (Nissan AD Van OEM)	CVAY12 CVJY12 CVY12 CVZNY12	CR12DE MR18DE HR15DE HR16DE	H20.12 ~ ~	08.12 ~ ~								
LANCER CEDIA LANCER CEDIA WAGON	CS2A CS5A	4G15DOHC 4G93	H12.05 ~ ~	00.05 ~ ~	MPI/GDI	●		●	1~4, 7~9, 11 24			●
					AT/CVT	●		●	1~4, 26,27,29			
LANCER WAGON	CS2W CS5W	4G15 4G93	H15.02 ~ H19.06	03.02 ~ 07.06	MPI/GDI	●		●	1~4, 7~9, 11 24			●
					AT/CVT	●		●	1~4, 26,27,29			
					ABS	●		●	1~4			
					SRS	●		●				
LIBERO LIBERO CARGO WAGON	CB#Type Sys CD#Type Sys	4G15 4G92 4G93	H04.05 ~ H12.03	92.05 ~ 00.03	MPI/GDI	●		●	1~4, 7~9,11,24			●
					AT/CVT	●		●	1~4, 26,27,29			
					ABS	●		●	1~4			
					SRS	●		●				

6. Mitsubishi Diagnostic Software (Ver5.0*) List of Active Test Functions

SYSTEM	No.	FUNCTION	SYSTEM	No.	FUNCTION	
MPI/GDI	1	Injector Stop No.1	AT/CVT	15	Shift Solenoid	
	2	Injector Stop No.2		16	DCC Solenoid	
	3	Injector Stop No.3		17	Clutch Solenoid	
	4	Injector Stop No.4		18	1st Shift Lamp	
	5	Injector Stop No.5		19	2nd Shift Lamp	
	6	Injector Stop No.6		20	3rd Shift Lamp	
	7	Fuel Pump		21	4th Shift Lamp	
	8	Purge Control Solenoid		22	5th Shift Lamp	
	9	Ignition BTDC5° Fixed		23	6th Shift Lamp	
	10	Radiator Fan (High)		24	CLT Relay	
	11	Radiator Fan (Low)		25	PCCSV Solenoid	
	12	PWM Radiator Fan		26	DC Solenoid	
	13	Ventilation Solenoid		27	ELC Relay	
	14	A/C Relay		28	STD Shift PAT.	
	15	Oil Control Solenoid Valve		29	INV-2 Forced Stop	
	16	EGR Valve		30	Shift Buzzer	
	17	Wastegate Solenoid Valve		ABS	1	FR Solenoid Valve
	18	Variable Intake Solenoid			2	FL Solenoid Valve
	19	Dual-Mode Muffler Solenoid			3	RR Solenoid Valve
	20	SAS Mode			4	RL Solenoid Valve
	21	Engine Room Fan Relay			5	Air Vent (1)
	22	Cooling Fan			6	Air Vent (2)
	23	Fan Motor			7	FL Wheel ABS
	24	ETV Motor			8	FR Wheel ABS
	25	VVT CV			9	RL Wheel ABS
	26	Intake Air Meter			10	RR Wheel ABS
	27	Fuel Pressure Exchange Solenoid			11	FL Wheel TCL
	28	Secondary Air Solenoid			12	FR Wheel TCL
	29	Condenser Fan High			13	RL Wheel TCL
	30	Condenser Fan Low			14	RR Wheel TCL
	31	Engine Check Lamp	15		Engine TCL Operation	
	32	Glow Lamp	14		Test Mode Start	
	33	A/C Relay	15		Test Mode End	
	34	High Pressure Pump (Suction Valve)	16		FR TCL Valve	
	35	EGR Valve 0%	17		FL TCL Valve	
	36	EGR Valve 50%	18		RL TCL Valve	
	37	EGR Valve 100%	19		RR TCL Valve	
	38	Throttle Valve 0 deg	20		ESS Test Mode	
	39	Throttle Valve 45 deg	21		Stop Lamp Test Mode	
	40	Throttle Valve 90 deg	22		Accumulator Accumulated Pressure	
	41	EGR Bypass Valve	23	Accumulator Pressure Reduction		
	42	VGT Solenoid	24	FR Valve		
	43	DPF Lamp	25	FL Valve		
	44	Tank-In Pump Relay	26	FR ASTC Valve		
	45	Radiator Fan	27	FL ASTC Valve		
	46	Glow (PWM0%)	28	RL ASTC Valve		
	47	Glow (PWM50%)	29	RR ASTC Valve		
	48	Glow (PWM100%)	30	RL Valve		
	49	Idle-Up (EOL)	31	RR Valve		
	50	Glow Relay	4WS/Power Steering	1	Vehicle Speed Input	
	51	Condenser Fan Relay		2	Vehicle Speed Input 50km/h	
	52	VGT Solenoid 100%		3	PC Solenoid Valve	
	53	Swirl Control Valve		4	DCC Solenoid Valve	
AT/CVT	1	LR Solenoid Valve	ETACS	1	Buzzer	
	2	UD Solenoid Valve		2	Lock Switch	
	3	2nd Solenoid Valve		3	Unlock Switch	
	4	OD Solenoid Valve		4	Door-Mirror Switch	
	5	RED Solenoid Valve		5	Fog Lamp	
	6	DCC Solenoid Valve		6	Front Washer Switch	
	7	1st Shift Lamp		7	Front Wiper Switch	
	8	2nd Shift Lamp		8	Head Lamp	
	9	3rd Shift Lamp		9	Head Lamp High	
	10	4th Shift Lamp		10	High Speed Wiper Switch	
	11	5th Shift Lamp		11	P/W Multi-Close	
	12	A/T Control Relay		12	P/W Multi-Open	
	13	PC Solenoid Valve		13	P/W Multi-Stop	
	14	LINE Solenoid		14	Rear Washer Switch	

6. Mitsubishi Diagnostic Software (Ver5.0*) List of Active Test Functions

SYSTEM	No.	FUNCTION	SYSTEM	No.	FUNCTION
4WS/Power Steering	1	Vehicle Speed Input	EV-ECU	15	Rear Wiper Switch
	2	Vehicle Speed Input 50km/h		16	Room Lamp 0%
	3	PC Solenoid Valve		1	Motor Inverter Shutdown
	4	DCC Solenoid Valve		2	12V DCDC Shutdown
ETACS	17	Room Lamp 100%		3	Water Pump Drive
	18	Room Lamp 60%		4	Radiator Fan 1 Drive
	19	Security Horn		5	Radiator Fan 2 Drive
	20	Security Indicator		6	Car Charger Power Supply Relay
	21	Tail Gate Open		7	COMP/HTR Power Supply Relay
	22	Tail Lamp		8	Back Lamp Relay Drive
	23	Turn Lamp (LH)		9	Water Pump Drive 2
	24	Turn Lamp (LH) Switch		10	Water Pump Power Supply Relay Drive
	25	Turn Lamp (RH)		11	Motor Drive
26	Turn Lamp (RH) Switch	12		Buzzer Drive	
BMU	1	Battery Cooling Fan PWM		13	Brake Warning Lamp Flashing Drive
	2	Battery Balancer Unit		SRS	1
	3	Leakag Sensor Pre-Check	2		Passenger Seat SRS OFF Lamp
MCU	1	Capacitor Discharge	3		Passenger Seat SRS ON Lamp

6. Mitsubishi Diagnostic Software(Ver5.0*) List of Work Support Functions

SYSTEM	No.	FUNCTION	WORK CONTENTS
ENGINE	1	ENTIRE AREA LEARNING VALUE RESET	Initializes the engine ECU all learning value. Perform during the following work. •If engine ECU is replaced.
	2	STARTER COUNTER WRITING	Writes the starter counter value in the engine ECU. Perform during the following work. •If engine ECU is replaced.
	3	STARTER COUNTER INITIALIZATION	Initializes the starter counter (Starter Drive Count). Perform during the following work. •If starter is replaced.
	4	BATTERY CURRENT FLOW SENSOR NEUTRAL POINT LEARNING	Does battery current flow sensor neutral point learning. Perform during the following work. •If battery current flow sensor is replaced. •If engine ECU is replaced.
	5	ETHANOL FORCED LEARNING MODE	Switches to ethanol forced learning mode. Perform during the following work. •If engine ECU is replaced.
	6	FUEL LEAKAGE CHECK	Tests if there is or without fuel leakage. Perform during the following work. •If common rail is removed & mounted. •If fuel injection pump is removed & mounted.
	7	MICRO-INJECTION QUANTITY LEARNING	Performs the injection quantity learning. Perform during the following work. •If engine ECU is replaced. •If injector is replaced.
	8	SUPPLY PUMP EXCHANGE LEARNING	Initializes the supply pump learning value. Perform during the following work. •If suction control valve is replaced. •If supply pump is replaced.
	9	DPF EXCHANGE SERVICE	Initializes the DPF learning value. Perform during the following work. •If DPF is replaced.
	10	DPF DIFFERENTIAL PRESSURE SENSOR EXCHANGE LEARNING	Initializes the DPF exchange service learning value. Performs DPF forced regeneration after completion. Perform during the following work. •If DPF differential pressure sensor is replaced.
	11	DPF SYSTEM MALFUNCTION SERVICE	Initializes the DPF system malfunction service learning value. Performs DPF forced regeneration after completion. Perform during the following work. •If oxidation catalyst is replaced.
	12	ENGINE OIL REPLACEMENT SERVICE	Initializes engine oil replacement service learning value. Perform during the following work. ENG oil replacement (conducted only for trouble code P252)
	13	NOx TRAP CATALYST EXCHANGE SERVICE	Initializes the NOx trap catalyst exchange service learning value. Perform during the following work. •If NOx trap catalyst is replaced.
	14	LINEAR A/F SENSOR EXCHANGE SERVICE	Initializes the linear A/F sensor exchange service learning value. Perform during the following work. •If linear A/F sensor is replaced.
	15	FUEL CONSUMPTION INITIALIZATION	Initializes the fuel consumption learning value. Perform during the following work. •If engine ECU is replaced. •If EGR cooler is replaced.
	16	No.1 ~ 4 INJECTOR WRITING	Registers the No.1 ~ 4 injector ID in the engine ECU. Perform during the following work. •If injector is replaced.
	17	ALL INJECTOR WRITING	Registers the all injector ID in the engine ECU. Perform during the following work. •If all injectors are replaced.
	18	INJECTOR ID READING	Before replacement, stores the injector ID in the diagnostic tester. Perform during the following work. •If engine ECU is replaced.
	19	INJECTOR ID WRITING	Writes the stored injector ID in the engine ECU. Perform during the following work. •If engine ECU is replaced.
	20	DPF REGENERATION	•Performs the DPF forced regeneration. Perform during the following work. •After implementing DPF differential press sen exchange service •After implementing DPF system malfunction service •After implementing exhaust injector cleaning service •After implementing exhaust temp sensor replacement

6. Mitsubishi Diagnostic Software(Ver5.0*) List of Work Support Functions

			<ul style="list-style-type: none"> • Cancel ENG warning lamp ON & DPF warning image display
	21	EXHAUST INJECTOR CLEANING SERVICE	Initializes the exhaust injector cleaning service learning value. <ul style="list-style-type: none"> • DPF forced regeneration is necessary after completion. Perform during the following work. • If exhaust injector is replaced & deposits are cleaned.
AT/CVT	1	EMISSION TEST MODE	Does the emission test mode (Load Condition). <ul style="list-style-type: none"> Perform during the test implementation. • Emission Test (Exhaust Test)
	2	CVT OIL DETERIORATION FREQUENCY CLEAR	Clears the CVT oil deterioration frequency. <ul style="list-style-type: none"> Perform during the following work. • If CVT ASSY is replaced. • If valve body ASSY is replaced. • If CVT fluid is replaced.
	3	G SENSOR NEUTRAL POINT LEARNING	Does the G sensor neutral point learning. <ul style="list-style-type: none"> Perform during the following work. • If G sensor is removed, mounted, replaced. • If CVT-ECU is replaced.
	4	ELECTRIC OIL PUMP AIR VENT	Performs electric oil pump & derived channel air vent. <ul style="list-style-type: none"> Perform during the following work. • If CVT-ECU is replaced.
	5	CONTROL VALVE INITIAL VALUE	Resets the control valve initial value. <ul style="list-style-type: none"> Perform during the following work. • If transmission ASSY is replaced.
	6	CONTROL LEARNING VALUE	Initializes the CVT learning value. <ul style="list-style-type: none"> Perform during the following work. • If CVT ASSY is replaced. • If valve body ASSY is replaced.
	7	CONTROL VALVE INITIAL VALUE & LEARNING VALUE	Resets the control valve initial value & learning value. <ul style="list-style-type: none"> Perform during the following work. • If transmission ASSY is replaced.
	8	CONTROL VALVE LEARNING MODE	Switches the control valve to learning mode. <ul style="list-style-type: none"> Perform during the following work. • If valve body ASSY is replaced.
	9	IDLE STOP ESTABLISHED CONDITION INDICATION	Indicates the idle-stop established condition status. <ul style="list-style-type: none"> Perform during the following work. If idle-stop inspection will be done.
	10	ENTIRE AREA LEARNING VALUE RESET	Resets the AT-ECU learning value. <ul style="list-style-type: none"> Perform during the following work. • If transmission ASSY is replaced.
	11	INVECS-2 CONTROL STOP	Turns ON/OFF the INVECS-2 forced stop. <ul style="list-style-type: none"> Perform during the following work. • If sports mode AT inspection will be done.
AMT	1	CREDIBILITY CHECK	Checks the credibility <ul style="list-style-type: none"> Perform during the following work. • If mechanical-electronics ASSY is replaced.
	2	SHIFT FORK TEACH-IN	Performs the shift fork initialization. <ul style="list-style-type: none"> Perform during the following work. • If mechanical-electronics ASSY is replaced.
	3	STROKE TEACH-IN	Performs the stroke initialization. <ul style="list-style-type: none"> Perform during the following work. • If clutch ASSY is replaced.
	4	BOOST TEACH-IN	Performs the boost initialization. <ul style="list-style-type: none"> Perform during the following work. • If clutch ASSY is replaced.
	5	CLUTCH VENTILATION	Performs the clutch ventilation initialization. <ul style="list-style-type: none"> Perform during the following work. • If clutch ASSY is replaced. • If mechanical-electronic ASSY is replaced.
	6	RESET CLUTCH GAIN	Performs the reset clutch gain initialization. <ul style="list-style-type: none"> Perform during the following work. • If clutch ASSY is replaced.
ABS	1	EMISSION TEST MODE	Does the emission test mode (Load Condition). <ul style="list-style-type: none"> Perform during the following work. • Emission Test (Exhaust Test)

6. Mitsubishi Diagnostic Software(Ver5.0*) List of Work Support Functions

	2	ALL SENSOR NEUTRAL POINT LEARNING	Performs all sensor neutral point learning. 1. Handle Angle Sensor Neutral Point Learning 2. M/C Pressure Sensor Neutral Point Learning 3. Yaw Rate & G Sensor Neutral Point Learning Perform during the following work. •If ASC-ECU is replaced.
	3	HANDLE ANGLE SENSOR NEUTRAL POINT LEARNING	Performs steering angle sensor neutral point learning. Perform during the following work. •If alignment adjustment <Front>is implemented. •If steering wheel sensor (column switch ASSY) is replaced, removed & mounted.
	4	G SENSOR NEUTRAL POINT LEARNING	Performs the G sensor neutral point learning. Perform during the following work. •If G sensor is removed, mounted, replaced.
	5	LATERAL G SENSOR NEUTRAL POINT LEARNING	Performs the lateral G sensor neutral point learning. Perform during the following work. •If lateral G sensor is removed, mounted, replaced.
	6	M/C PRESSURE SENSOR NEUTRAL POINT LEARNING	Performs the master cylinder pressure sensor neutral point learning. Perform during the following work. •During occurrence of trouble code C123A •If ASC-ECU is replaced.
	7	CHASSIS DYNAMO TEST MODE	Switches to chassis dynamo test mode. Perform during the following work. •Chassis Dynamo (Load Test)
	8	YAW RATE & G SENSOR NEUTRAL POINT LEARNING	Performs G & Yaw rate sensor neutral poing learning. Perform during the following work. •If G & Yaw rate sensors are replaced.
	9	CUT-VALVE LIQUID PRESSURE	Does the cut-valve liquid pressure learning. Perform during the following work. •During occurrence of trouble code C2002 •If ASC-ECU is replaced.
	10	INLET VALVE LIQUID PRESSURE	Does the inlet valve liquid pressure learning. Perform during the following work. •During occurrence of trouble code C2002 •If ASC-ECU is replaced.
SAS	1	HANDLE ANGLE SENSOR NEUTRAL POINT LEARNING	Does the steering angle sensor neutral point learning. Perform during the following work. •If alignment adjustment <Front>is implemented. •If steering wheel sensor (column switch ASSY) is replaced, removed & mounted.
BMU	1	BATTERY DRIVE CAPACITY ESTIMATED INFORMATION RESET	Resets the battery drive capacity estimated information. Perform during the following work. •If battery drive is replaced.
	2	CONTROL INFORMATION RESET	Resets the BMU control information. Perform during the following work. •If battery drive is replaced. •After implementing battery drive capacity estimated info reset
CMU1	3	EEPROM ABNORMAL INFORMATION RESET	Resets the abnormal information stored in the EEPROM. Perform during the following work. •If CMU1 (Cell Monitoring Unit 1) is replaced.
CMU2	4	EEPROM ABNORMAL INFORMATION RESET	Resets the abnormal information stored in the EEPROM. Perform during the following work. •If CMU2 (Cell Monitoring Unit 2) is replaced.
CMU3	5	EEPROM ABNORMAL INFORMATION RESET	Resets the abnormal information stored in the EEPROM. Perform during the following work. •If CMU3 (Cell Monitoring Unit 3) is replaced.
CMU4	6	EEPROM ABNORMAL INFORMATION RESET	Resets the abnormal information stored in the EEPROM. Perform during the following work. •If CMU4 (Cell Monitoring Unit 4) is replaced.
CMU5	7	EEPROM ABNORMAL INFORMATION RESET	Resets the abnormal information stored in the EEPROM. Perform during the following work. •If CMU5 (Cell Monitoring Unit 5) is replaced.
CMU6	8	EEPROM ABNORMAL INFORMATION RESET	Resets the abnormal information stored in the EEPROM. Perform during the following work. •If CMU6 (Cell Monitoring Unit 6) is replaced.

6. Mitsubishi Diagnostic Software(Ver5.0*) List of Work Support Functions

CMU7	9	EEPROM ABNORMAL INFORMATION RESET	Resets the abnormal information stored in the EEPROM. Perform during the following work. •If CMU7 (Cell Monitoring Unit 7) is replaced.
CMU8	10	EEPROM ABNORMAL INFORMATION RESET	Resets the abnormal information stored in the EEPROM. Perform during the following work. •If CMU8 (Cell Monitoring Unit 8) is replaced.
CMU9	11	EEPROM ABNORMAL INFORMATION RESET	Resets the abnormal information stored in the EEPROM. Perform during the following work. •If CMU9 (Cell Monitoring Unit 9) is replaced.
CMU10	12	EEPROM ABNORMAL INFORMATION RESET	Resets the abnormal information stored in the EEPROM. Perform during the following work. •If CMU10 (Cell Monitoring Unit 10) is replaced.
CMU11	13	EEPROM ABNORMAL INFORMATION RESET	Resets the abnormal information stored in the EEPROM. Perform during the following work. •If CMU11 (Cell Monitoring Unit 11) is replaced.
CMU12	14	EEPROM ABNORMAL INFORMATION RESET	Resets the abnormal information stored in the EEPROM. Perform during the following work. •If CMU12 (Cell Monitoring Unit 12) is replaced.
EV-ECU	15	MOTOR PHASE INITIAL POSITION WRITING	Performs the motor phase initial position writing. Perform during the following work. •If motor (Power Unit) is replaced. •If MCU (Motor Control Unit) is replaced.
ETACS	1	HS INITIAL POSITION CLEAR	Clears the HS (Height Sensor) initial position. Perform during the following work. •If ETACS-ECU is replaced. •If front height sensor is replaced or desorption is done. •If rear height sensor is replaced or desorption is done. •If suspension related parts are replaced or desorption is done.
	2	HS INITIAL POSITION LEARNING	Clears the HS (Height Sensor) initial position. Perform during the following work. •If ETACS-ECU is replaced. •If front height sensor is replaced or desorption is done. •If rear height sensor is replaced or desorption is done. •If suspension related parts are replaced or desorption is done.
	3	ALARM (OPTION) OPERATIONAL HISTORY	Sets the ON/OFF of anti-theft alarm operations history. If necessary
	4	SECURITY ALARM TEST	Activates the security alarm. If necessary

7. Suzuki Diagnostic Software (Ver5.7*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER		
			JP CALENDAR	WESTRN CAL							COM	EXCL	
Kei	HN System (HN11S) (HN12S) (HN21S) (HN22S)	F6A K6A K6A VVT	H10.10	98.10	ENGINE	●		●	1,2,5		●		
			~	~	AT/CVT	●		●					
			H21.09	09.09	ABS	●		●					
					AIRBAG	●		●					
MR WAGON	MF System (MF21S) (MF22S)	K6A K6A VVT	H13.10	01.12	ENGINE	●		●	1,2,4,5,9,10,15		●		
			~	~	AT/CVT	●		●					
			H22.12	10.12	ABS	●		●					
	MF System (MF33S)	R06A VVT	H23.01	~	~	ENGINE	●		●	2~7,9,10,15,17			
						AT/CVT	●		●		1,2,3		
						IDLING STOP	●		●	1	1,2		
						ABS	●		●				
						AIRBAG	●		●				
						BCM	●		●	1,2,7,12,17,21, 24~28	1,2,5,6,7,8,		
						A/C	●		●				
PWR STEERING	●		●										
SX4	YA/YB Sys (YA11S) (YA41S) (YB11S) (YB41S)	M15A VVT J20A	H18.07	06.07	ENGINE	●		●	2,4,9,15,24		●		
			~	~	AT/CVT	●		●		5			
			H24.10	14.10	ABS	●		●					
					AIRBAG	●		●					
					BCM	●		●	1,2,17,18, 21~25,26	1,2			
					A/C	●		●					
					PWR STEERING	●		●					
ALTO	HA System (HA12S) (HA12V) (HA22S) (HA23S)	F6A K6A K6A VVT	H10.10	98.10	ENGINE	●		●	1,2,5		●		
			~	~	AT/CVT	●		●					
			H16.12	04.12	ABS	●		●					
					AIRBAG	●		●					
	HA System (HA24S) (HA24V)	K6A	H10.10	~	05.01	ENGINE	●		●	1,2			
						AT/CVT	●		●				
						ABS	●		●				
	HASystem (HA25S) (HA25V) (HA35S)	K6A K6A VVT R6A VVT	H21.12	~	09.12	ENGINE	●		●	1,2,4~7,9,10, 17~19,23			
						AT/CVT	●		●				
						IDLING STOP	●		●	1	1,2		
						ABS	●		●				
						AIRBAG	●		●				
						BCM	●		●	1,2,7,12,17,21, 24~29	1,2,5,6,7,8		
						COMBI METER	●		●	1~7	1,2,3		
PWR STEERING	●		●										
ALTO LAPIN	HE System (HE21S)	K6A K6A VVT	H14.01	02.01	ENGINE	●		●	1,2,5		●		
			~	~	AT/CVT	●		●					
			H20.10	08.10	ABS	●		●					
					AIRBAG	●		●					
	HE System (HE22S)	K6A K6A VVT	H20.11	~	08.11	ENGINE	●		●	1,2,4,5,9,10, 15,17,23			
						AT/CVT	●		●		1,2,3		
						IDLING STOP	●		●	1	3,4		
						ABS	●		●				
						AIRBAG	●		●				
						BCM	●		●	1,2,7,11,12,17, 21,24~28	1,2,5,6,7,8		
						COMBI METER	●		●				
	A/C	●		●									
	PWR STEERING	●		●									
	HE System (HE33S)	K6A K6A VVT	H27.06	~	15.06	ENGINE	●	●	●	2,4,6,7,9,15, 18,19,23,24			
						AT/CVT	●	●	●		1		
						IDLING STOP	●		●	1	1,2		
						ABS	●		●				
AIRBAG						●		●					
BCM						●		●	1,2,5,7,12,14,17, 21,24~29	1,2,5,6,7, 8,10			
COMBI METER						●		●	1,3,6,7,10	2,3,6			
PWR STEERING						●		●					
ESCUDO	TA System (TA02W) (TA52W) (TA74W)	G16A J20A M16A	H12.04	00.04	ENGINE	●		●	1,2		●		
			~	~	AT/CVT	●		●					
			H20.05	08.05	ABS	●		●					
					AIRBAG	●		●					
	TD系 (TD52W) (TD62W) (TD54W) (TD94W)	J20A H25A H27A	H12.04	~	00.04	ENGINE	●		●	1,2			
						AT/CVT	●		●				
						ABS	●		●				
						AIRBAG	●		●				

7. Suzuki Diagnostic Software (Ver5.7*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER		
			JP CALENDAR	WESTRN CAL							COM	EXCL	
EVERY	DA System (DA52V) (DA52W) (DA62V) (DA62W) (DA64V)	F6A K6A K6A CNG	H10.10	98.10	ENGINE	●		●	1,2,4,9,10,15,23		●		
			~	~	AT/CVT	●		●					
			H27.01	15.01	ABS	●		●					
					AIRBAG	●		●					
EVERY Landy	DA System (DA32W)	G13B	H13.05	01.05	ENGINE	●		●	1,2		●		
			~	~	AT/CVT	●		●					
			H16.08	04.08	ABS	●		●					
					AIRBAG	●		●					
AERIO	RA/RB/RC RD System (RA21S) (RB21S) (RC51S) (RD51S)	M15A VVT M18A VVT	H13.01	01.01	ENGINE	●		●	1,2,5		●		
			~	~	AT/CVT	●		●					
			H19.03	07.03	ABS	●		●					
					AIRBAG	●		●					
CARRY	DA/DB Sys (DA52T) (DB52T) (DA62T) (DA63T) (DA65T)		H11.01	99.01	ENGINE	●		●	1,2,4,9,10,15,23		●		
			~	~	AT/CVT	●		●					
			H25.08	13.08	ABS	●		●					
					AIRBAG	●		●					
	DA System (DA16T)			H25.09	13.09	ENGINE	●		●	2,4,5,9,10,15, 17,23			
				~	~	AT/CVT	●		●				
						ABS	●		●				
						AIRBAG	●		●				
		COMBI METER	●		●	1,3,6,7	4,5						
		PWR STEERING	●		●								
GRAND ESCUDO	TX System	H27A	H12.12	00.12	ENGINE	●		●	1,2		●		
			~	~	AT/CVT	●		●					
			H15.05	03.05	ABS	●		●					
					AIRBAG	●		●					
JIMNY	JB System (JB23W)	K6A	H10.10	98.10	ENGINE	●		●	1,2,4,9,10,15,23		●		
					AT/CVT	●		●					
					ABS	●		●					
					AIRBAG	●		●					
					COMBI METER	●		●	2,3,5,6,7,8,11				
JIMNY SIERRA	JB System (JB43W)	M13A VVT	H12.04	00.04	ENGINE	●		●	1,2,4,5,9,10,15, 17,23,24		●		
					AT/CVT	●		●					
					ABS	●		●					
					AIRBAG	●		●					
					COMBI METER	●		●	2,3,5,6,7,8,11				
SWIFT	HT System (HT51S) (HT81S)	M13A VVT M15A VVT	H12.01	00.01	ENGINE	●		●	1,2		●		
					AT/CVT	●		●					
					ABS	●		●					
					AIRBAG	●		●					
	ZC/ZD Sys (ZC11S) (ZD11S) (ZC21S) (ZD21S) (ZC31S) (ZC71S)	M13A VVT M15A VVT M16A VVT	H16.11	04.11	ENGINE	●		●	2,4,9,10,15,24				
					AT/CVT	●		●					
					ABS	●		●					
					AIRBAG	●		●					
					BCM	●		●	1,2,17,18,21~				
	ZC/ZD Sys (ZC72S) (ZD72S) (ZC32S)	M16A VVT K12B VVT	H22.08	10.08	ENGINE	●	●	●	2,4~7,9,10, 17~19,22~24			●	
					AT/CVT	●	●	●		1,2,3			
					IDLING STOP	●		●	1	1,2			
					ABS	●		●					
AIRBAG					●		●						
BCM					●		●	1,2,4,5,7,17,18, 22~24,29	3				
COMBI METER					●		●	2,3,4,5,6,7,8,9,1					
A/C	●		●										
PWR STEERING	●		●										
K-LESS START	●		●	1,2,3,4,5,6,7	1,2,5,6,7,8								
SPLASH	XB System (XB32S)	K12B	H20.10	08.10	ENGINE	●		●	2,4,9,10,15,24		●		
					AT/CVT	●		●			4		
					ABS	●		●					
					AIRBAG	●		●					
					BCM	●		●	1,2,17,21,22,24,				
					PWR STEERING	●		●					
SPACIA	MK System (MK32S) (MK42S)	R06A VVT	H25.03	13.03	ENGINE	●		●	2,9,10,15,4~		●		
					AT/CVT	●		●		1,2,3			
					IDLING STOP	●		●	1	1,2			
					ABS	●		●					
					AIRBAG	●		●					

7. Suzuki Diagnostic Software (Ver5.7*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
					BCM	●		●	1,2,7,12,17,21,24~29	1,2,5,7,8,1		
					COMBI METER	●		●	1,2,3,4,5,6,7	1,2,3		
					A/C	●		●				
					PWR STEERING	●		●				
SOLIO	MA System (MA15S)	K12B	H22.12 ~ H27.07	10.12 ~ 15.07	ENGINE	●		●	4,6,7,9,10,15,18,19,23,24		●	
					AT/CVT	●		●		1,2,3		
					IDLING STOP	●		●	1	1,2		
					ABS	●		●				
					AIRBAG	●		●				
					BCM	●		●	1,2,7,11,12,17,21,24~29	1,2,5,6,7,8,10		
					COMBI METER	●		●	1,2,3,4,5,6,7	1,2,3		
					A/C	●		●				
					PWR STEERING	●		●				
TWIN	EC System (EC22S)	K6A	H15.01 ~ H17.12	03.01 ~ 05.12	ENGINE	●		●	1,2		●	
					AT/CVT	●		●				
					ABS	●		●				
					AIRBAG	●		●				
HUSTLER	MR System (MR31S)	R06A	H26.01 ~	14.01 ~	ENGINE	●	●	●	2,4,6,7,9,15,18,19,23,24		●	
					AT/CVT	●	●	●		1,2,3		
					IDLING STOP	●		●	1	1,2,3,4		
					ABS	●		●				
					AIRBAG	●		●				
					BCM	●		●	1,2,7,12,17,21,24~29	1,2,5,6,7,8,10		
					COMBI METER	●		●	1,2,3,6,10,11	1,2,3,6		
					A/C	●		●				
					PWR STEERING	●		●				
PALETTE	MK System (MK21S)	K6A K6A VVT	H20.01 ~ H25.02	08.01 ~ 13.02	ENGINE	●		●	1,2,4,5,9,10,15,17,23		●	
					AT/CVT	●		●		1,2,3		
					IDLING STOP	●		●	1			
					ABS	●		●				
					AIRBAG	●		●				
					BCM	●		●	1,2,7,11,12,17,21,24~28	1,2,5,6,7,8		
					A/C	●		●				
					PWR STEERING	●		●				
LANDY (Nissan Serena OEM)	SC System (SC25) (SC26) SNC系 (SNC25) (SNC26)	MR20	H19.01 ~	07.01 ~								
WAGON R	MC System (MC11S) (MC12S) (MC21S) (MC22S)	F6A F6A CNG K6A K6A VVT	H10.10 ~ H15.08	98.10 ~ 03.08	ENGINE	●		●	1,2,5		●	
					ABS	●		●				
					AIRBAG	●		●				
					ENGINE	●		●	1,2,5			
					ABS	●		●				
					AIRBAG	●		●				
					ENGINE	●		●	1,2,4,5,9,10,15			
					AT/CVT	●		●		1,2,3		
					ABS	●		●				
					AIRBAG	●		●				
					BCM	●		●	1,2,7,11,12,17,21,24~28	1,2,4,5,6,7,8,9		
					A/C	●		●				
					PWR STEERING	●		●				
					ENGINE	●	●	●	2,4~			
					AT/CVT	●	●	●		1,2,3		
					IDLING STOP	●		●	1	1,2		
					ABS	●		●				
					AIRBAG	●		●				
					BCM	●		●	1,2,7,11,12,17,21,24~29	1,2,5,6,7,8,10		
					COMBI METER	●		●	1,2,3,4,5,6,7,8,9	1,2,3		
					A/C	●		●				
					PWR STEERING	●		●				
WAGON R SOLIO	MA System (MA34S) (MA64S)	M13 VVT K10A VVT	H12.12 ~ H17.07	00.12 ~ 05.07	ENGINE	●		●	1,2		●	
					AT/CVT	●		●				
					ABS	●		●				
					AIRBAG	●		●				
WAGON R+	MA System (MA63S)	K10A VVT	H11.05 ~ H12.11	99.05 ~ 00.11	ENGINE	●		●	1,2		●	
					AT/CVT	●		●				
					ABS	●		●				

7. Suzuki Diagnostic Software (Ver5.7*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
					AIRBAG	●		●				

7. Suzuki Diagnostic Software (Ver5.7*) List of Active Test Functions

SYSTEM	No.	FUNCTION	SYSTEM	No.	FUNCTION
ENGINE	1	Idling Speed Control	COMBINATION METER	1	Fuel Meter Full-Drive
	2	Initial Ignition Timing Fixed		2	Tacometer Full-Drive
	3	EGR Control Drive		3	Speedometer Full-Drive
	4	Radiator Fan Forced Drive		4	Fuel Meter Specified Drive
	5	VVT Control		5	Tacometer Specified Drive
	6	VVT Control Bank 1 IN		6	Speedometer Specified Drive
	7	VVT Control Bank 1 EX		7	Meter Buzzer Drive
	8	Swirl Control Valve Drive		8	Water Temperature Gauge Full-Drive
	9	EVAP Control		9	Water Temperature Gauge Specified
	10	Check Engine Lamp Control		10	Info Display Drive
	11	CVV			
	12	A/C Condenser Fan	KEYLESS START	1	Engine SW Illumination Drive
	13	Tank Internal Pressure Control		2	Alram Indicator Drive
	14	Fuel Trim		3	Internal Buzzer Drive
	15	Fuel Pump Control		4	External Buzzer Drive
	16	EVAP Purge Control		5	Horn Drive
	17	OCV Control		6	Keyless Start Antenna Drive
	18	OCV Control Bank 1 IN		7	immobilizer Antenna Drive
	19	OCV Control Bank 1 EX			
	20	Condenser Fan Forced Drive			
	21	TCV Control			
	22	ICV Control			
	23	Injector Control			
	24	Stepper EGR Control			
IDLING STOP	1	Starter Drive			
BCM	1	Hazard Drive			
	2	Room Lamp Drive			
	3	Head Lamp Relay Drive			
	4	Small Lamp Relay Drive			
	5	F Fog Lamp Relay Drive			
	6	Light Drive			
	7	Auto-Light Drive			
	8	Door Curtain Lamp Drive			
	9	Foot Lamp Drive			
	10	Glove Box Lamp Drive			
	11	Illumination Drive			
	12	Engine SW Illumination Drive			
	13	Rear Fog Lamp Relay Drive			
	14	High Beam Drive			
	15	Dimmer LED Drive			
	16	Dimmer Bulb Drive			
	17	Door Lock Drive			
	18	Back Door Open Drive			
	19	Fuel Lid Drive			
	20	Seatbelt Warning Lamp Drive			
	21	Warning Buzzer Drive			
	22	Rear Wiper Drive			
	23	Deicer Drive			
	24	Rear Defogger Drive			
	25	Horn Drive			
	26	Alram Indicator Drive			
	27	Front Wiper Drive			
	28	External Buzzer Drive			
	29	Shift Lock Solenoid Drive			

7. Suzuki Diagnostic Software (Ver5.7*) List of Work Support Functions

SYSTEM	No.	FUNCTION	WORK CONTENTS
AT/CVT	1	CVT LEARNING VALUE SETTING	Performs the CVT learning value setting. Perform during the following work. •If CVT controller is replaced. •If CVT ash is replaced.
	2	SLOPE SENSOR CALIBRATION	Performs the slope sensor adjustment. Perform during the following work. •If CVT controller is replaced. •If slope sensor is removed/installed.
	3	ELECTRIC OIL PUMP AIR VENT	Performs the electric oil pump air vent. Perform during the following work. •If CVT ash is replaced. •If CVT fluid is withdrawn, if injection is done.
	4	CVT FLUID QUANTITY ADJUSTMENT	Performs the CVT fluid quantity adjustment. Perform during the following work. •If replenishment of CVT fluid is necessary due to maintenance, repair, etc.
	5	LEARNING VALUE CLEAR	Initializes the AT learning value. Perform during the following work. •If AT replacement is performed.
BCM	1	SECURITY ALARM SETTING	Changes the setting (working/non-working). To be done when necessary.
	2	ANSWER-BACK SETTING	Changes the setting (hazard/room lamp). To be done when necessary.
	3	TURN SIGNAL LAMP SETTING	Changes the setting (delayed number of flashes). To be done when necessary.
	4	UNAPPLIED PARKING BRAKE ALARM	Changes the setting (working/non-working). To be done when necessary.
	5	KEYLESS START SYSTEM FUNCTION	Changes the setting (stop/allow). To be done when necessary.
	6	ANSWER-BACK SETTING (EXTERNAL BUZZER)	Changes the setting (working/non-working). To be done when necessary.
	7	MOBILE REMOTE CONTROL DETECTION OUT OF RANGE	Changes the setting (working/non-working). To be done when necessary.
	8	MOBILE REMOTE CONTROL BATTERY CONSUMPTION WARNING	Changes the setting (working/non-working). To be done when necessary.
	9	CORNERING LAMP SETTING	Changes the setting (working/non-working). To be done when necessary.
	10	REMOTE STORAGE MIRROR SETTING	Changes the setting (working/non-working). To be done when necessary.
IDLING STOP	1	STARTER DATA COPY	Performs the starter drive count temporary storage/writing. Perform during the following work. •If ENG A-STOP controller is replaced.
	2	STARTER DATA RESET	Clears the starter drive count. Perform during the following work. •If starting motor is replaced.
	3	STARTER DRIVE FREQUENCY WRITING	Manually sets the starter drive count. Perform during the following work. •If ENG A-STOP controller is replaced.
	4	STARTER DRIVE FREQUENCY RESET	Clears the starter drive count to 0 count. Perform during the following work. •If starting motor is replaced.
COMBINATION METER	1	ENERGY CHARGE INDICATOR	Changes the setting (show/hide). To be done when necessary.
	2	ECO-SCORE SETTING	Changes the setting (show/hide). To be done when necessary.
	3	A-STOP TIME•FUEL-SAVING SETTING	Changes the setting (show/hide). To be done when necessary.
	4	OIL REMINDER SETTING CHANGE	Changes the setting (show/hide). To be done when necessary.
	5	OIL REMINDER INITIALIZATION	Clears the accumulated mileage and integration period. To be done when necessary.
	6	STATUS INFORMATION LAMP	Changes the setting (show/hide). To be done when necessary.
KEY-LESS START	1	KEYLESS START SYSTEM FUNCTION	Changes the setting (stop/allow). To be done when necessary.
	2	MOBILE REMOTE CONTROL BATTERY CONSUMPTION WARNING	Changes the setting (stop/allow). To be done when necessary.
	3	ANSWER-BACK SETTING (EXTERNAL BUZZER)	Changes the setting (stop/allow). To be done when necessary.

7. Suzuki Diagnostic Software (Ver5.7*) List of Work Support Functions

SYSTEM	No.	FUNCTION	WORK CONTENTS
KEY-LESS START	4	ANSWER-BACK SETTING (ROOM)	Changes the setting (stop/allow). To be done when necessary.
	5	MOBILE REMOTE CONTROL DETECTION OUT OF RANGE	Changes the setting (stop/allow). To be done when necessary.

8. Daihatsu Diagnostic Software (Ver7.2*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		Sys	DTC	FREEZE	DATA DSPLE	ACTIVE TEST	WORK SUPPORT	COUPLER			
			JP CALENDAR	WESTRN CAL							COM	EXCL		
MAX	L950 Sys (L952S) (L960S) (L962S)	EF-DET EF-VE JB-DET	H13.10	01.10	EFI	●	●	●	14		●			
			~	~	ABS/DVS	●	●	●	37, 38, 39, 40	3				
			H17.11	05.11	SRS	●								
YRV	M200 Sys (M201G) (M211G)	EJ-VE K3-VE K3-VET	H12.08	00.08	EFI	●	●	●	14		●			
			~	~	AT	●	●	●	1, 2, 3					
			H17.07	05.07	ABS/DVS	●	●	●	37, 38, 39, 40	3				
ATRAI ATRAI WAGON	S220 Sys (S230 Sys)	EF-DET EF-VE	H11.01	99.01	EFI	●	●	●	14		●			
			~	~	AT	●			1, 2, 3					
			H17.04	05.04	ABS	●	●	●	37, 38, 39, 40					
			S320 Sys (S330 Sys)	EF-DET KF-DET	H17.05	05.08	EFI	●	●	●			14	
					~	~	ABS	●	●	●			37, 38, 39, 40	3
		SRS	●											
ATRAI 7	S220 Sys (S230 Sys)	K3-VE	H12.07	00.07	EFI	●	●	●	14		●			
			~	~	AT	●	●	●	1, 2, 3					
			H16.12	04.12	ABS/DVS	●	●	●	37, 38, 39, 40	3				
		SRS	●											
ALTIS (TOYOTA CAMRY OEM)	SXV20 Sys ACV30 Sys ACV40 Sys ACV50 Sys	5S-FE 2AZ-FE	H12.03	00.03										
			~	~										
			H22.02	10.02										
			AVV50N	2AR-FXE	H24.05	12.05								
WAKE	LA700 Sys (LA710 Sys)	KF-DET KF-VE	H26.11	14.11	EFI	●	●	●	1~5, 9, 13~16	1	●			
			~	~	CVT	●	●	●	1~9					
					ABS/VSC	●	●	●	1~40	1, 2				
					EPS	●	●	●						
					KFS	●			1~29	1~6				
					ITC	●			1~15	1				
					METER	●			1~30					
					SRS	●								
					eco IDLE	●		●	1~8	1, 2, 3				
		PCB	●	●	●		1, 2							
ESSE	L235 Sys (L245 Sys)	KF-VE	H17.12	05.12	EFI	●	●	●	2, 3, 6, 7, 8, 11, 12, 14, 16	1	●			
			~	~	ABS	●	●	●	1~40	1, 2				
					SRS	●								
OPTI	L800 Sys (L802S) (L810S)	EF-DET EF-SE EF-VE JB-DET	H12.03	00.03	EFI	●	●	●	14		●			
			~	~	ABS/DVS	●	●	●	37, 38, 39, 40					
			H14.08	02.08	SRS	●								
CAST	LA250 Sys (LA260 Sys)	KF-DET KF-VE	H27.08	15.08	EFI	●	●	●	2~5, 9, 10, 13, 14	1	●			
			~	~	CVT	●	●	●	2~9					
					ABS/VSC	●	●	●	4, 7, 8, 11, 12, 15~26, 29, 30, 33~40	1, 2				
					EPS	●								
					KFS	●			6~13	1~6				
					ITC	●			1~15	1				
					METER	●			1~30					
					SRS	●								
					eco IDLE	●		●	1~6	1, 2, 3				
		PCB	●	●	●		1, 2							
COO	M400 Sys (M401 Sys) (M411 Sys)	K3-VE 3SZ-VE	H18.05	06.05	EFI	●	●	●	2, 3, 6, 7, 8, 11, 12, 14, 16	1	●			
			~	~	AT	●	●	●	1, 2, 3	1, 2				
			H25.02	13.02	EPS	●								
					ABS	●	●	●	7, 8, 11, 12, 15, 17, 29, 30, 37, 40~51	1, 2				
		SRS	●											
COPEN	L880K	JB-DET	H14.06	02.06	EFI	●	●	●	2, 3, 6, 7, 8, 11, 12, 14, 16	1	●			
			~	~	ABS	●	●	●	11, 15, 37, 38, 39, 40	3				
			H24.08	12.08	SRS	●								
					ROOF	●	●	●	1, 2, 3, 4	1				
	LA400K	KF		H26.06	14.06	EFI	●	●	●	2, 3, 5, 9, 13, 14	1	●		
				~	~	CVT	●	●	●	2~9				
						ABS	●	●	●	7, 8, 11, 12, 16~26, 29, 30, 37~40	3			
						EPS	●							
		KFS	●			1, 2, 8, 9, 10, 12, 13, 19~25	1~6							
		ITC	●			1, 2, 5, 6, 8, 9, 11~15	1							

8. Daihatsu Diagnostic Software (Ver7.2*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		Sys	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER		
			JP CALENDAR	WESTRN CAL							COM	EXCL	
					SRS	●							
					eco IDLE	●		●	1~6	1, 2, 3			
					ROOF	●	●	●	1, 2, 3, 4	1			
					IMB	●							
STORIA	M100 Sys (M101 Sys) (M110 Sys) (M111 Sys) (M112 Sys)	EJ-DE EJ-VE K3-VE K3-VE2 JC-DET	H10.02 ~ H14.08	98.02 ~ 04.05	EFI	●	●	●	14			●	
					AT	●	●	●	1, 2, 3	1, 2			
					ABS	●	●	●	37, 38, 39, 40	3			
					SRS	●							
SONICA	L405 Sys (L415 Sys)	KF-DET	H18.06 ~ H21.04	06.06 ~ 09.04	EFI	●	●	●	2, 3, 6, 7, 8, 11, 12, 14, 16	1		●	
					CVT	●	●	●	1~9				
					ABS	●	●	●	7, 8, 11, 12, 15, 17, 29, 30, 37 40~51				
					EPS	●		●					
					ITC	●		●	1~15	1			
					METER	●		●	1~30				
					KFS	●		●	1~29	1~6			
					SRS	●							
TANTO	L350 Sys (L360 Sys)	EF-DET EF-VE	H15.11 ~ H19.11	03.11 ~ 07.12	EFI	●	●	●	2, 3, 6, 7, 8, 11, 12, 14, 16	1		●	
					ABS	●	●	●	7, 8, 11, 12, 15, 17, 29, 30, 37 40~51	1, 3			
					EPS	●		●					
					SRS	●							
	L375 Sys (L385 Sys)	KF-DET KF-VE KF	H19.12 ~ ~	07.12 ~ ~	EFI	●	●	●	2, 3, 6, 7, 8, 11, 12, 14, 16	1			
					CVT	●	●		1~9				
					ABS	●	●	●	7, 8, 11, 12, 15, 17, 29, 30, 37 40~51	1, 2			
					EPS	●		●					
					ITC	●		●	1~15	1			
					METER	●		●	1~30				
					KFS	●		●	19~29	1~6			
					SRS	●							
					eco IDLE	●		●	1~8	1, 2, 3			
	LA600 Sys (L610 Sys)	KF-DET KF-VE	H25.10 ~ ~	13.10 ~ ~	EFI	●	●	●	1~5, 9, 13~16	1			
					CVT	●	●		1~9				
					ABS/VSC	●	●	●	1~40	1, 2			
EPS					●	●	●						
ITC					●		●	1~15	1				
KFS					●		●	19~29	1~6				
SRS					●								
eco IDLE					●		●	1~8	1, 2, 3				
PCB					●	●	●		1, 2				
TANTO Exe					L455 Sys (L465 Sys)	KF-DET KF-VE KF	H21.12 ~ ~	09.12 ~ ~	EFI	●	●	●	1~5, 9, 13~16
	CVT	●	●	●					1~9				
	ABS	●	●	●					1~40	1, 2			
	EPS	●	●	●									
	ITC	●		●					1~15	1			
	METER	●		●					1~30				
	KFS	●		●					19~29	1~6			
	SRS	●											
	eco IDLE	●		●					1~8	1, 2, 3			
TERIOS	J100 Sys (J102 Sys) (J122 Sys)	HC-EJ K3-VE K3-VET	H09.04 ~ H18.01	97.04 ~ 06.01	EFI	●	●	●	14			●	
					ABS	●	●	●	37~40				
					SRS	●							
TERIOS KID TERIOS LUCIA	J111 Sys (J131 Sys)	EF-DEM EF-DET	H10.10 ~ H24.06	97.10 ~ 12.06	EFI	●	●	●	14			●	
					ABS	●	●	●	37~40				
					SRS	●							
NAKED	L750 Sys (L760 Sys)	EF-DET EF-VE	H11.11 ~ H16.04	99.11 ~ 04.04	EFI	●	●	●	14			●	
					ABS/DVS	●	●	●	37~40				
					SRS	●							
HIJET CARGO	S200 Sys (S210 Sys)	EF-DET EF-SE EF-VE	H14.01 ~ H16.11	02.01 ~ 04.11	EFI	●	●	●	14			●	
					ABS	●	●	●	37~40				
					SRS	●							
	S320 Sys (S321 Sys) (S330 Sys) (S331 Sys)	EF-DET EF-SE EF-VE EF-VN KF-DET KF-VE KF	H16.12 ~ ~	04.12 ~ ~	EFI	●	●	●	2, 3, 6, 7, 8, 11, 12, 14, 16	1			
					ABS	●	●	●	1~40	1, 2, 3			
					SRS	●							
BE-GO	J200 Sys (J210 Sys)	3SZ-VE	H18.01 ~ ~	06.01 ~ ~	EFI	●	●	●	2, 3, 6, 7, 8, 11, 12, 14, 16	1		●	
					ABS	●	●	●	7, 8, 11, 12, 15, 17, 29, 30, 37	1, 2			

8. Daihatsu Diagnostic Software (Ver7.2*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		Sys	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER			
			JP CALENDAR	WESTRN CAL							COM	EXCL		
									40~51					
					EPS	●		●						
					SRS	●								
BOON	M300 Sys (M301 Sys) (M310 Sys) (M312 Sys)	1KR-FE K3-VE KJ-VET	H16.06 ~ H22.01	04.05 ~ 10.02	EFI	●	●	●	2, 3, 6, 7, 8, 11, 12, 14, 16	1		●		
					ABS/VSC	●	●	●	7, 8, 11, 12, 15, 17, 29, 30, 37 40~51	1, 2				
					EPS	●		●						
			KFS	●		●	1~9	1~6						
			SRS	●										
			EFI	●	●	●	1~5, 9, 13~16	1						
	BOON LUMINAS	M502 Sys (M512 Sys)	3SZ-VE	H20.12 ~ H24.03	08.12 ~ 12.03	CVT	●	●	●	1~9				
						ABS/VSC	●	●	●	1~40	1, 2			
						EPS	●	●	●					
				ITC	●		●	1~15	1					
				METER	●		●	1~30						
				KFS	●		●	19~29	1~6					
MIRA		L700 Sys (L710 Sys)	EF-DET EF-SE EF-VE EF-VE2	H10.10 ~ H16.11	98.10 ~ 02.11	EFI	●	●	●	14			●	
						ABS/DVS	●	●	●	37, 38, 39, 40				
						SRS	●							
		L250 Sys (L260 Sys)	EF-SE EF-VD EF-VE	H14.12 ~ H18.11	02.12 ~ 09.08	EFI	●	●	●	1~5, 9, 13~16	1			
						ABS	●	●	●	7, 8, 11, 12, 15, 17, 29, 30, 37 40~51	1, 3			
					EPS	●		●						
					SRS	●								
	L275 Sys (L285 Sys)	KF-DET KF-VE	H18.12 ~	06.12 ~	EFI	●	●	●	2, 3, 6, 7, 8, 11, 12, 14, 16	1				
					CVT	●		●	1~9					
	L275 Sys (L285 Sys)	KF-DET KF-VE	H18.12 ~	06.12 ~	ABS	●	●	●	1~40	1, 2, 3				
					EPS	●		●						
ITC					●		●	1~15	1					
METER					●		●	1~30						
KFS					●		●	19~29	1~6					
SRS					●									
MIRA CNG CARS	L250V Revision	KF-VN	H20.12 ~	08.12 ~	eco IDLE	●		●	1~8	1, 2, 3				
					EFI	●	●	●	2, 3, 6, 7, 8, 11, 12, 14, 16	1				
					ABS	●	●	●	1~40	1, 2				
					EPS	●		●						
					SRS	●								
MIRA e-s	LA300 Sys (LA310 Sys)	KF-VE	H23.09 ~	11.09 ~	EFI	●	●	●	1~5, 9, 13~16	1				
					CVT	●	●	●	1~9					
					ABS/VSC	●	●	●	1~40	1, 2				
					EPS	●		●						
					ITC	●		●	1~15	1				
					METER	●		●	1~30					
					SRS	●								
					eco IDLE	●		●	1~8	1, 2, 3				
					PCB	●	●	●	1~5, 9, 13~16	1				
MIRA COCOA	L675 Sys (L685 Sys)	KF-VE	H21.08 ~	09.08 ~	EFI	●	●	●	1~5, 9, 13~16	1				
					CVT	●		●	1~9					
					ABS	●	●	●	1~40	1, 2				
					EPS	●		●						
					ITC	●		●	1~15	1				
					METER	●		●	1~30					
MIRA GINO	L700 Sys (L710 Sys)	EF-DET EF-VE	H11.03 ~ H16.10	99.03 ~ 04.10	EFI	●	●	●	14					
					AT	●	●	●	1, 2, 3	1, 2				
					ABS	●	●	●	7, 8, 11, 12, 15, 17, 29, 30, 37 40~51	1, 3				
	L650 Sys (L660 Sys)	EF-VE	H16.11 ~	04.11 ~	SRS	●								
					EFI	●	●	●	1~5, 9, 13~16	1				
					ABS	●	●	●	7, 8, 11, 12, 15, 17, 29, 30, 37	1, 3				

8. Daihatsu Diagnostic Software (Ver7.2*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		Sys	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER			
			JP CALENDAR	WESTRN CAL							COM	EXCL		
			H20.12	08.12	SRS	●			40~51					
MIRA GINO 1000	L701 Sys (L711 Sys)	EJ-VE	H14.08	02.08	EFI	●	●	●	14			●		
			~	~	ABS	●		●	7, 8, 11, 12, 15, 17, 29, 30, 37 40~51	1, 3				
MOVE	L900 Sys (L910 Sys) (L902 Sys) (L912 Sys)	EF-DET EF-SE EF-VE JB-DET	H16.11	04.11	SRS	●								
			H11.12	99.12	EFI	●	●	●	14				●	
			~	~	AT	●	●	●	1, 2, 3	1, 2				
			H14.09	02.09	ABS/DVS	●	●	●	37, 38, 39, 40					
			~	~	EPS	●		●						
	L150 Sys (L160 Sys) (L152 Sys)	EF-DET EF-VE JB-DET	H14.10	02.10	EFI	●	●	●	2, 3, 4, 5, 9, 13, 14, 15, 16	1				
				~	~	ABS/VSC	●	●	●	7, 8, 11, 12, 15, 17, 29, 30, 37 40~51	1, 3			
				H18.09	06.09	EPS	●		●					
				~	~	KFS	●		●	1~12	1~6			
				~	~	SRS	●							
	L175 Sys (L185Sys)	KF-DET KF-VE	H18.10	08.12	EFI	●	●	●	1~5, 9, 13~16	1				
				~	~	CVT	●		●	1~9				
				H22.11	10.12	ABS/VSC	●	●	●	1~40	1, 2			
				~	~	EPS	●		●					
				~	~	KFS	●		●	1~12	1~6			
				~	~	ITC	●		●	1~15	1			
				~	~	METER	●		●	1~30				
				~	~	SRS	●							
				~	~	eco IDLE	●		●	1~8	1, 2, 3			
				~	~	PCB	●	●	●		1, 2			
LA100 Sys (LA110 Sys)	KF-DET KF-VE	H22.12	10.12	EFI	●	●	●	1~5, 9, 13~16	1					
			~	~	CVT	●	●	●	1~9					
			~	~	ABS/VSC	●	●	●	1~40	1, 2				
			~	~	EPS	●		●						
			~	~	KFS	●		●	19~29	1~6				
			~	~	ITC	●		●	1~15	1				
			~	~	METER	●		●	1~30					
			~	~	SRS	●								
			~	~	eco IDLE	●		●	1~8	1, 2, 3				
			~	~	PCB	●	●	●		1, 2				
MOVE CONTE	L575 Sys (L585 Sys)	KF-DET KF-VE	H20.08	08.08	EFI	●	●	●	1~5, 9, 13~16	1				
			~	~	CVT	●	●	●	1~9					
			~	~	ABS	●	●	●	1~40	1, 2				
			~	~	EPS	●		●						
			~	~	KFS	●		●	19~29	1~6				
			~	~	ITC	●		●	1~15	1				
			~	~	METER	●		●	1~30					
			~	~	SRS	●								
			~	~	eco IDLE	●		●	1~8	1, 2, 3				
			~	~	PCB	●	●	●		1, 2				
MOVE LATTE	L550 Sys (L560 Sys)	EF-DET EF-VE	H16.08	04.08	EFI	●	●	●	2, 3, 4, 5, 9, 13, 14, 15, 16	1				
			~	~	ABS	●	●	●	7, 8, 11, 12, 15, 17, 29, 30, 37 40~51	1, 3				
			H21.03	09.03	EPS	●		●						
			~	~	KFS	●		●	19~29	1~6				
			~	~	SRS	●								
MOBIUS (TOYOTA PRIUS α OEM)	ZVW41N Sys	2ZR-FXE	H25.04	13.04										

8. Daihatsu Diagnostic Software (Ver7.2*) List of Active Test Functions

SYSTEM	No.	FUNCTION	SYSTEM	No.	FUNCTION	
EFI (ENGINE)	1	ISC Stepper	ABS/VSC	28	SPFL	
	2	Fuel Pump		29	Master Cut Solenoid 2	
	3	Purge VSV		30	Master Cut Solenoid 1	
	4	A/C Magnetic Clutch Relay		31	SMR2	
	5	VSV2 ABV		32	SMR1	
	6	VSV1		33	Reservoir Cut Solenoid 2	
	7	VSV2		34	Reservoir Cut Solenoid 1	
	8	VSV All		35	3rd Air System Repair	
	9	Boost Pressure VSV		36	2nd Air System Repair	
	10	Radiator Fan		37	RL Valve Motor	
	11	Radiator Fan (1 Level)		38	RR Valve Motor	
	12	Radiator Fan (2 Level)		39	FL Valve Motor	
	13	C Terminal Duty		40	FR Valve Motor	
	14	T Terminal		41	DVS Buzzer	
	15	ISC Rotary		42	FR Retention Solenoid Valve	
	16	ISC		43	FR Decompression Solenoid Valve	
CVT	1	T Terminal		44	FL Retention Solenoid Valve	
	2	Down-Shift SOL		45	FL Decompression Solenoid Valve	
	3	Up-Shift SOL		46	RR Retention Solenoid Valve	
	4	Gear Ratio		47	RR Decompression Solenoid Valve	
	5	Belt Clamp Pressure Line Pressure		48	RL Retention Solenoid Valve	
	6	Lock-UP Differential Pressure		49	RL Decompression Solenoid Valve	
	7	Belt Clamp Pressure Control SOL		50	Accumulator Relief SV1	
	8	Lock-UP Control SOL		51	Accumulator Relief SV2	
	9	Line Pressure Control SW SOL		52	Rear Valve Motor	
	10	Belt Clamp Pressure High Pressure		ITC (BODY)	1	Head Light
	11	Gear Ratio Fixed			2	Tail Light
	12	DS2 Solenoid Drive			3	Auto-Mirror Storage
	13	DS1 Solenoid Drive			4	Auto-Mirror Recovery
	14	Belt Clamp Pressure Control			5	Slow Front Wiper
	15	Lock-UP Control			6	Fast Front Wiper
	16	Shift SW SOL			7	Rear Wiper Motor
AT	1	Solenoid No.1	8		Siren	
	2	Solenoid No.2	9		Buzzer	
	3	Solenoid No.3	10		Security Indicator	
	4	Duty Solenoid	11		Left Turn Lamp	
ECO IDLE	1	ECO-RUN Permit Tilt	12		Right Turn Lamp	
	2	ECO-RUN Permit CVT	13		Room Lamp	
	3	ECO-RUN Permit EFI	14		Door Unlock Motor	
	4	ECO-RUN Permit Battery	15		Door Lock Motor	
	5	T Terminal	METER	1	Speedometer	
	6	Starter Drive Signal		2	Tacometer	
	7	Hill Start SOL Signal		3	Fuel Gauge	
	8	C Terminal Duty		4	Water Temperature Gauge	
ABS/VSC	1	EBS Relay		5	Voltmeter	
	2	BRK Inhibit Relay		6	Oil Pressure Gauge	
	3	H/B Motor Relay		7	Fuel Consumption Meter	
	4	Stop Lamp Relay		8	Shift Indicator 1	
	5	Pre-Charge Pump		9	Shift Indicator 2	
	6	TRC Motor Relay		10	Shift Indicator 3	
	7	ABS Motor Relay		11	Display 1	
	8	Solenoid Relay		12	Display 2	
	9	4WD Warning Lamp		13	Indicator 1	
	10	ARS Warning Lamp		14	Indicator 2	
	11	Brake Warning Lamp		15	Indicator 3	
	12	Slip Indicator	16	Indicator 4		
	13	VSC TRC Off Lamp	17	Indicator 5		
	14	VSC Warning Lamp	18	Indicator 6		
	15	ABS Warning Lamp	19	Indicator 7		
	16	Buzzer	20	Indicator 8		
	17	TRC Off Lamp	21	Indicator 9		
	18	VSC Off Lamp	22	Indicator 10		
	19	RL Wheel Decompression SRLR	23	Indicator 11		
	20	RL Wheel Retention SRLH	24	Indicator 12		
	21	RR Wheel Decompression SRRR	25	Indicator 13		
	22	RR Wheel Retention SRRH	26	Indicator 14		
	23	FL Wheel Decompression SFLR	27	Indicator 15		
	24	FL Wheel Retention SFLH	28	Indicator 16		
	25	FR Wheel Decompression SFRR	29	Indicator 17		
	26	FR Wheel Retention SFRH	30	Indicator 18		
	27	SPFR				

8. Daihatsu Diagnostic Software (Ver7.2*) List of Active Test Functions

SYSTEM	No.	FUNCTION	SYSTEM	No.	FUNCTION
KFS (KEY-FREE)	1	Door Lock Control	ROOF (ELECTRIC ROOF STORAGE)	1	Quarter Wind-Up
	2	Door Unlock Control		2	Quarter Wind-Down
	3	Power Window Down		3	Side Wind-Up
	4	Power Window Up		4	Side Wind-Down
	5	Actuator Reverse	ACC (RADAR CRUISE)	1	Radar Cruise Optical Axis
	6	D-Seat Car Indoor Antenna			
	7	P-Seat Car Indoor Antenna			
	8	D-Seat Car Outdoor Antenna			
	9	P-Seat Car Outdoor Antenna			
	10	Front-Seat Car Indoor Antenna			
	11	Rear-Seat Car Indoor Antenna			
	12	Immobilizer Amplifier Transmission			
	13	Security Indicator			
	14	External Antenna D-Seat DTC			
	15	External Antenna P-Seat DTC			
	16	Internal Antenna F-Seat DTC			
	17	Internal Antenna R-Seat DTC			
	18	Immobilizer Amplifier Transmission DTC			
	19	Starter Relay Drive Request			
	20	IG2 Relay Output Circuit			
	21	IG1 Relay Output Circuit			
	22	ACC Relay Output Circuit			
	23	Night Illumination			
	24	Green Light Indicator			
	25	Orange Points Indicator			
	26	Door Lock Control			
	27	Door Unlock Control			
	28	Door Lock Inversion Control			
	29	Outdoor Antenna Mirror			

8. Daihatsu Diagnostic Software (Ver7.2*) List of Work Support Functions

SYSTEM	No.	FUNCTION	WORK CONTENTS
EFI	1	ECU PARTS NUMBER DISPLAY	Displays the ECU parts number. Perform during the following work. •If ECU is replaced.
CVT	1	ECU PARTS NUMBER DISPLAY	Displays the ECU parts number. Perform during the following work. •If ECU is replaced.
	2	ECU LEARNING VALUE CLEAR	Initializes the CVT-ECU learning value. Perform during the following work. •If transaxle, valve body, oil press sensor are •IF CVT-ECU is replaced.
AT	1	ECU PARTS NUMBER DISPLAY	Displays the ECU parts number. Perform during the following work. •If ECU is replaced.
	2	ECU LEARNING VALUE CLEAR	Initializes the AT-ECU learning value. Perform during the following work. •If auto-T/M, valve body (including solenoid valve) are replaced. •If transmission is overhauled.
ECO-IDLE (ECO-Idling)	1	ECU PARTS NUMBER DISPLAY	Displays the ECU parts number. Perform during the following work. •If ECU is replaced.
	2	ECO-RUN ECU INITIAL LEARNING	Initializes the ECO-RUN ECU learning value. Perform during the following work. •If ECO-RUN ECU is replaced. •If G sensor is replaced. •If brake master pressure sensor is replaced.
	3	STARTER OPERATION FREQUENCY WRITING	Writes the starter operation frequency. Perform during the following work. •If starter is replaced. •If ECO-RUN ECU is replaced.
ABS/VSC	1	ECU PARTS NUMBER DISPLAY	Displays the ECU parts number. Perform during the following work. •If ECU is replaced.
	2	2nd AIR SYSTEM REPAIR	Performs the ABS/VSC actuator internal air vent. Perform during the following work. •If air contamination can be seen in the actuator.
	3	ABS AIR VENT	Performs air vent in the ABS pipe, actuator. Perform during the following work. •After brake fluid replacement •After ABS actuator replacement
EPS (Electric Power Steering)	1	ECU PARTS NUMBER DISPLAY	Displays the ECU parts number. Perform during the following work. •If ECU is replaced.
	2	STEERING 0 POINT REVISION	Adjusts the EPS neutral point. Perform during the following work. •During power steering computer ASSY replacement •If there is difference in right and left steering force.
SRS (Airbag)	1	ECU PARTS NUMBER DISPLAY	Displays the ECU parts number. Perform during the following work. •If ECU is replaced.
ITC (Body)	1	ECU PARTS NUMBER DISPLAY	Displays the ECU parts number. Perform during the following work. •If ECU is replaced.
KFS (Key-Free)	1	ECU PARTS NUMBER DISPLAY	Displays the ECU parts number. Perform during the following work. •If ECU is replaced.
	2	ANTENNA CONNECTION DIAGNOSIS	Performs the antenna communication test. Perform during the following work. •During antenna connection diagnosis
	3	SMART COMMUNICATION TEST	Performs the smart communication test. Perform during the following work. •During smart communication diagnosis
	4	TRANSPONDER COMMUNICATION	Performs the transponder communication test. Perform during the following work. •During transponder communication diagnosis
	5	MAIN KEY-CARD KEY CONDITION	Checks the registered key numbers. Perform during the following work. •Checks main key*card key registration condition.
	6	WIRELESS COMMUNICATION TEST	Performs the wireless communication test. Perform during the following work. •During wireless communication diagnosis

8. Daihatsu Diagnostic Software(Ver7.2*) List of Work Support Functions

ROOF (Electronic Roof)	1	ECU PARTS NUMBER DISPLAY	Displays the ECU parts number. Perform during the following work. •If ECU is replaced.
PCB (Smart Assist)	1	ECU PARTS NUMBER DISPLAY	Displays the ECU parts number. Perform during the following work. •If ECU is replaced.
	2	LASER RADAR OPTICAL AXIS ADJUSTMENT	Adjusts the laser radar optical axis. Perform during the following work. •During laser radar replacement

9. BENZ Diagnostic Software (BENZ Ver1.0*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPOR	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
C-Class C203 (~2003)	1.8 C180K	271.946	H14-15	2002-03	ENGINE	●					●	
	1.8 C200 CGI	271.942	H14-15	2002-03								
	1.8 C200K	271.940	H14-15	2002-03	ABR/ESP	●						
	1.8 C230K	271.948	H14-15	2002-03								
	2.0 C180	111.951	H12-15	2000-03								
	2.0 C200	111.951	H12-15	2000-03	AIRBAG	●						
	2.0 C200K	111.955	H12-15	2000-03								
	2.2 C200 CDI	611.962	H12-15	2000-03								
	2.2 C220 CDI	611.962	H12-15	2000-03	INSTRUMENT	●				1		
	2.3 C230K	111.981	H13-15	2001-03								
	2.6 C240	112.912	H12-15	2000-03								
	2.6 C240 4Matic	112.916	H14-15	2002-03	CLIMATE	●						
	2.7 C270 CDI	612.962	H12-15	2000-03								
	3.2 C320	112.946	H12-15	2000-03								
	3.2 C320 4Matic	112.953	H14-15	2002-03	ENGINE	●					●	
1.8 C160K	271.921	H16-19	2004-07									
1.8 C180K	271.946	H15-20	2003-08									
1.8 C200 CGI	271.942	H15-19	2003-07									
1.8 C200K	271.940	H15-20	2003-08									
1.8 C230K	271.948	H15-18	2003-06									
2.2 C200 CDI	611.962	H15-16	2003-04									
	646.962	H15-20	2003-08									
	646.963	H15-20	2003-08									
2.2 C220 CDI	611.962	H15-16	2003-04									
	646.962	H15-20	2003-08									
	646.963	H15-20	2003-08									
2.5 C230	272.920	H16-20	2004-08									
2.6 C240	112.912	H15-18	2003-06									
2.6 C240 4Matic	112.916	H15-18	2003-06									
2.7 C270 CDI	612.962	H15-18	2003-06									
3.0 C280	272.940	H16-20	2004-08									
3.0 C280 4Matic	272.941	H16-20	2004-08									
3.0 C320 CDI	642.910	H16-20	2004-08									
3.2 C320	112.946	H15-18	2003-06									
3.2 C320 4Matic	112.953	H15-18	2003-06									
3.5 C350	272.960	H17-20	2005-08									
3.5 C350 4Matic	272.970	H16-20	2004-08									
C-Class C204	1.8 C180K	271.952	H19-21	2007-09	ENGINE	●					●	
	1.8 C200K	271.950	H19-21	2007-09	TRANSMISSION	●						
	2.2 C200 CDI	646.811	H19-21	2007-09								
	2.2 C220 CDI	646.811	H19-21	2007-09	ABR/ESP	●						
	2.5 C230	272.921	H19-21	2007-09								
	2.5 C230 4Matic	272.911	H19-21	2007-09								
	3.0 C280	272.947	H19-21	2007-09	AIRBAG	●						
	3.0 C280 4Matic	272.948	H19-21	2007-09								
	3.0 C300	272.947	H19-21	2007-09								
	3.0 C300 4Matic	272.948	H19-21	2007-09	INSTRUMENT	●				1		
	3.0 C320 CDI	642.960	H19-21	2007-09								
	3.0 C320 CDI 4Matic	642.961	H19-21	2007-09								
	3.5 C350	272.961	H19-21	2007-09	CLIMATE	●						
	3.5 C350 4Matic	272.971	H19-21	2007-09								
CLK-Class CLK209	1.8 200 CGI	271.942	H14-16	2002-04	ENGINE	●					●	
	1.8 200K	271.940	H14-16	2002-04	TRANSMISSION	●						
	2.6 240	112.912	H14-16	2002-04	ABR/ESP	●						
	2.7 270 CDI	612.967	H14-16	2002-04	AIRBAG	●						
	3.2 320	112.946	H14-16	2002-04	INSTRUMENT	●				1		
		112.955	H14-16	2002-04								
	5.0 500	113.968	H14-16	2002-04	CLIMATE	●						
CLS-Class CLS219	3.0 320 CDI	642.920	H17-18	2005-06	ENGINE	●					●	
					TRANSMISSION	●						
		642.922	H17-18	2005-06	ABR/ESP	●						
					AIRBAG	●						
	3.5 350	272.964	H17-18	2005-06	INSTRUMENT CLUSTER	●						
	5.0 500	113.967	H17-18	2005-06	CLIMATE	●						
				ASSYST						1		
E-Class E211	1.8 E200K	271.941	H14-18	2002-06	ENGINE	●					●	
		271.943	H14-18	2002-06	TRANSMISSION	●						
	2.2 E200 CDI	646.951	H14-18	2002-06								
	2.2 E220 CDI	646.961	H14-18	2002-06								
	2.6 E240	112.913	H14-17	2002-05	ABR/ESP	●						
	2.6 E240 4Matic	112.917	H14-17	2002-05								
	2.7 E270 CDI	647.961	H14-17	2002-05	AIRBAG	●						
	3.0 E280	272.943	H17-18	2005-06								
	3.0 E280 CDI	642.920	H17-18	2005-06								
	3.0 E320 CDI	642.920	H17-18	2005-06	INSTRUMENT	●						
	3.2 E280 CDI	648.961	H16-17	2004-05								
	3.2 E320	112.949	H14-17	2002-05								
	3.2 E320 4Matic	112.954	H14-17	2002-05								
3.2 E320 CDI	648.961	H14-17	2002-05									
				CLIMATE	●							

9. BENZ Diagnostic Software (BENZ Ver1.0*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPOR	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
	3.5 E350	272.964	H16-18	2004-06								
	3.5 E350 4Matic	272.972	H16-18	2004-06								
	3.9 E400 CDI	628.961	H15-17	2003-05	ASSYST					1		
	5.0 E500	113.967	H14-18	2002-06								
	5.0 E500 4Matic	113.969	H14-18	2002-06								
S-Class S220	2.8 S280	112.922	H10-14	1998-02	ENGINE	●						●
	3.2 S320	112.944	H10-14	1998-02	TRANSMISSION	●						
	3.2 S320 CDI	613.960	H11-14	1999-02	ABR/ESP	●						
	4.0 S400 CDI	628.960	H12-14	2000-02	AIRBAG	●						
	4.3 S430	113.941	H10-14	1998-02								
	5.0 S500	113.960	H10-14	1998-02	INSTRUMENT CLUSTER	●				1		
S-Class S221	5.8 S600	137.970	H11-14	1999-02								
	2.8 S280	112.922	H14-15	2002-03	ENGINE	●						●
	3.2 S320	112.944	H14-15	2002-03	TRANSMISSION	●						
	3.2 S320 CDI	613.960	H11-15	1999-03	ABR/ESP	●						
		648.960	H14-18	2002-06								
	3.7 S350	112.972	H14-18	2002-06	AIRBAG	●						
	3.7 S350 4Matic	112.975	H14-18	2002-06								
	4.0 S400 CDI	628.960	H14-18	2002-06								
	4.3 S430	113.941	H14-18	2002-06	INSTRUMENT CLUSTER	●						
	4.3 S430 4Matic	113.948	H14-18	2002-06								
	5.0 S500	113.960	H14-18	2002-06	CLIMATE	●						
5.0 S500 4Matic	113.966	H14-18	2002-06									
5.5 S600	275.950	H14-18	2002-06	ASSYST PLUS					1			
5.8 S600	137.970	H11-14	1999-02									
SL-Class SL230	3.7 SL350	112.973	H14-15	2002-03	ENGINE	●						●
					TRANSMISSION	●						
	5.0 SL500	113.963	H14-15	2002-03	ABR/ESP	●						
					AIRBAG	●						
	5.5 SL600	275.951	H14-15	2002-03	INSTRUMENT CLUSTER	●				1		
				CLIMATE	●							

9. BENZ Diagnostic Software (BENZ Ver1.0*) List of Work Support Functions

SYSTEM	No.	FUNCTION	WORK CONTENTS
INSTRUMENT CLUSTER	1	SERVICE INTERVAL RESET	Initializes the oil service interval. Perform during the following work. • After oil change.
ASSYST	1	SERVICE INTERVAL RESET	Initializes the oil service interval. Perform during the following work. • After oil change.
ASSYST PLUS	1	SERVICE INTERVAL RESET	Initializes the oil service interval. Perform during the following work. • After oil change.

10. BMW Diagnostic Software (BMW/MINI/OBD II Ver1.0*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPLY	ACTIVE TEST	WORK SUPPOR	COUPLER					
			JP CALENDAR	WESTRN CAL							COM	EXCL				
3 Series E46	1.6 316i	N40 B16A	H14-17	2002-05	ENGINE	●				1	●					
	1.6 316ti Compact	N40 B16A	H14-17	2002-05												
	1.8 316i	N42 B18A	H13-17	2001-05												
	1.8 316ti Compact	N45 B16A	H16-19	2004-07	TRANSMISSION	●										
														N42 B18A	H13-17	2001-05
														N46 B18	H16	2004
	1.8 318i	N46 B18	H16-19	2004-07	ABS ASC DSC	●										
	2.0 318d	20 4D 1	H13-16	2001-04												
		20 4D 4	H15-17	2003-05												
	2.0 318i	N42 B20A	H13-17	2001-05	AIRBAG	●										
	2.0 318td Compact	20 4D 1	H15-16	2003-04												
		20 4D 4	H15-17	2003-05												
	2.0 318ti Compact	N42 B20A	H13-17	2001-05	METER PANEL	●				3.4						
		N46 B20	H16	2004												
	2.0 320d	20 4D 4	H13-19	2001-07	HEATER/ AIRCON	●										
	2.0 320td Compact	20 4D 4	H13-17	2001-05												
	2.2 320i	22 6S 1	H12-19	2000-07	3.0 330d	●										
2.5 325i	25 6S 5	H12-19	2000-07													
2.5 325ti Compact	25 6S 5	H13-17	2001-05													
3.0 330i	30 6D 2	H15-19	2003-07	3.0 330i	●											
3.0 330i	30 5S 3	H12-19	2000-07													
3.2 M3	32 6S 4	H12-19	2000-07													
3 Series E90/91/ 92/ 93	1.6 316i	N45 B16A	H17-21	2005-09	ENGINE	●				1	●					
	2.0 318d	20 4D 4	H17-21	2005-09												
	2.0 318i	N46 B18	H17-21	2005-09	TRANSMISSION	●										
		N46 B20B	H17-21	2005-09												
	2.0 320d	20 4D 4	H17-21	2005-09	ABS ASC DSC	●										
	2.0 320i	N46 B20B	H17-21	2005-09												
	2.0 320si	N45 B20AA	H17-18	2005-06												
	2.5 323i	N52 B25A	H17-21	2005-09	AIRBAG	●										
	2.5 325i	N52 B25A	H17-19	2005-07												
		N52 B25AF	H18-21	2006-09	METER PANEL	●					3.4					
3.0 330d	30 6D 3	H17-21	2005-09	HEATER/ AIRCON	●											
3.0 330i	N52 B30A	H17-19	2005-07													
3.0 335i	N54 B30A/AA	H18-21	2006-09													
5 Series E60/61 (2003~05)	2.2 520i	22 6S 1	H15-17	2003-05	ENGINE	●				1.2	●					
					TRANSMISSION	●				1						
	2.5 525d	25 6D 2	H15-17	2003-05	ABS ASC DSC	●					1					
	2.5 525i	25 6S 5	H15-17	2003-05	SBSL	●										
	3.0 530d	30 6D 2	H15-17	2003-05	SBSR	●										
	3.0 530i	30 6S 3	H15-17	2003-05	SIM	●										
3.0 535d	30 6D 4	H16-17	2004-05	ZGM	●											
4.4 545i	N62 B44A	H15-17	2003-05	SFZ	●											
				SZL	●											
				STVL	●											
				STVR	●											
				METER PANEL	●					1.2						
				HEATER/AC	●					1						
5 Series E60/61 (2005~)	2.0 520d	20 4D 4	H17-21	2005-09	ENGINE	●				1	●					
	2.5 523i	N52 B25A	H17-19	2005-07												
	2.5 525d	25 6D 2	H17-19	2005-07	TRANSMISSION	●										
	2.5 525i	N52 B25A	H17-19	2005-07	ABS ASC DSC	●										
	3.0 530d	30 6D 2	H17-18	2005-06	AIRBAG	●										
	3.0 530i	N52 B30A	H17-19	2005-07	METER PANEL	●				3.4						
	3.0 535d	30 6D 4	H17-19	2005-07												
4.0 540i	N62 B40A	H17-21	2005-09	HEATER/AC	●											
4.4 545i	N62 B44A	H17-18	2005-06	ENGINE	●						●					
4.8 550i	N62 B48B	H17-21	2005-09	TRANSMISSION	●					1						
6 Series E63/64 (2003~05)	3.0 630i	N52 B30A	H16-17	2004-05	ABS ASC DSC	●				1.2	●					
	4.4 645i	N62 B44A	H15-17	2003-05	SBSL	●										
				ZGM	●											
				SFZ	●											
				SZL	●											
				STVL	●											
				STVR	●											
				METER PANEL	●					1.2						
				HEATER/AC	●					1						
6 Series	3.0 630i	N52 B30A	H17-19	2005-07	ENGINE	●				1	●					
					TRANSMISSION	●										

10. BMW Diagnostic Software (BMW/MINI/OBD II Ver1.0*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPLY	ACTIVE TEST	WORK SUPPOR	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
E63/64 (2005~)	4.4 645i	N62 B44A	H17-18	2005-06	ABS	●						
					ASC							
	DSC											
	4.8 650i	N62 B48B	H17-21	2005-09	AIRBAG	●						
METER PANEL					●					3, 4		
					HEATER/AC	●						
7 Series E65/66	3.0 730d	30 6D 2	H14-17	2002-05	ENGINE	●				1, 2	●	
		30 6D 3	H17-21	2005-09	TRANSMISSION	●				1		
	3.0 730i	30 6S 3	H14-17	2002-05	ABS	●				1		
		N52 B30A	H17-21	2005-09	ASC							
					DSC							
	3.6 735i	N62 B36A	H14-17	2002-05	SBSL	●						
					SBSR	●						
					SIM	●						
	3.9 740d	39 8D 1	H14-17	2002-05	ZGM	●						
					SFZ	●						
	4.0 740i	N62 B40A	H17-21	2005-09	SZL	●						
					STVL	●						
	4.4 745d	44 8D 1	H17-21	2005-09	STVR	●						
					SASL	●						
	4.4 745i	N62 B44A	H14-17	2002-05	SASR	●						
SSBF					●							
4.8 750i	N62 B48B	H17-21	2005-09	SSFA	●							
				SSH	●							
6.0 760i	N73 B60A	H14-21	2002-09	METER PANEL	●				1, 2			
				HEATER/AC	●				1			
Z4 E85/86 (2003~05)	2.0	N46 B20B	H16-17	2004-05	ENGINE	●				1	●	
					TRANSMISSION	●						
	2.2	22 6S 1	H15-17	2003-05	ABS	●						
					ASC							
	2.5	25 6S 5	H15-17	2003-05	DSC							
					SBSL	●						
				SBSR	●							
3.0	30 6S 3	H15-17	2003-05	SIM	●							
				METER PANEL	●				3			
				HEATER/AC	●							
Z4 E85/86 (2006~)	2.0	N46 B20B	H18-21	2006-09	ENGINE	●				1	●	
	2.2	22 6S 1	H18	2006	TRANSMISSION	●						
	2.5	25 6S 5	H18	2006	ABS	●						
		N52 B25AE	H18-21	2006-09	ASC							
	2.5 si	N52 B25AE	H18-21	2006-09	DSC							
	3.0	30 6S 3	H18	2006	AIRBAG	●						
	3.0 si	N52 B30AF	H18-21	2006-09	METER PANEL	●				3		
HEATER/AC					●							

10. BMW Diagnostic Software (BMW/MINI/OBD II Ver1.0*) List of Work Support Functions

SYSTEM	No.	FUNCTION	WORK CONTENTS
ENGINE	1	CHASSIS NUMBER DISPLAY	Displays the chassis number. Perform during the following work. •During maintenance.
	2	CBS RESET 1	Implements after engine oil replacement. Perform during the following work. •Performs after engine oil replacement.
TRANSMISSION	1	CHASSIS NUMBER DISPLAY	Displays the chassis number. Perform during the following work. •During maintenance.
ABS ASC DSC	1	CBS RESET 1	Resets the CBS. Perform during the following work. •Performs after brake pad replacement.
METER PANEL	1	CBS RESET 1	Implements after spark plug replacement. Perform during the following work. •During maintenance.
	2	CBS RESET 2	Resets the CBS. Perform during the following work. •Performs after brake fluid replacement/vehicle check/inspection/exhaust gas inspection.
	3		
	4	CHASSIS NUMBER DISPLAY	Displays the chassis number. Perform during the following work. •During maintenance.
HEATER/ AIRCON	1	CBS RESET 2	Resets the CBS. Perform during the following work. •After micro-filter replacement.

11. AUDI Diagnostic Software (VW/AUDI/VOVLO Ver1.0*) List of Specific Vehicle System

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPLY	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
A2	1.2D TDI PD	ANY	H13-18	2001-06	ENGINE	●				1,2	●	
		AUA	H12-14	2000-02								
	1.4D TDI PD	BBY	H13-18	2001-06	AT	●				1		
		AMF	H12-18	2000-06	ABS	●				1		
		ATL	H16-18	2004-06	AIRBAG	●				1		
		BHC	H16-18	2004-06	INSTRUMENT PANEL	●				1,2		
		BAD	H14-18	2002-06								
A3 (97~03)	1.6	AEH	H08-15	1996-03	ENGINE	●				1,2		
		AKL	H09-15	1997-03								
		APF	H11-15	1999-03								
		AVU	H13-15	2001-03								
		BFQ	H15	2003								
	1.8	AGN	H08-15	1996-03	AT	●				1		
		APG	H11-15	1999-03								
	1.8 Turbo	AGU	H08-15	1996-03	ABS	●				1		
			AJQ	H11-15							1999-03	
			APP	H11-15							1999-03	
			AQA	H10-15							1998-03	
		ARX	H12-15	2000-03								
		ARY	H12-15	2000-03								
		ARZ	H11-15	1999-03								
		AUM	H12-15	2000-03								
	AUQ	H12-15	2000-03	AIRBAG	●				1			
	1.9D TDI	AGR	H08-15	1996-03	INSTRUMENT PANEL	●				1,2		
		AHF	H10-15	1998-03								
		ALH	H10-15	1998-03								
		ASV	H12-15	2000-03								
	1.9D TDI PD	ASZ	H13-15	2001-03	INSTRUMENT PANEL	●				1,2		
		ATD	H13-15	2001-03								
		AXR	H14-15	2002-03								
	A3 (03~)	1.4 TFSI	CAXC	H19-21	2007-09	ENGINE	●				1,2	
		1.6	BGU	H15-21	2003-09							
			BSE	H17-21	2005-09							
			BSF	H17-21	2005-09							
		1.6 FSI	BAG	H15-19	2003-07	ABS	●				1	
			BLF	H17-19	2005-07							
			BLP	H17-19	2005-07							
1.8 TFSI		BYT	H19-21	2007-09	AT	●				1		
		BZB	H19-21	2007-09								
1.9D TDI PD		BKC	H15-21	2003-09	ABS	●				1		
		BLS	H17-21	2005-09								
		BXE	H18-21	2006-09								
2.0 FSI		AXW	H15-21	2003-09	AIRBAG	●				1		
		BHD	H16-17	2004-05								
		BLR	H17-21	2005-09								
		BLX	H17-21	2005-09								
		BLY	H17-21	2005-09								
		BMB	H17-21	2005-09								
		BVY	H17-21	2005-09								
		BVZ	H17-21	2005-09								
2.0 TFSI		AXX	H16-21	2004-09	INSTRUMENT PANEL	●				1,2		
		BPY	H17-21	2005-09								
		BWA	H17-21	2005-09								
		CAWB	H19-21	2007-09								
		CBFA	H19-21	2007-09								
2.0D TDI PD		CCTA	H19-21	2007-09	INSTRUMENT PANEL	●				1,2		
		AZV	H16-21	2004-09								
		BKD	H15-21	2003-09								
		BKQ	H17-21	2005-09								
		BMM	H16-21	2004-09								
		BMN	H17-21	2005-09								
		BMN	H18-21	2006-09								
		BRA	H16-21	2004-09								
BUY		H19-21	2007-09									
3.2		BDB	H15-21	2003-09	ENGINE	●				1,2		
		BMJ	H17-21	2005-09								
A4 (94~01)	1.6	ADP	H07-09	1995-97	ENGINE	●				1,2		
		AHL	H08-13	1996-01								
		ALZ	H13	2001								
		ANA	H10-13	1998-01								
		ARM	H11-13	1999-01								
	1.8	ADR	H07-13	1995-01	AT	●				1		
		APT	H11	1999								
		ARG	H10-13	1998-01								
		AVV	H12-13	2000-01								
	1.8 Turbo	AEB	H07-13	1995-01	INSTRUMENT PANEL	●				1,2		
		AJL	H09-13	1997-01								
		ANB	H11-13	1999-01								
		APU	H10-13	1998-01								
		AWT	H13	2001								

11. AUDI Diagnostic Software (VW/AUDI/VOVLO Ver1.0*) List of Specific Vehicle System

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPLY	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
	1.9D TDI	1Z/AHU	H07-13	1995-01	ABS	●				1		
		AFF	H08-13	1996-01								
		AFN	H07-13	1995-01								
		AHH	H10-13	1998-01								
		AVG	H11-13	1999-01								
	1.9D TDI PD	AJM	H11-13	1999-01								
		ATJ	H11-13	1999-01								
	2.4	AGA	H09-13	1997-01	AIRBAG	●				1		
		AJG	H09-13	1997-01								
		ALF	H10-13	1998-01								
		AML	H11-13	1999-01								
		AMM	H12-13	2000-01								
		APS	H10-13	1998-01								
		APZ	H11-13	1999-01								
		ARJ	H10-13	1998-01								
	2.5D TDI	AFB	H09-13	1997-01								
		AKN	H10-13	1998-01								
	2.6	ABC	H06-11	1994-99	INSTRUMENT PANEL	●				1,2		
	2.8	AAH	H06-09	1994-97								
		ACK	H07-13	1995-01								
		ALG	H09-13	1997-01								
		AMX	H11-13	1999-01								
		APR	H10-13	1998-01								
AQD		H10-13	1998-01									
2.8 30V	ATX	H09-13	1997-01									
	ALZ	H13-20	2001-08	ENGINE	●				1,2			
1.8 Turbo	AMB	H13-20	2001-08									
	AVJ	H13-15	2001-03									
	BEF	H15-16	2003-04									
	BFB	H15-20	2003-08									
	1.9D TDI PD	AVB	H13-16	2001-04	AT	●				1		
AVF		H13-16	2001-04									
AWX		H13-16	2001-04									
BKE		H16-18	2004-06									
BRB		H17-18	2005-06									
2.0	ALT	H13-20	2001-08	ABS	●				1			
2.0 FSI	AWA	H14-17	2002-05									
	2.0 TFSI	BGB	H16-20							2004-08		
BPG		H17-20	2005-08									
BPJ		H17-20	2005-08									
BUL		H18-20	2006-08									
BWE		H18-20	2006-08									
BWT		H18-20	2006-08									
BYK		H17-20	2005-08									
2.0D TDI PD		BLB	H16-20							2004-08	AIRBAG	●
	BNA	H17-20	2005-08									
	BPW	H17-20	2005-08									
	BRC	H17-20	2005-08									
	BRE	H18-20	2006-08									
	BRF	H18-20	2006-08									
	BVA	H18-20	2006-08									
	BVF	H18-20	2006-08									
	BVG	H18-20	2006-08									
	2.4	AMM	H13-20	2001-08	INSTRUMENT PANEL	●				1,2		
BDV		H13-20	2001-08									
2.5D TDI	AKE	H13-15	2001-03									
	AYM	H13-15	2001-03									
	BAU	H15-16	2003-04									
	BCZ	H15-17	2003-05									
	BDG	H15-20	2003-08									
	BDH	H15-16	2003-04									
2.7D TDI	BFC	H15	2003	INSTRUMENT PANEL	●				1,2			
	BPP	H17-20	2005-08									
3.0	BSG	H17-20	2005-08	ENGINE	●				1,2			
	ASN	H13-17	2001-05									
3.0D TDI	BBJ	H13-20	2001-08	AT	●				1			
	BKN	H17-20	2005-08									
3.2 FSI	BVA	H18-20	2006-08	ABS	●				1			
	AUK	H16-20	2004-08									
A4 Cabrio	1.8 Turbo	AMB	H13-21	2001-09	ENGINE	●				1,2		
		AVJ	H15	2003								
		BEX	H15-16	2003-04								
		BFB	H14-21	2002-09								
	2.0	ALT	H15-21	2003-09	AT	●				1		
		BGB	H17-21	2005-09								
		BPG	H17-21	2005-09								
		BWE	H17-21	2005-09								
	2.0D TDI PD	BWT	H18-21	2006-09	ABS	●				1		
		BPW	H17-21	2005-09								
2.4	BRC	H18-21	2006-09									
	AMM	H14-21	2002-09									

11. AUDI Diagnostic Software (VW/AUDI/VOVLO Ver1.0*) List of Specific Vehicle System

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPLY	ACTIVE TEST	WORK SUPPORT	COUPLER		
			JP CALENDAR	WESTRN CAL							COM	EXCL	
	2.5D TDI	BDV	H14-21	2002-09	AIRBAG	●				1			
		BCZ	H15-17	2003-05									
		BDG	H15-21	2003-09									
	2.7D TDI	BPP	H17-21	2005-09	INSTRUMENT PANEL	●				1,2			
		3.0	ASN	H14-17									2002-05
	3.0D TDI	BBJ	H14-21	2002-09									
		3.2 FSI	ASB	H17-21									2005-09
A4 Quattro (94~01)	1.8	AUK	H17-21	2005-09	ENGINE	●				1,2	●		
		BKC	H16-21	2004-09									
		APT	H11	1999									
		ARG	H10-13	1998-01									
	1.8 Turbo	AVV	H12-13	2000-01	AT	●				1			
		BXF	H18-21	2006-09									
		AJL	H09-13	1997-01									
		ANB	H11-13	1999-01									
	1.9D TDI	APU	H10-13	1998-01									
		AWT	H13	2001									
	1.9D TDI PD	BVY	H17-21	2005-09									
		AVG	H11-13	1999-01									
	1.9D TDI PD	AJM	H11-13	1999-01									
		ATJ	H11-13	1999-01									
	2.4	BKD	H15-21	2003-09	ABS	●				1			
		AJG	H09-13	1997-01									
		ALF	H10-13	1998-01									
		AML	H11-13	1999-01									
		AMM	H12-13	2000-01									
		APS	H10-13	1998-01									
		APZ	H11-13	1999-01									
		ARJ	H10-13	1998-01									
	2.5D TDI	AKL	H09-15	1997-03	AIRBAG	●				1			
		AKN	H10-13	1998-01									
	2.6	ABC	H06-11	1994-99									
	2.7 Turbo	ABS	H05-06	1993-94									
	2.8	ADZ	H06-09	1994-97									
	2.8 30V	ANN	H09-15	1997-03	INSTRUMENT PANEL	●				1,2			
		ALG	H09-13	1997-01									
		AMX	H11-13	1999-01									
		APR	H10-13	1998-01									
		AQD	H10-13	1998-01									
		ATX	H09-13	1997-01									
	A4 Quattro (01~08)	1.8 Turbo	ADY	H06-12	1994-00	ENGINE	●				1,2	●	
			AVJ	H13-15	2001-03								
			BEX	H15-16	2003-04								
			BFB	H15-20	2003-08								
		1.9D TDI PD	AQY	H10-15	1998-03	AT	●				1		
			BGB	H16-20	2004-08								
		2.0 TFSI	BPG	H17-20	2005-08	ABS	●				1		
			BPJ	H17-20	2005-08								
			BUL	H18-20	2006-08								
			BUL	H16-17	2004-05								
			BWE	H18-20	2006-08								
			BWT	H18-20	2006-08								
		2.0D TDI PD	BYK	H17-20	2005-08	AIRBAG	●				1		
		ATU	H11-15	1999-03									
		BRE	H18-20	1999-03									
2.5D TDI		BVA	H18-20	1999-03									
		BLP	H17-19	2005-07									
		AYM	H13-15	2001-03									
		BAU	H15-16	2003-04									
3.0		BDH	H15-16	2003-04	INSTRUMENT PANEL	●				1,2			
		BXE	H18-21	2006-09									
3.0D TDI		BBJ	H13-20	2001-08									
		ASB	H17-20	2005-08									
3.2 FSI		BKN	H16-20	2004-08									
		BLY	H17-21	2005-09									
A6 (97~05)		1.8	AJP	H09-14	1997-02	ENGINE	●				1,2	●	
			AQE	H11-14	1999-02								
	ARH		H11-14	1999-02									
	1.8 Turbo	AEB	H09-14	1997-02	AT	●				1			
		AJL	H09-14	1997-02									
		ANB	H11-14	1999-02									
		APU	H10-14	1998-02									
		AWT	H12-17	2000-05									
	1.9D TDI	BLY	H17-21	2005-09									
		AVG	H11-14	1999-02									
	1.9D TDI PD	BVZ	H17-21	2005-09									
		AVF	H13-17	2001-05									
		AWX	H13-17	2001-05									
		BMM	H17-21	2005-09									

11. AUDI Diagnostic Software (VW/AUDI/VOVLO Ver1.0*) List of Specific Vehicle System

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPLY	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
	2.4	BMN	H17-21	2005-09	ABS	●				1		
		ALF	H09-17	1997-05								
		ALW	H09-17	1997-05								
		AML	H12-17	2000-05								
		AMM	H12-17	2000-05								
		APS	H09-17	1997-05								
		APZ	H11-14	1999-02								
		ARJ	H10-17	1998-05								
		ARN	H11-14	1999-02								
	ASM	H12-17	2000-05									
	BDV	H13-17	2001-05									
	2.5D TDI	AYZ	H12-17	2000-05	AIRBAG	●				1		
		AKE	H11-17	1999-05								
		AKN	H11-14	1999-02								
		AYM	H13-17	2001-05								
		BAU	H15-17	2003-05								
		BCZ	H16-17	2004-05								
		BDG	H15-17	2003-05								
		BDH	H15-17	2003-05								
	BFC	H15-17	2003-05									
	2.7 Turbo	BBY	H14-17	2002-05	INSTRUMENT PANEL	●				1,2		
	2.8	ACK	H09-14	1997-02								
		ALG	H09-14	1997-02								
		AMX	H12-14	2000-02								
APR		H09-14	1997-02									
AQD	H11-14	1999-02										
3.0	ASN	H13-17	2001-05									
BBJ	H14-17	2002-05										
A6 (05~)	2.0 TFSI	BPJ	H17-21	2005-09	ENGINE	●				1,2	●	
	2.0D TDI PD	BLB	H17-21	2005-09								
		BNA	H17-21	2005-09								
		BRE	H17-21	2005-09								
	BRF	H17-21	2005-09	AT	●				1			
	2.4	BDW	H16-21	2004-09	ABS	●				1		
		2.7D TDI	BPP	H17-21								
			BSG	H17-21	2005-09	AIRBAG	●				1	
	3.0	BBJ	H17-21	2005-09	INSTRUMENT PANEL	●				1,2		
3.2 FSI		AUK	H16-21	2004-09								
BKH	H17-21	2005-09										
A6 Allroad (06~)	2.7D TDI	BPP	H18-21	2006-09	ENGINE	●				1,2	●	
		BSG	H18-21	2006-09								
	3.0D TDI	ASB	H18-21	2006-09	AT	●				1		
		BNG	H18-21	2006-09	ABS	●				1		
	3.2 FSI	AUK	H18-21	2006-09	AIRBAG	●				1		
	4.2 FSI	BVJ	H18-21	2006-09	INSTRUMENT PANEL	●				1,2		
A6 Quattro (97~05)	1.8 Turbo	AEB	H09-14	1997-02	ENGINE	●				1,2	●	
		AJL	H09-14	1997-02								
		ANB	H11-14	1999-02								
		APU	H10-14	1998-02								
		AWT	H12-17	2000-05								
	1.9D TDI	AFN	H09-14	1997-02	AT	●				1		
		AVG	H11-13	1999-01								
	1.9D TDI PD	AVF	H13-17	2001-05	AT	●				1		
		AWX	H13-17	2001-05								
	2.4	AGA/AJG	H09-17	1997-05	ABS	●				1		
		ALF	H09-17	1997-05								
		ALW	H09-17	1997-05								
		AML	H12-17	2000-05								
		AMM	H12-17	2000-05								
		APS	H09-17	1997-05								
		APZ	H11-14	1999-02								
		ARJ	H10-17	1998-05								
		BDV	H13-17	2001-05								
	2.5D TDI	AFB	H09-13	1997-01	AIRBAG	●				1		
		AKE	H11-17	1999-05								
		AKN	H11-14	1999-02								
		AYM	H13-17	2001-05								
		BAU	H15-17	2003-05								
	2.7 Turbo	BDH	H15-17	2003-05	AIRBAG	●				1		
		AJK	H10-17	1998-05								
		ARE	H12-15	2000-03								
		AZA	H13-14	2001-02								
	BES	H15-17	2003-05									
	2.8	ACK	H09-14	1997-02	INSTRUMENT PANEL	●				1,2		
		ALG	H09-14	1997-02								
		AMX	H12-14	2000-02								
		APR	H09-14	1997-02								
	AQD	H11-14	1999-02									
	3.0	ASN	H13-17	2001-05								

11. AUDI Diagnostic Software (VW/AUDI/VOVLO Ver1.0*) List of Specific Vehicle System

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPLY	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
	4.2	BBJ	H14-17	2002-05								
		ARS	H07-17	1995-05								
		ASG	H07-17	1995-05								
		AWN	H07-17	1995-05								
A6 Quattro (05~)	2.4	BDW	H16-21	2004-09	ENGINE	●				1,2	●	
		BPP	H17-21	2005-09								
	2.7D TDI	BSG	H17-21	2005-09	AT	●				1		
		BBJ	H17-21	2005-09								
	3.0D TDI	ASB	H17-21	2005-09	ABS	●				1		
		BMK	H16-21	2004-09								
		BNG	H16-21	2004-09	AIRBAG	●				1		
	3.2 FSI	AUK	H16-21	2004-09								
BKH		H17-21	2005-09	INSTRUMENT PANEL	●				1,2			
4.2	BAT	H16-21	2004-09									
A8 (03~)	3.0	ASN	H15-21	2003-09	ENGINE	●				1,2	●	
		BBJ	H15-21	2003-09								
	3.0D TDI	ASB	H17-21	2005-09	AT	●				1		
		BNG	H17-21	2005-09								
	3.7	BFL	H15-21	2003-09	ABS	●				1		
	4.0D TDI	ASE	H15-21	2003-09								
4.2	BFM	H15-21	2003-09	AIRBAG	●				1			
	BHT	H15-21	2003-09	INSTRUMENT PANEL	●				1,2			
6.0	BSB	H16-21	2004-09									
Allroad (00~05)	2.5D TDI	AKE	H12-15	2000-03	ENGINE	●				1,2	●	
		BAU	H15-17	2003-05								
		BCZ	H16-17	2004-05	AT	●				1		
	2.7 Turbo	ARE	H12-17	2000-05	ABS	●				1		
		BES	H15-17	2003-05	AIRBAG	●				1		
	4.2	BAS	H14-17	2002-05	INSTRUMENT PANEL	●				1,2		
Q7	3.0D TDI	BUG	H18-21	2006-09	ENGINE	●				1,2	●	
		BUN	H18-21	2006-09								
		CASA	H19-21	2007-09	AT	●				1		
		CASB	H19-21	2007-09	ABS	●				1		
	3.6 FSI	BHK	H19-21	2007-09	AIRBAG	●				1		
		BHL	H19-21	2007-09								
	4.2 FSI	BAR	H18-21	2006-09	INSTRUMENT PANEL	●				1,2		
	4.2D TDI	BTR	H19-21	2007-09								
RS4	2.7 Turbo	ASJ	H12-14	2000-02	ENGINE	●				1,2	●	
					AT	●				1		
					ABS	●				1		
		AZR	H12-14	2000-02	AIRBAG	●				1		
					INSTRUMENT PANEL	●				1,2		
RS6	4.2	BCY	H15-16	2003-04	ENGINE	●				1,2	●	
					AT	●				1		
					ABS	●				1		
					AIRBAG	●				1		
					INSTRUMENT PANEL	●				1,2		
S3	1.8 Turbo	AMK	H12-15	2000-03	ENGINE	●				1,2	●	
					AT	●				1		
		APY	H11-15	1999-03	ABS	●				1		
		BAM	H14-15	2002-03	AIRBAG	●				1		
INSTRUMENT PANEL	●							1,2				
S4	2.7 Turbo	AGB	H09-13	1997-01	ENGINE	●				1,2	●	
					AT	●				1		
					ABS	●				1		
	4.2	BBK	H15-21	2003-09	AIRBAG	●				1		
					INSTRUMENT PANEL	●				1,2		
S4 Cabrio	4.2	BBK	H15-21	2003-09	ENGINE	●				1,2	●	
					AT	●				1		
					ABS	●				1		
					AIRBAG	●				1		
					INSTRUMENT PANEL	●				1,2		
S6	4.2	ANK	H12-16	2000-04	ENGINE	●				1,2	●	
					AT	●				1		
		AQJ	H12-16	2000-04	ABS	●				1		
					AIRBAG	●				1		
					INSTRUMENT PANEL	●				1,2		

11. AUDI Diagnostic Software (VW/AUDI/VOVLO Ver1.0*) List of Specific Vehicle System

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPLY	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
TT (98~06)	1.8	AJQ	H10-14	1998-02	ENGINE	●				1,2	●	
		AMU	H12-14	2000-02								
		APP	H11-14	1999-02	AT	●				1		
		APX	H10-14	1998-02								
		ARY	H12-17	2000-05								
		AUM	H14-17	2002-05	ABS	●				1		
		AUQ	H12-17	2000-05								
		BAM	H12-17	2000-05	AIRBAG	●				1		
		BFV	H17-18	2005-06								
		BVP	H17-18	2005-06	INSTRUMENT PANEL	●				1,2		
		BVR	H17-18	2005-06								
TT (06~)	2.0 TFSI	BWA	H18-21	2006-09	ENGINE	●				1,2	●	
					AT	●				1		
	3.2	BUB	H18-21	2006-09	ABS	●				1		
					AIRBAG	●				1		
					INSTRUMENT PANEL	●				1,2		

1 1. AUDI Diagnostic Software (VW/AUDI/VOVLO Ver1.0*) List of Work Support Functions

SYSTEM	No.	FUNCTION	WORK CONTENTS
GASOLINE ENGINE	1	CHASSIS NUMBER DISPLAY	Displays the chassis number. Perform during the following work. • During maintenance.
	2	ECU-ID DISPLAY	Displays the ECU-ID. Perform during the following work. • During parts replacement.
AT	1	ECU-ID DISPLAY	Displays the ECU-ID. Perform during the following work. • During parts replacement.
ABS	1	ECU-ID DISPLAY	Displays the ECU-ID. Perform during the following work. • During parts replacement.
AIRBAG	1	ECU-ID DISPLAY	Displays the ECU-ID. Perform during the following work. • During parts replacement.
INSTRUMENT PANEL	1	ECU-ID DISPLAY	Displays the ECU-ID. Perform during the following work. • During parts replacement.
	2	SERVICE INTERVAL RESET	Resets the service interval. Perform during the following work. • After oil change, after inspection.

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
Beetle	1.4	BCA	H13-21	2001-09	ENGINE	●				1,2	●	
		AWH	H11-13	1999-01	AT	●				1		
	AYD	H12-21	2000-09									
	BFS	H14-21	2002-09									
	1.8 Turbo	AVC	H11-21	1999-09	ABS	●				1		
		AWU	H12-21	2000-09								
	1.9D TDI	AGR	H10-14	1998-02	AIRBAG	●				1		
		ALH	H10-16	1998-04								
1.9D TDI PD	ATD	H12-21	2000-09	INSTRUMENT PANEL	●				1,2			
	AXR	H15-18	2003-06									
2.0	AQY	H10-21	1998-09									
	AZJ	H13-21	2001-09									
2.3	AQN	H12-21	2000-09									
Bora	1.4	AHW	H09-17	1997-05	ENGINE	●				1,2	●	
		AKQ	H09-13	1997-01								
		APE	H11-13	1999-01								
		AXP	H12-14	2000-02								
		BCA	H14-16	2002-04								
	1.6	AEH	H13-15	2001-03	AT	●				1		
		AKL	H09-17	1997-05								
		AKS	H12-15	2000-03								
		APF	H11-13	1999-01								
		AVU	H14-15	2002-03								
	1.6 16V	BFQ	H14-17	2002-05								
		ATN	H11-13	1999-01								
		AUS	H15-18	2003-06								
		AZD	H12-15	2000-03								
	1.6 FSI	BCB	H14-17	2002-05								
		642.910	H16-20	2004-08								
	1.8	112.946	H12-15	2000-03								
	1.8 Turbo	AGU	H09-17	1997-05	ABS	●				1		
		AQA	H10-12	1998-00								
		ARZ	H11-13	1999-01								
		AUM	H12-17	2000-05								
	1.9D SDI	AUQ	H13-17	2001-05								
		AGP	H09-13	1997-01								
	1.9D TDI	AQM	H10-17	1998-05	AIRBAG	●				1		
		271.952	H19-21	2007-09								
		AHF	H09-17	1997-05								
		ALH	H09-17	1997-05								
	1.9D TDI PD	ASV	H11-17	1999-05								
		272.921	H19-21	2007-09								
		ANU	H11-12	1999-00								
		ARL	H12-17	2000-05								
		ASZ	H12-17	2000-05								
		ATD	H12-17	2000-05								
		AUY	H12-14	2000-02								
		AXR	H13-17	2001-05								
	2.0	642.961	H19-21	2007-09	INSTRUMENT PANEL	●				1,2		
		AQY	H10-14	1998-02								
		ATU	H11-14	1999-02								
		AZH	H12-14	2000-02								
		AZJ	H13-17	2001-05								
	2.3	BEH	H15-17	2003-05								
		112.912	H14-16	2002-04								
	2.8	AQN	H12-16	2000-04								
112.946		H14-16	2002-04									
Caddy (95~04)	1.4	AUE	H12-13	2000-01	ENGINE	●				1,2	●	
		BDE	H13-16	2001-04								
		642.920	H17-18	2005-06								
		AKK	H11-12	1999-00								
	1.4 16V	AKV	H09-12	1997-00	AT	●				1		
		ANX	H10-12	1998-00								
		APQ	H10-12	1998-00								
	1.6	AUD	H12-16	2000-04	ABS	●				1		
		271.941	H14-18	2002-06								
		AUA	H12-16	2000-04								
1F		H07-12	1995-00									
1.7D SDI	AEE	H09-12	1997-00									
	AFT	H07-12	1995-00									
	ALM	H10-12	1998-00									
1.8	647.961	H14-17	2002-05	AIRBAG	●				1			
	AKW	H09-12	1997-00									
1.9D	ADZ	H09-12	1997-00									
	642.920	H17-18	2005-06									
	AEY	H08-12	1996-00									
	AQM	H10-12	1998-00									
1.9D SDI	AYQ	H12-16	2000-04									

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
	1.9D TDI	AFN	H10-12	1998-00	INSTRUMENT PANEL	●				1,2		
		AHU	H08-12	1996-00								
		ALE	H09-12	1997-00								
		ALH	H12-15	2000-03								
		ASV	H11-12	1999-00								
Caddy Caddy Maxi (04~)	1.4	113.969	H14-18	2002-06	ENGINE	●				1,2	●	
	1.6	BGU	H15-17	2003-05	AT	●			1			
	1.9D TDI PD	BJB	H15-21	2003-09								
		BLS	H17-21	2005-09								
		BSU	H14-15	2002-03	AIRBAG	●				1		
	2.0D SDI	BDJ	H15-21	2003-09	INSTRUMENT PANEL	●				1,2		
Caddy Pickup (95~01)	1.6	112.944	H14-15	2002-03	ENGINE	●				1,2	●	
					AT	●			1			
	1.9D	AEF	H08-13	1996-01	ABS	●				1		
					AIRBAG	●				1		
					INSTRUMENT PANEL	●				1,2		
Crafter	2.5D TDI	648.960	H14-18	2002-06	ENGINE	●				1,2	●	
		BJK	H18-21	2006-09	AT	●			1			
		BJL	H18-21	2006-09								
										ABS		
						AIRBAG	●					
					INSTRUMENT PANEL	●				1,2		
Eos	1.6 FSI	113.941	H14-18	2002-06	ENGINE	●				1,2	●	
	2.0 FSI	BYV	H18-21	2006-09	AT	●			1			
		BYZ	H18-21	2006-09								
	2.0 TFSI	BPY	H18-21	2006-09	ABS	●				1		
		BWA	H18-21	2006-09	AIRBAG	●				1		
	2.0D TDI PD	113.960	H14-18	2002-06	INSTRUMENT PANEL	●				1,2		
3.2	137.970	H11-14	1999-02									
Fox	1.2	112.973	H14-15	2002-03	ENGINE	●				1,2	●	
					AT	●			1			
	1.4	113.963	H14-15	2002-03	ABS	●				1		
					AIRBAG	●				1		
1.4D TDI PD	275.951	H14-15	2002-03	INSTRUMENT PANEL	●				1,2			
Golf Golf Estate (98~06)	1.4	AHW	H09-18	1997-06	ENGINE	●				1,2	●	
		AKQ	H09-13	1997-01								
		APE	H11-13	1999-01								
		AXP	H09-18	1997-06								
		BCA	H09-13	1997-01								
	1.6	AEH	H09-17	1997-05	AT	●				1		
		AKL	H09-17	1997-05								
		AKS	H10-17	1998-05								
		APF	H11-13	1999-01								
		AVU	H12-15	2000-03								
	1.6 16V	BFQ	H14-18	2002-06	AT	●				1		
		ATN	H11-13	1999-01								
		AUS	H12-13	2000-01								
		AZD	H12-15	2000-03								
	1.6 FSI	BCB	H14-18	2002-06	AT	●				1		
		BAD	H14-18	2002-06								
	1.8	AGN	H09-15	1997-03	ABS	●				1		
	1.8 Turbo	AGU	H09-16	1997-04								
		AQA	H10-12	1998-00								
		ARZ	H11-13	1999-01								
		AUM	H12-16	2000-04								
	1.9D SDI	AUQ	H13-16	2001-04	ABS	●				1		
		AGP	H09-13	1997-01								
	1.9D TDI	AQM	H10-17	1998-05	AIRBAG	●				1		
		AGR	H09-14	1997-02								
		AHF	H09-17	1997-05								
		ALH	H09-17	1997-05								
		ASV	H11-17	1999-05								
	1.9D TDI PD	AJM	H10-15	1998-03	AIRBAG	●				1		
		ANU	H11-12	1999-00								
		ARL	H12-17	2000-05								
		ASZ	H12-17	2000-05								
		ATD	H12-18	2000-06								
		AUY	H12-14	2000-02								
		AXR	H13-18	2001-06								
		APK	H10-14	1998-02								
	2.0	AQY	H10-14	1998-02	INSTRUMENT PANEL	●				1,2		
ATU		H11-14	1999-02									
AZH		H12-14	2000-02									
AZJ		H13-18	2001-06									

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER			
			JP CALENDAR	WESTRN CAL							COM	EXCL		
	2.3	BEH	H15-18	2003-06										
		AGZ	H09-15	1997-03										
		AQN	H12-16	2000-04										
	2.8	AQP	H11-13	1999-01										
		AUE	H12-13	2000-01										
3.2 R32	BDE	H13-16	2001-04											
Golf (03~)	1.4	BCA	H15-21	2003-09	ENGINE	●				1,2	●			
		1.4 FSI	BKG	H15-21									2003-09	
	BLN		H17-21	2005-09										
	BLG		H18-21	2006-09										
	BMV		H18-21	2006-09										
	1.6	BGU	H15-21	2003-09	AT	●				1				
		BSE	H17-21	2005-09										
		BSF	H17-21	2005-09										
	1.6 FSI	BAG	H15-19	2003-07	ABS	●				1				
		BLF	H17-19	2005-07										
		BLP	H17-19	2005-07										
	1.9D TDI PD	BJB	H17-18	2005-06										
		BKC	H16-21	2004-09										
		APT	H11	1999										
		ARG	H10-13	1998-01										
		AVV	H12-13	2000-01										
		BXF	H18-21	2006-09	AIRBAG	●				1				
	2.0 FSI	AJL	H09-13	1997-01										
		ANB	H11-13	1999-01										
		APU	H10-13	1998-01										
		AWT	H13	2001										
		BVY	H17-21	2005-09										
	1.9D TDI PD	AVG	H11-13	1999-01	INSTRUMENT PANEL	●				1,2				
	2.0D TDI PD	AJM	H11-13	1999-01										
		ATJ	H11-13	1999-01										
		BKD	H15-21	2003-09										
		AJG	H09-13	1997-01										
ALF		H10-13	1998-01											
Golf Cabrio (93~03)	1.6	APS	H10-13	1998-01	ENGINE	●				1,2	●			
		APZ	H11-13	1999-01										
		ARJ	H10-13	1998-01										
		AKL	H09-15	1997-03										
		AKN	H10-13	1998-01										
	2.6	ABC	H06-11	1994-99	AT	●				1				
		ABS	H05-06	1993-94										
		ADZ	H06-09	1994-97										
		1.9D TDI	ANN	H09-15	1997-03	ABS	●				1			
			ALG	H09-13	1997-01									
	AMX		H11-13	1999-01										
	APR		H10-13	1998-01										
	2.0	AQD	H10-13	1998-01	AIRBAG	●				1				
		ATX	H09-13	1997-01										
		2E	H05-06	1993-94										
		ADY	H06-12	1994-00										
		AVJ	H13-15	2001-03										
		BEX	H15-16	2003-04	INSTRUMENT PANEL	●				1,2				
		BFB	H15-20	2003-08										
		AQY	H10-15	1998-03										
		ATU	H11-15	1999-03										
		BRE	H11-15	1999-03										
	BVA	H11-15	1999-03											
	Golf Plus	1.4	BPG	H17-20	2005-08	ENGINE	●				1,2	●		
			1.4 FSI	BPJ	H17-20									2005-08
			1.4 TSI	BUL	H18-20									2006-08
		BUL		H16-17	2004-05									
1.6		BWE	H18-20	2006-08	AT	●				1				
		BWT	H18-20	2006-08										
1.6 FSI		BYK	H17-20	2005-08	ABS	●				1				
		BLP	H17-19	2005-07										
1.9D TDI PD		AYM	H13-15	2001-03										
		BAU	H15-16	2003-04										
		BDH	H15-16	2003-04										
		BXE	H18-21	2006-09										
3.0D TDI		BBJ	H13-20	2001-08	AIRBAG	●				1				
		ASB	H17-20	2005-08										
		BKN	H16-20	2004-08										
		BLY	H17-21	2005-09										
		BVY	H17-21	2005-09										
1.8	BVZ	H17-21	2005-09	INSTRUMENT PANEL	●				1,2					
	AJP	H09-14	1997-02											
	AQE	H11-14	1999-02											
	ARH	H11-14	1999-02											
Jetta	1.8 Turbo	AEB	H09-14	1997-02	ENGINE	●				1,2	●			

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
(05~)	1.9D TDI PD	AJL	H09-14	1997-02	AT	●				1		
		ANB	H11-14	1999-02								
		APU	H10-14	1998-02								
	2.0 FSI	AWT	H12-17	2000-05	ABS	●				1		
		BLY	H17-21	2005-09								
		AVG	H11-14	1999-02								
	2.0 TFSI	ALF	H09-17	1997-05	AIRBAG	●				1		
		ALW	H09-17	1997-05								
	2.0D TDI PD	AVF	H13-17	2001-05	INSTRUMENT PANEL	●				1,2		
		AWX	H13-17	2001-05								
		BMM	H17-21	2005-09								
	Lupo	1.0	AMM	H12-17	2000-05	ENGINE	●					
APS			H09-17	1997-05								
APZ			H11-14	1999-02								
ARJ			H10-17	1998-05								
ARN			H11-14	1999-02								
ASM			H12-17	2000-05								
1.2D TDI PD		BDV	H13-17	2001-05	AT	●				1		
		AYZ	H12-17	2000-05								
1.4		AKE	H11-17	1999-05	ABS	●				1		
		AKN	H11-14	1999-02								
		AYM	H13-17	2001-05								
		BAU	H15-17	2003-05								
		BCZ	H16-17	2004-05	AIRBAG	●				1		
		BDG	H15-17	2003-05								
		BDH	H15-17	2003-05								
		BFC	H15-17	2003-05								
BBY		H14-17	2002-05									
2.8		ACK	H09-14	1997-02	INSTRUMENT PANEL	●				1,2		
1.4D TDI PD		ALG	H09-14	1997-02								
1.6 16V		AMX	H12-14	2000-02								
1.7D SDI		APR	H09-14	1997-02								
Passat (96~00)		1.6	ADP	H08-12	1996-00	ENGINE	●				1,2	
			AFT	H08-12	1996-00							
	AHL		H09-12	1997-00								
	AKS		H08-12	1996-00								
	ANA		H11-12	1999-00								
	ARM		H11-12	1999-00								
	1.8	ADR	H08-12	1996-00	AT	●				1		
		APT	H11-12	1999-00								
		ARG	H11-12	1999-00								
	1.8 Turbo	AEB	H08-12	1996-00	ABS	●				1		
		ANB	H11-12	1999-00								
		APU	H11-12	1999-00								
	1.9D TDI	AFN	H08-12	1996-00	ABS	●				1		
		AHH	H09-12	1997-00								
		AHU	H09-12	1997-00								
		AVG	H11-12	1999-00								
	1.9D TDI PD	AJM	H10-12	1998-00	AIRBAG	●				1		
		ATJ	H11-12	1999-00								
	2.3	AGZ	H08-12	1996-00	INSTRUMENT PANEL	●				1,2		
	2.5D TDI	AFB	H10-12	1998-00								
		AKN	H10-12	1998-00								
	2.8	ACK	H08-12	1996-00	INSTRUMENT PANEL	●				1,2		
		AGE	H10-12	1998-00								
		ALG	H08-12	1996-00								
		AMX	H12	2000								
		APR	H11-12	1999-00								
		AQD	H11-12	1999-00								
	ATX	H12	2000									
	Passat (01~05)	1.6	ALZ	H13-17	2001-05	ENGINE	●				1,2	
1.8 Turbo		AWT	H13-17	2001-05								
1.9D TDI PD		AVB	H13-17	2001-05	AT	●				1		
		AVF	H13-17	2001-05								
		AWX	H13-17	2001-05								
2.0		AZM	H13-17	2001-05	ABS	●				1		
2.0 20V		ALT	H14-17	2002-05								
2.0D TDI PD		BGW	H15-17	2003-05	AIRBAG	●				1		
		BHW	H15-17	2003-05								
2.3		AZX	H13-17	2001-05	INSTRUMENT PANEL	●				1,2		
2.5D TDI		AKN	H13-17	2001-05								
		BAU	H15-17	2003-05								
		BDG	H15-17	2003-05								
2.8		BDH	H15-17	2003-05								
		AMX	H13-17	2001-05								
4.0 W8		BBG	H13-17	2001-05	INSTRUMENT PANEL	●				1,2		
		BDN	H13-16	2001-04								
Passat	1.6	BSE	H17-21	2005-09	ENGINE	●				1,2	●	

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
(05~)		BSF	H17-21	2005-09								
	1.6 FSI	BLF	H17-19	2005-07								
		BLP	H17-19	2005-07								
	1.9D TDI PD	BKC	H17-21	2005-09								
		BLS	H17-21	2005-09	AT	●				1		
	2.0 FSI	BLR	H17-21	2005-09								
		BLX	H17-21	2005-09								
		BLY	H17-21	2005-09								
		BVX	H17-21	2005-09								
		BVY	H17-21	2005-09	ABS	●				1		
		BVZ	H17-21	2005-09								
	2.0D TDI PD	BKP	H17-21	2005-09								
		BMA	H17-21	2005-09								
		BMP	H17-21	2005-09								
		BMR	H17-21	2005-09	AIRBAG	●				1		
		BUZ	H17-21	2005-09								
		BVE	H17-21	2005-09								
		BWV	H17-21	2005-09								
		2.0 TFSI	AXX	H17-21	2005-09	INSTRUMENT PANEL	●			1,2		
			BPY	H17-21	2005-09							
		BWA	H17-21	2005-09								
	3.2 FSI	AXZ	H17-21	2005-09								
Phaeton	3.0D TDI PD	BMK	H16-21	2004-09	ENGINE	●				1,2		●
	3.2	AYT	H14-21	2002-09								
		BKL	H15-21	2003-09								
		BRK	H16-21	2004-09	AT	●				1		
	4.2	BGH	H15-21	2003-09								
		BGJ	H14-21	2002-09	ABS	●				1		
	4.9D TDI PD	AJS	H14-21	2002-09								
		AYH	H14-21	2002-09	AIRBAG	●				1		
	6.0	BAN	H14-21	2002-09								
		BAP	H14-21	2002-09								
		BRN	H17-21	2005-09	INSTRUMENT PANEL	●				1,2		
		BRP	H17-21	2005-09								
	BTT	H17-21	2005-09									
Polo (94~02)	1.0	AER	H06-12	1994-00	ENGINE	●				1,2		●
		ALD	H10-14	1998-02								
		ALL	H09-12	1997-00								
		AUC	H11-14	1999-02								
	1.05	AEV	H06-09	1994-97								
	1.3	ADX	H06-07	1994-95								
	1.4	AEX	H07-12	1995-00								
		AKK	H11-14	1999-02								
		AKP	H11-14	1999-02	AT	●				1		
		AKV	H09-14	1997-02								
		ANW	H11-14	1999-02								
		ANX	H10-12	1998-00								
		APQ	H10-12	1998-00								
		AUD	H11-14	1999-02								
	1.4 16V	AFH	H07-12	1995-00								
		AFK	H11-14	1999-02								
		AHW	H10-14	1998-02	ABS	●				1		
		APE	H11-14	1999-02								
		AQQ	H11-14	1999-02								
		AUA	H11-14	1999-02								
		AUB	H11-14	1999-02								
	1.4D TDI PD	AMF	H11-14	1999-02								
	1.6	AEA	H06-07	1994-95								
		AEE	H07-12	1995-00								
	1.6 16V	AJV	H10-12	1998-00	AIRBAG	●				1		
		ARC	H11-14	1999-02								
		AVY	H12-14	2000-02								
	1.7D	AHG	H08-12	1996-00								
		AKU	H09-12	1997-00								
	1.7D SDI	AKW	H09-12	1997-00								
	1.9D	1Y	H07-14	1995-02								
		AEF	H07-14	1995-02								
	1.9D SDI	AEY	H08-14	1996-02	INSTRUMENT PANEL	●				1,2		
		AGD	H08-12	1996-00								
		AQM	H11-14	1999-02								
		ASX	H08-14	1996-02								
	1.9D TDI	AFN	H10-14	1998-02								
		AHU	H09-14	1997-02								
		ALE	H09-14	1997-02								
		ASV	H11-14	1999-02								
Polo (02~)	1.2	AWY	H14-17	2002-05	ENGINE	●				1,2		●
	1.2 12V	AZQ	H14-17	2002-05								
	1.4	AUA	H14	2002								
		AUB	H14	2002	AT	●				1		
	BBY	H14-18	2002-06									

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER							
			JP CALENDAR	WESTRN CAL							COM	EXCL						
		BBZ	H14-18	2002-06	ABS	●				1								
		BLM	H17-21	2005-09														
	1.4 FSI	AXU	H14-18	2002-06	AIRBAG	●				1								
	1.4D TDI PD	AMF	H14-18	2002-06														
	1.6	BAY	H14-18	2002-06	INSTRUMENT PANEL	●				1,2								
		1.9D SDI	ASY	H14-18									2002-06					
	1.9D TDI PD	ATD	H14-21	2002-09	ENGINE	●				1,2								
		AXR	H14-21	2002-09														
	Polo Classic (95~02)	1.4	AEX	H07-14	1995-02	AT	●						1	●				
			AKK	H11-14	1999-02													
AKV			H09-14	1997-02														
ANW			H12-14	2000-02	ABS						●							1
ANX			H10-14	1998-02														
APQ			H10-14	1998-02														
AUD			H12-14	2000-02														
1.4 16V		APE	H11-14	1999-02		AIRBAG	●			1								
1.6		AUA	H12-14	2000-02														
		1F	H07-12	1995-00														
		AEE	H09-12	1997-00														
		AEH	H12-14	2000-02														
		AFT	H07-14	1995-02														
		AKL	H12-14	2000-02														
1.7D		AKU	H09-12	1997-00	INSTRUMENT PANEL	●			1,2									
1.7D SDI		AHB	H08-12	1996-00														
		AKW	H09-12	1997-00														
1.8		ADZ	H09-12	1997-00						ENGINE	●					1,2		
		1.9D	1Y	H07-12													1995-00	
1.9D SDI			AEF	H10-14													1998-02	
		AEY	H08-14	1996-02														
		AGP	H11-14	1999-02														
1.9D TDI		AQM	H11-14	1999-02	AT	●			1									
		AFN	H10-14	1998-02														
		AGR	H11-14	1999-02														
		AHU	H09-14	1997-02														
		ALE	H09-14	1997-02														
		ALH	H11-14	1999-02														
		ASV	H11-14	1999-02														
Polo Estate (95~02)		1.4	AEX	H07-14	1995-02	AIRBAG	●			1	●							
			AKK	H11-14	1999-02													
			AKV	H09-14	1997-02													
			ANW	H11-14	1999-02													
	ANX		H10-14	1998-02														
	APQ		H10-14	1998-02														
	AUD		H12-14	2000-02														
	1.4 16V	APE	H11-14	1999-02	INSTRUMENT PANEL	●			1,2									
		AUA	H12-14	2000-02														
	1.6	1F	H07-12	1995-00														
		AEE	H09-12	1997-00														
		AEH	H12-14	2000-02														
		AFT	H07-14	1995-02														
		AKL	H12-14	2000-02														
		ALS	H09-14	1997-02														
		ALM	H10-14	1998-02														
	1.7D SDI	APF	H11-14	1999-02	ENGINE	●			1,2									
		AUR	H12-14	2000-02														
	1.8	AHB	H08-12	1996-00														
		AKW	H09-12	1997-00														
	1.9D SDI	ADZ	H09-12	1997-00						AT			●			1		
		1.9D TDI	AEY	H08-14													1996-02	
	1.9D TDI		AGP	H11-14													1999-02	
AGR		H11-14	1999-02															
ALE		H09-14	1997-02															
1.9D TDI	ALH	H11-14	1999-02	ABS	●			1										
	2.0	AWC	H12-21						2000-09									
		ANU	H12-21						2000-09									
Sharan (00~)	1.9D TDI PD	ASZ	H14-21	2002-09	AT	●			1									
		AUY	H12-21	2000-09														
		ATM	H12-21	2000-09														
	2.8 24V	AYL	H12-21	2000-09	INSTRUMENT PANEL	●			1,2									
2.5D TDI PD	BAC	H15-21	2003-09															
	BLK	H15-17	2003-05															
	BPD	H17-21	2005-09															
	BPE	H18-21	2006-09															
Touareg	3.0D TDI	BKS	H17-21	2005-09	ENGINE	●			1,2									

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPL	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
	3.2	AZZ	H15-16	2003-04	ABS	●				1		
		BAA	H15-16	2003-04								
		BKJ	H15-16	2003-04								
		BMV	H16-21	2004-09								
		BMX	H16-21	2004-09								
		BRJ	H16-21	2004-09								
	3.6 FSI	BHK	H17-21	2005-09	AIRBAG	●				1		
		BHL	H18-21	2006-09								
	4.2	AXQ	H15-21	2003-09								
		BHX	H15-21	2003-09								
	4.9D TDI PD	AYH	H15-21	2003-09	INSTRUMENT PANEL	●				1,2		
		BKW	H15-17	2003-05								
		BLE	H16-21	2004-09								
BWF		H18-21	2006-09									
6.0	BJN	H16-21	2004-09									
Touran	1.4 TSI	BMV	H18-21	2006-09	ENGINE	●				1,2		
		BGU	H15-18	2003-06								
	1.6	BSE	H17-21	2005-09								
		BSF	H17-21	2005-09								
		BAG	H15-19	2003-07								
	1.6 FSI	BLF	H17-19	2005-07	AT	●				1		
		BLP	H16-17	2004-05								
		AVQ	H15-21	2003-09								
	1.9D TDI PD	BKC	H15-21	2003-09	ABS	●				1		
		BRU	H17-21	2005-09								
		BTB	H17-21	2005-09								
	2.0 FSI	AXW	H15-21	2003-09	AIRBAG	●				1		
		BLR	H17-21	2005-09								
		BLX	H16-21	2004-09								
		BLY	H16-21	2004-09								
		BVY	H17-21	2005-09								
	2.0D TDI PD	BVZ	H17-21	2005-09	INSTRUMENT PANEL	●				1,2		
		AZV	H15-21	2003-09								
		BKD	H15-21	2003-09								
BMM		H17-21	2005-09									
Transporter (04~)	1.9D TDI PD	AXB	H15-21	2003-09	ENGINE	●				1,2		
		AXC	H15-21	2003-09								
	2.0	AXA	H16-21	2004-09	AT	●				1		
	2.5D TDI PD	AXD	H15-21	2003-09	ABS	●				1		
		AXE	H15-21	2003-09	AIRBAG	●				1		
		BLJ	H16-21	2004-09								
	3.2	BDL	H15-21	2003-09	INSTRUMENT PANEL	●				1,2		
		BKK	H15-21	2003-09								

12. . VW Diagnostic Software (VW/AUDI/VOVLO Ver1.0*) List of Work Support Functions

SYSTEM	No.	FUNCTION	WORK CONTENTS
GASOLINE ENGINE	1	CHASSIS NUMBER DISPLAY	Displays the chassis number. Perform during the following work. • During maintenance.
	2	ECU-ID DISPLAY	Displays the ECU-ID. Perform during the following work. • During parts replacement.
AT	1	ECU-ID DISPLAY	Displays the ECU-ID. Perform during the following work. • During parts replacement.
ABS	1	ECU-ID DISPLAY	Displays the ECU-ID. Perform during the following work. • During parts replacement.
AIRBAG	1	ECU-ID DISPLAY	Displays the ECU-ID. Perform during the following work. • During parts replacement.
INSTRUMENT PANEL	1	ECU-ID DISPLAY	Displays the ECU-ID. Perform during the following work. • During parts replacement.
	2	SERVICE INTERVAL RESET	Resets the service interval. Perform during the following work. • After oil change, after inspection.

13. MINI Diagnostic Software (BMW/MINI/OBD II Ver1.0*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPLY	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
Mini R50/52/53	1.4	W10B14A	H14-18	2002-06	MOTOR	●				1,2	●	
	1.4D One D	W17D14	H15-17	2003-05	ELECTRONICS	●				1		
			H17-18	2005-06	TRANSMISSION CONTROL	●				1		
	1.6 Cooper	W10B16BA	H13-21	2001-09	ABS	●				1		
	1.6 Cooper S	W11B16AA	H14-16	2002-04	ASC							
			H16-21	2004-09	DSC							
1.6 One	W10B16AA	H13-21	2001-09	AIRBAG	●							
				METER PANEL	●				1,2			
Mini R56	1.4	N12 B14AB	H19-21	2007-09	MOTOR	●				1,2	●	
	1.6 Cooper	N12 B16A	H18-21	2006-09	ELECTRONICS	●				1		
					TRANSMISSION CONTROL	●				1		
	1.6 Cooper S	N14 B16A	H18-21	2006-09	ABS	●				1		
	1.6D Cooper D	W16 D16 (9HZ)	H19-21	2007-09	ASC							
					DSC							
				AIRBAG	●							
				METER PANEL	●				1,2			
Mini Clubman R55	1.6 Cooper	N12 B16A	H19-21	2007-09	MOTOR	●				1,2	●	
					ELECTRONICS	●				1		
	1.6 Cooper S	N14 B16A	H19-21	2007-09	TRANSMISSION CONTROL	●				1		
					ABS	●				1		
	1.6D Cooper D	W16 D16 (9HZ)	H19-21	2007-09	ASC							
					DSC							
				AIRBAG	●							
				METER PANEL	●				1,2			

13. MINI Diagnostic Software (BMW/MINI/OBD II Ver1.0*) List of Work Support Functions

SYSTEM	No.	FUNCTION	WORK CONTENTS
MOTOR	1	CHASSIS NUMBER DISPLAY	Displays the chassis number. Perform during the following work. • During maintenance.
ELECTRONICS	2	CBS RESET 1	Resets the CBS. Perform during the following work. • After engine oil replacement.
TRANSMISSION CONTROL	1	CHASSIS NUMBER DISPLAY	Displays the chassis number. Perform during the following work. • During maintenance.
ABS ASC DSC	1	CBS RESET 1	Resets the CBS. Perform during the following work. • After brake pad replacement.
METER PANEL	1	CBS RESET 2	Resets the CBS. Perform during the following work. • After brake fluid replacement/vehicle check/inspection/exhaust gas inspection.
	2	SERVICE RESET	Resets oil service/inspection/time interval. Perform during the following work. • After oil change, after inspection.

14. VOLVO Diagnostic Software (VW/AUDI/VOLVO Ver1.0*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPLY	ACTIVE TEST	WORK SUPPORT	COUPLER			
			JP CALENDAR	WESTRN CAL							COM	EXCL		
C Series (Coupe) C30	1.6	B4164S3	H22 ~ H23	2010 ~ 2011	ENGINE	●					●			
	1.6D Turbo	D4164T												
	1.8	B4184S8 B4184S11												
	2.0	B4204S3 B4204S4			TRANSMISSION	●								
	2.0D Turbo	D4204T			ABS/BCM	●								
	2.4	B5244S4												
	2.4D Turbo	D5244T8 D5244T9 D5244T13												
	2.5 Turbo	B5254T7												
C Series (Coupe) C70 Convertible	2.4	B5244S4 B5244S5	H18 ~ H19	2006 ~ 2007	ENGINE	●						●		
	2.4D Turbo	D5244T8 D5244T9			TRANSMISSION	●								
	2.5 Turbo	B5254T3			ABS/BCM	●								
S Series (Sedan) S40	1.6	B4164S3	H16 ~ H23	2004 ~ 2011	ENGINE	●					●			
	1.6D Turbo	D4164T												
	1.8	B4184S8 B4184S11												
	2.0	B4204S3 B4204S4			TRANSMISSION	●				1,2				
	2.0D Turbo	D4204T D4204T2			ABS/BCM	●					1,2,3,4			
	2.4	B5244S4 B5244S5												
	2.4D Turbo	D5244T8D5244T13 D5244T9												
	2.5 Turbo	B5254T3 B5254T7												
S Series (Sedan) S60	2.0 Turbo	B5204T5	H13 ~ H21	2001 ~ 2009	ENGINE	●					●			
	2.3 Turbo	B5234T3B5234T7												
	2.4	B5244S B5244S2 B5244SG B5244SG2			TRANSMISSION	●				1,2				
	2.4 Turbo	B5244T3 B5244T4 B5244T5 B5244T6 B5244T7 B5244T8 B5244T9 B5244T10 B5244T11 B5244T12 B5244T13 B5244T14 B5244T15												
ABS/BCM	●					1,2,3,4,5								
S Series (Sedan) S80	2.0 Turbo	B5204T3 B5204T4 B5204T5	H11 ~ H18	1999 ~ 2006	ENGINE	●					●			
	2.3 Turbo	B5234T7												
	2.4	B5244S B5244S2 B5244SG B5244SG2			TRANSMISSION	●				1,2				
	2.4 Turbo	B5244T3												

14. VOLVO Diagnostic Software (VW/AUDI/VOLVO Ver1.0*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPLY	ACTIVE TEST	WORK SUPPORT	COUPLER			
			JP CALENDAR	WESTRN CAL							COM	EXCL		
		B5244T4												
	2.4D D5	D5244T D5244T2			ABS/BCM	●				1,2,3,4				
	2.5 Turbo	B5254T2												
	2.5D TDI	D5252T												
	2.8 T6	B6284T												
	2.9	B6294S B6294S2 B6304S3												
	2.9 T6	B6294T												
	OTHERS													
V Series (Wagon) V40	1.6	B4164S3	H16 ~ H23	2004 ~ 2011	ENGINE	●						●		
	1.6D Turbo	D4164T												
	1.8	B4184S8 B4184S11												
	2.0	B4204S3 B4204S4					TRANSMISSION	●				1,2		
	2.0D Turbo	D4204T D4204T2												
	2.4	B5244S4 B5244S5												
	2.4D Turbo	D5244T8 D5244T9 D5244T13					ABS/BCM	●				1,2,3,4		
	2.5 Turbo	B5254T3 B5254T7												
V Series (Wagon) V50	1.6	B4164S3	H16~H22	2004~2010	ENGINE	●						●		
	1.6D Turbo	D4164T												
	1.8	B4184S8 B4184S11												
	2.0	B4204S3 B4204S4					TRANSMISSION	●				1,2		
	2.0D Turbo	D4204T D4204T2												
	2.4	B5244S4 B5244S5												
	2.4D Turbo	D5244T8 D5244T9 D5244T13					ABS/BCM	●				1,2,3,4		
	2.5 Turbo	B5254T3 B5254T7												
V Series (Wagon) V70	2.0 Turbo	B5204T5	H12 ~ H20	2000 ~ 2008	ENGINE	●						●		
	2.3 Turbo	B5234T3												
	2.3 Turbo + 4x4	B5234T7												
	2.4	B5244S B5244S2 B5244SG B5244SG2												
	2.4 Turbo	B5244T4 B5244T5					TRANSMISSION	●				1,2		
	2.4 Turbo + 4x4	B5244T3												
	2.4D	D5244T5												
	2.4D + 4x4	D5244T7												
	2.4D D5	D5244T2 D5244T3					ABS/BCM	●				1,2,3,4,5		
	2.4D D5+ 4x4	D5244T D5244T4												
	2.5 R	B5254T4												
	2.5 Turbo + 4x4	B5254T2												
	2.5D TDI	D5252T												
	OTHERS													
V Series	2.3 Turbo	B5234T7	H13	2001	ENGINE	●						●		

14. VOLVO Diagnostic Software (VW/AUDI/VOLVO Ver1.0*) List of Specific Vehicle Systems

VEHICLE TYPE	MODEL	ENG MODEL	MODEL YEAR		SYSTEM	DTC	FREEZE	DATA DSPLY	ACTIVE TEST	WORK SUPPORT	COUPLER	
			JP CALENDAR	WESTRN CAL							COM	EXCL
(Wagon) V70XC Cross Country	+ 4x4		~	~								
	2.4 Turbo	B5244T4	H19	2007								
	2.4 Turbo+ 4x4	B5244T3			TRANSMISSION	●				1,2		
	2.4D D5+ 4x4	D5244TD5244T4			ABS/BCM	●				1,2,3,4,5		
	2.5 Turbo + 4x4	B5254T2										
	OTHERS											
XC Series (Cross Over) XC70	2.3 Turbo	B5234T7	H13~H19	2001~2007	ENGINE	●						●
	2.4 Turbo	B5244T3 B5244T4			TRANSMISSION	●				1,2		
	2.4D D5	D5244T D5244T4			ABS/BCM	●				1,2,3,4,5		
	2.5 Turbo	B5254T2										
		OTHERS										
XC Series (Cross Over) XC90 (SUV)	2.4D	D5244T5	H15~H22	2003~2010	ENGINE	●						●
	2.4D D5	D5244T D5244T4			TRANSMISSION	●				1,2		
	2.5 Turbo	B5254T2			ABS/BCM	●				1,2,3,4,5,6		
	2.9 T6	B6294T										
		OTHERS										

14. VOLVO Diagnostic Software (VW/AUDI/VOLVO Ver1.0*) List of Work Support Functions

SYSTEM	No.	FUNCTION	WORK CONTENTS
TRANSMISSION	1	ADAPTIVE DATA CLEAR	Clears the adaptive data. Perform during the following work. •During maintenance.
	2	OIL CHANGE COUNTER RESET	Resets the oil change counter. Perform during the following work. •After oil change.
ABS/BCM	1	STEERING ANGLE ADJUSTMENT	Adjusts the steering angle. Perform during the following work. •During adjustment of steering angle.
	2	PRESSURE SENSOR 1 & 2	Calibrates the pressure sensors 1 & 2. Perform during the following work. •After pressure sensor replacement.
	3	LATERAL G CALIBRATION	Calibrates the lateral G. Perform during the following work. •After lateral G replacement.
	4	FRONT-REAR G CALIBRATION	Calibrates the front & rear G. Perform during the following work. •After front-rear G sensor replacement.
	5	YAW RATE SENSOR CALIBRATION	Calibrates the yaw rate sensor. Perform during the following work. •After yaw rate sensor replacement.
	6	ROLL RATE SENSOR CALIBRATION	Calibrates the roll rate sensor. Perform during the following work. •After roll rate sensor replacement.

WANTED: DEALERS/DISTRIBUTORS

A diagnostic tester is an essential tool for car maintenance. It would be difficult to perform repairs and maintenance if the trouble code and data are not checked. After the replacement of car parts, it requires registration, initialization and learning of ID codes. If this procedures are not done the check lamp will light and it will not work properly.

Our company's diagnostic tester (DT-3300) supports all Japanese cars and European cars. In particular, diagnostic features of Japanese cars are in accordance with the functions of a genuine tester of the vehicle manufacturer, thus a very good device. Our DT-3300 is now active and is being used in Southeast Asian countries, Australia, New Zealand and South American countries.

Japan Venture is looking/recruiting for dealers or distributors in each of these countries. Please contact us through email or by telephone.

Thank you very much.

JAPAN VENTURE INCORPORATED

Overseas Business Division

Head Office: 1532-9 Kasahara-Cho, Mito City
Ibaraki Prefecture, Japan 310-0852

Tel. No. : +81-29-305-8667

Fax No. : +81-29-305-8668

E-mail : info@japan-venture.com

Website : <http://www.japan-venture.com>